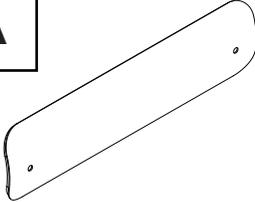
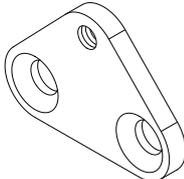
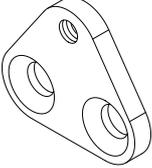





INSTALLATION INSTRUCTIONS (K314) FORD RANGER OE BAR TO *SPORTLID*

A		B		C		D	
Brake Light Cover	X1	Rear Foot Plate	X2	Front Foot Plate	X2	M8x20mm CS Bolt	X8
E		F		G		H	
M8 Spring Washer	X4	M8x25mm Washer	X4	Self Retaining Nylon Washer	X4	M8x30mm Bolt	X4

-  = EXISTING PART
-  = NEW PART





IMPORTANT to take care and drill correct holes

See fitting instructions for the Ford Ranger SPORTLID fitment until prompted to see these OE Bar fitting instructions (K314)







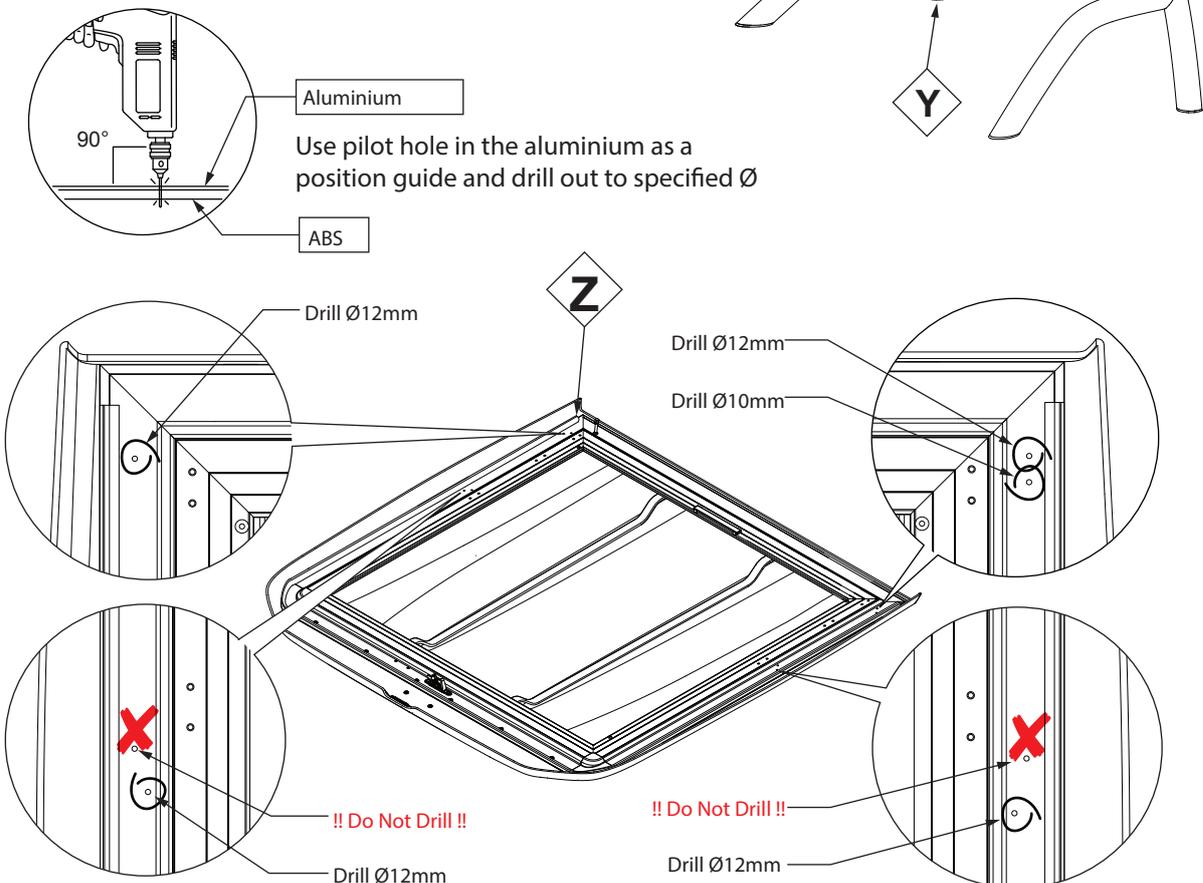


1




Fitting Kit Number	Manufacturer	Model Type	Year	Stockist	Cab Size	Product	Revision	Date	Page
K314	Ford	Ranger	2011	-	DC	Ford OE Bar	4	03-05-17	1 of 4

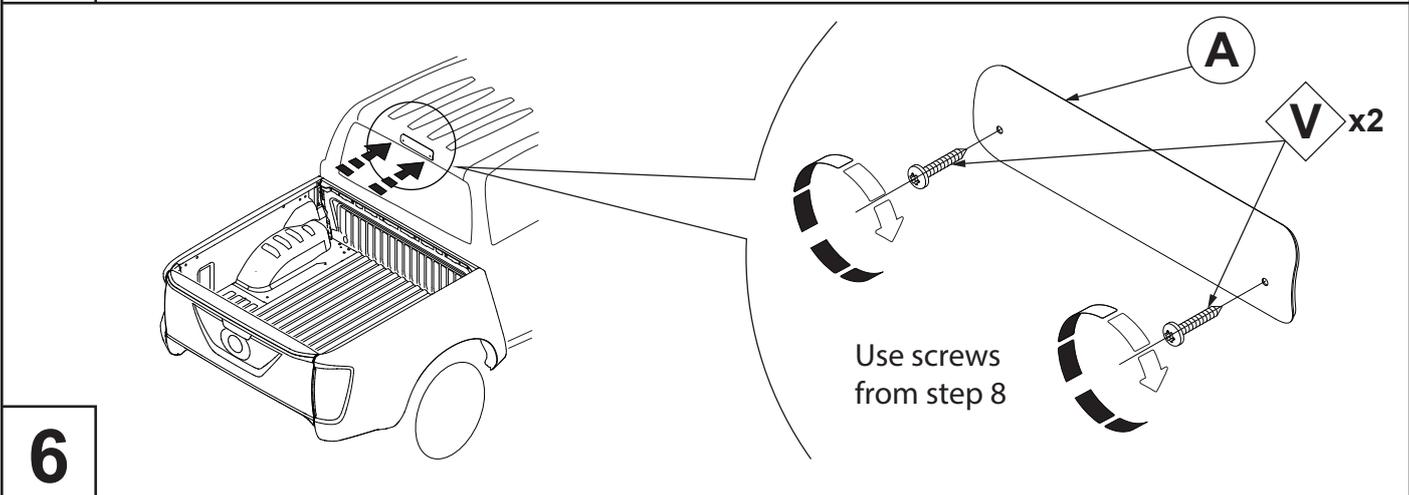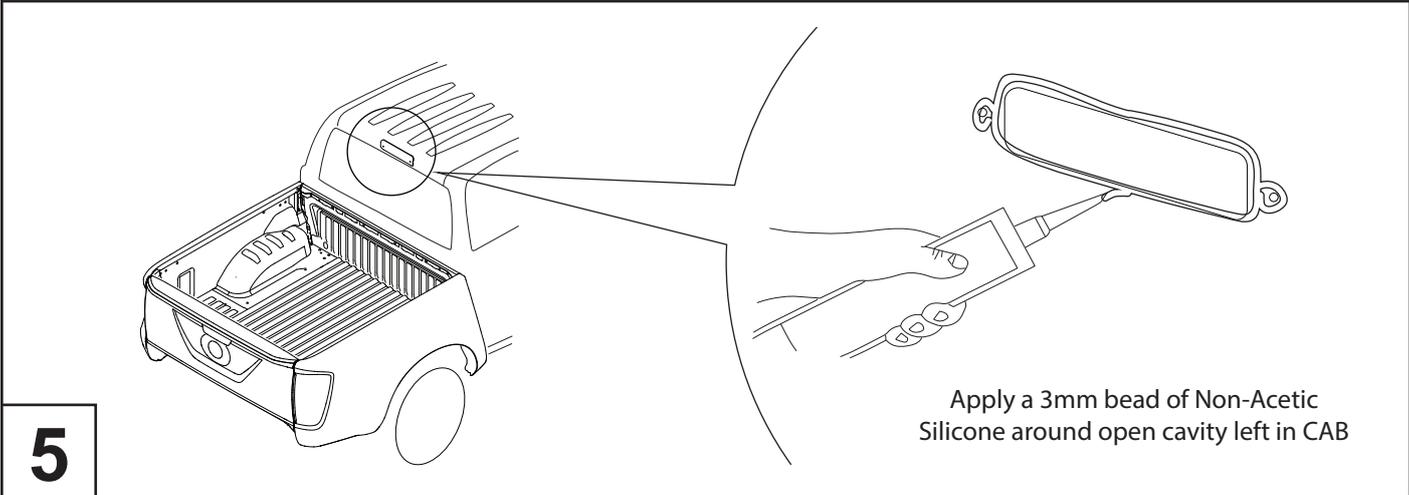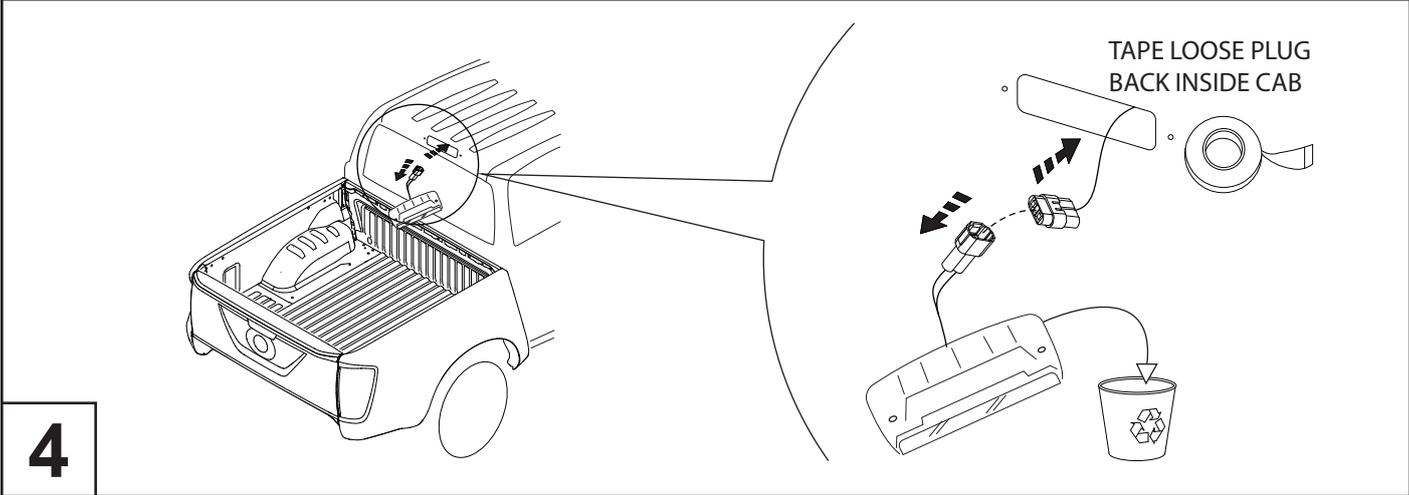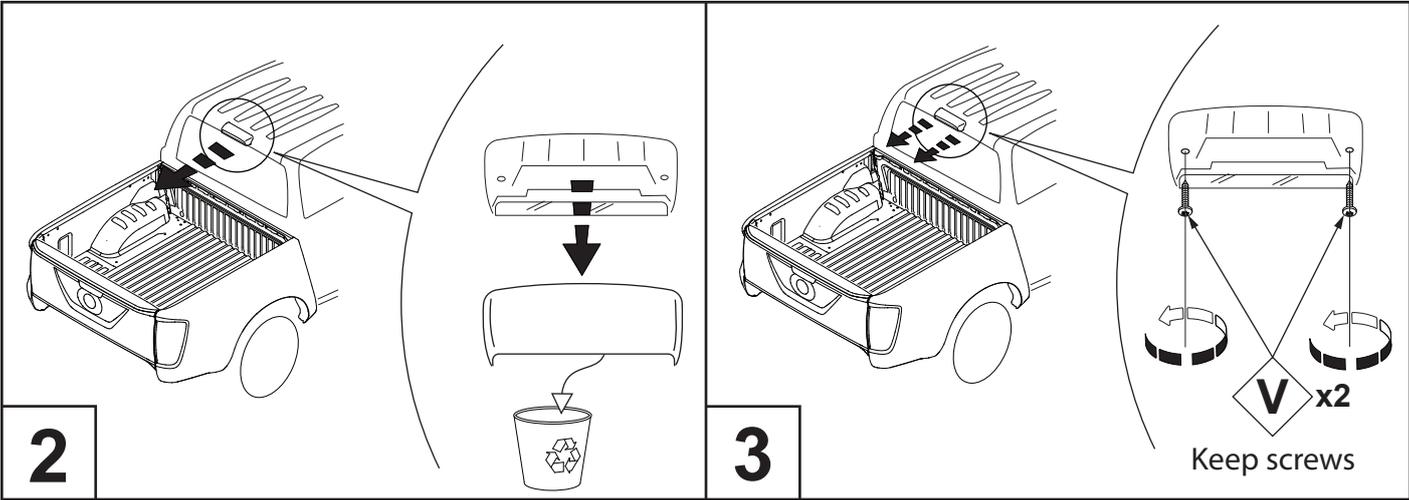

Fitting Kit Number	Manufacturer	Model Type	Year	Stockist	Cab Size	Product	Revision	Date	Page
K314	Ford	Ranger	2011	-	DC	Ford OE Bar	4	03-05-17	2 of 4

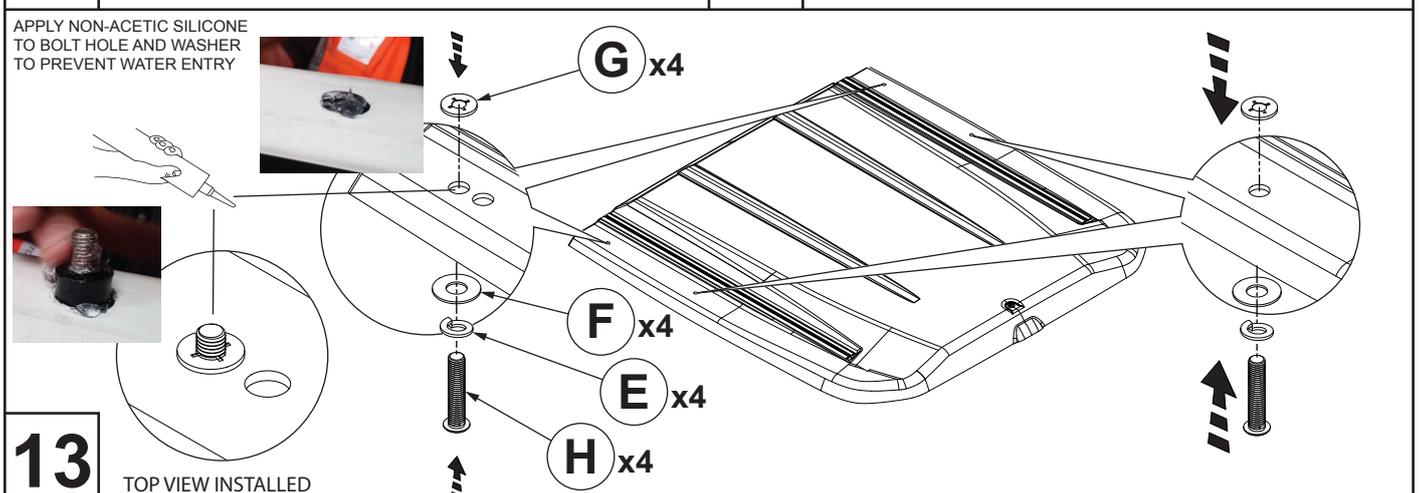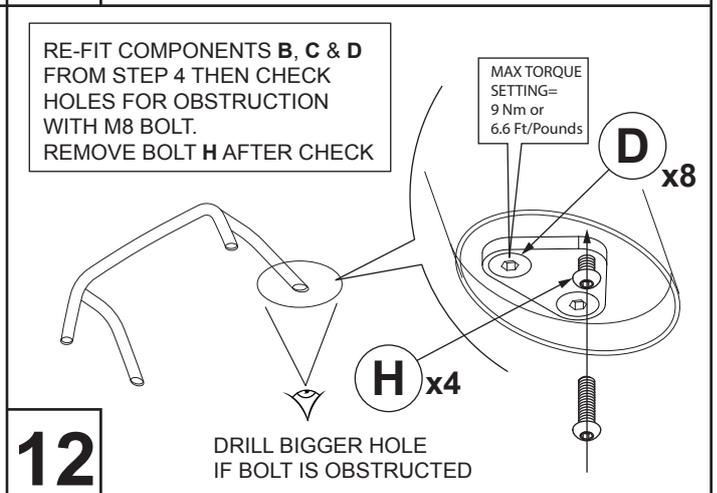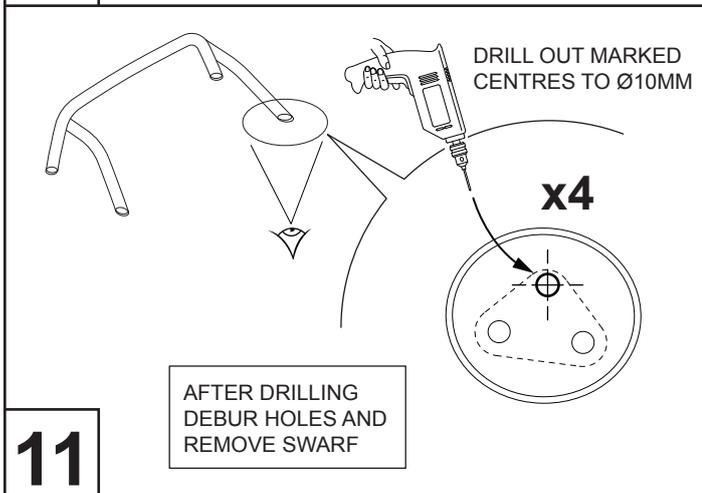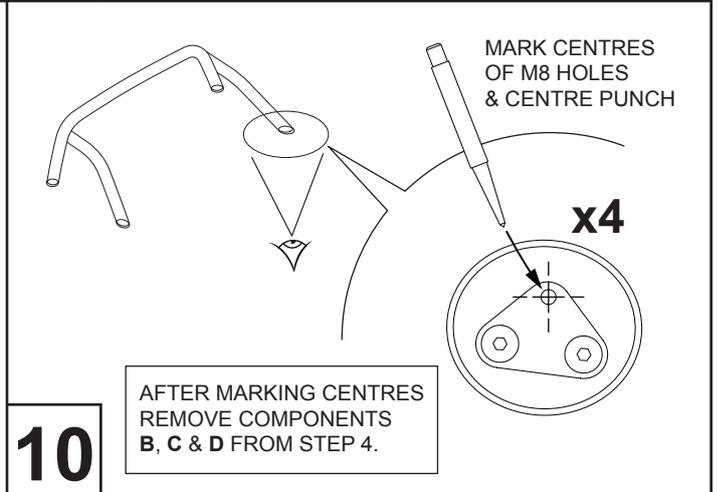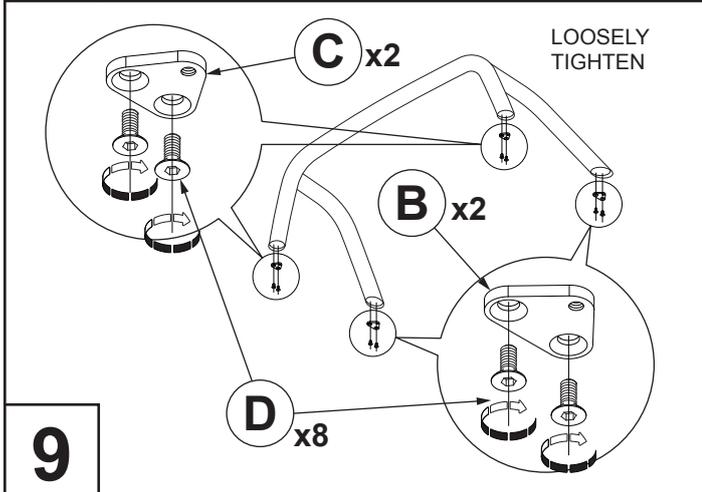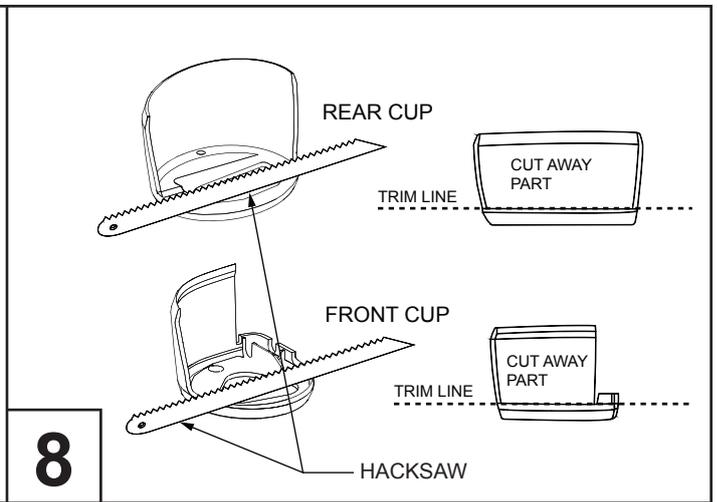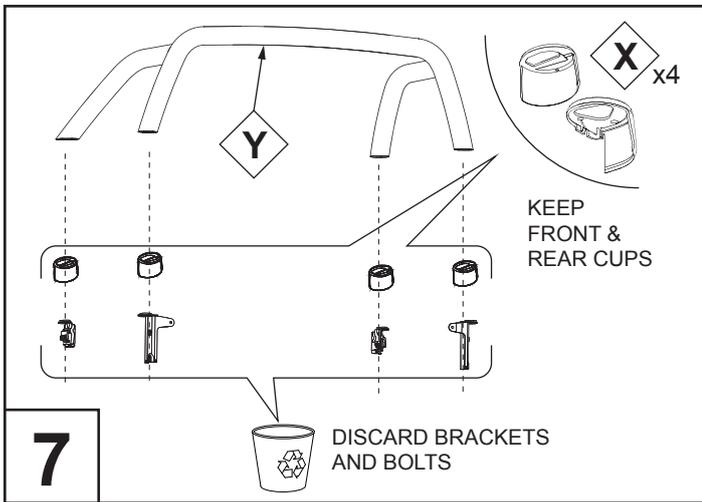

Fitting Kit Number	Manufacturer	Model Type	Year	Stockist	Cab Size	Product	Revision	Date	Page
K314	Ford	Ranger	2011	-	DC	Ford OE Bar	4	03-05-17	3 of 4

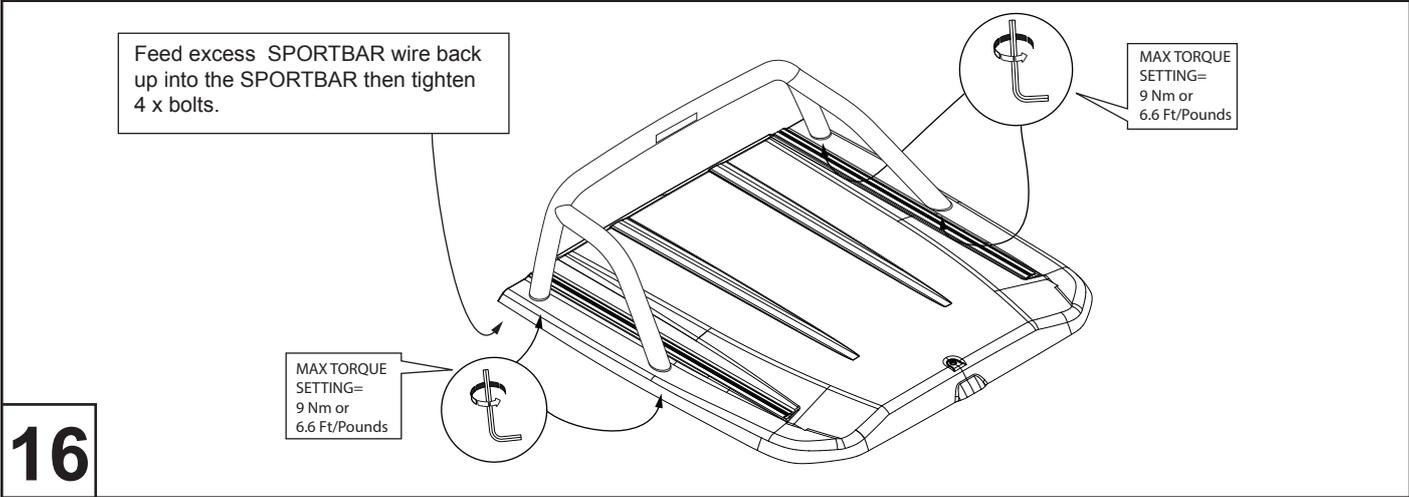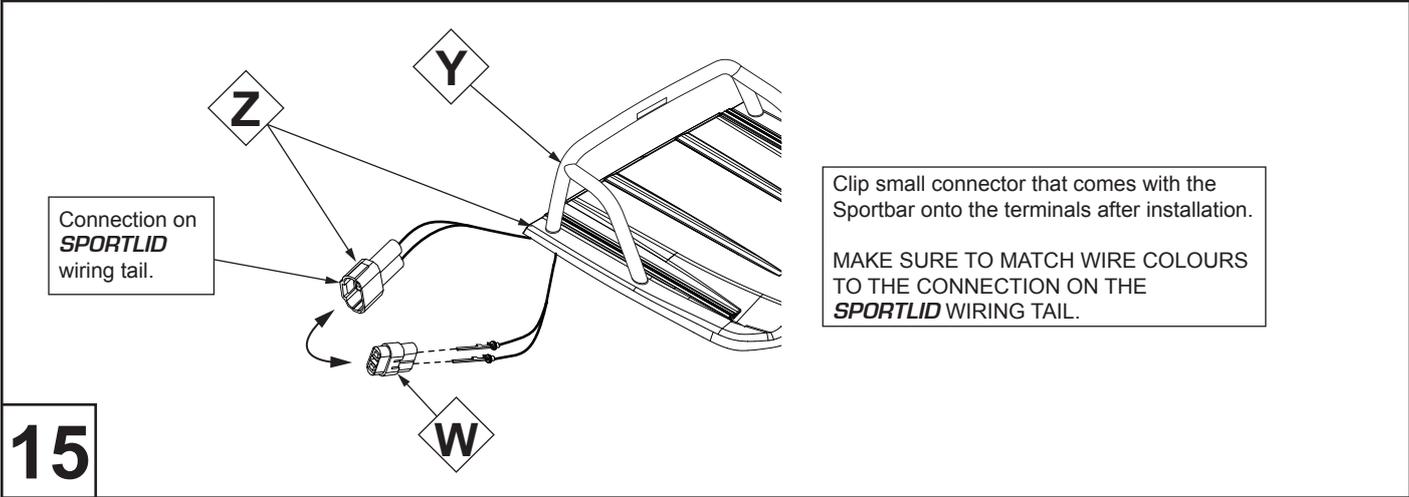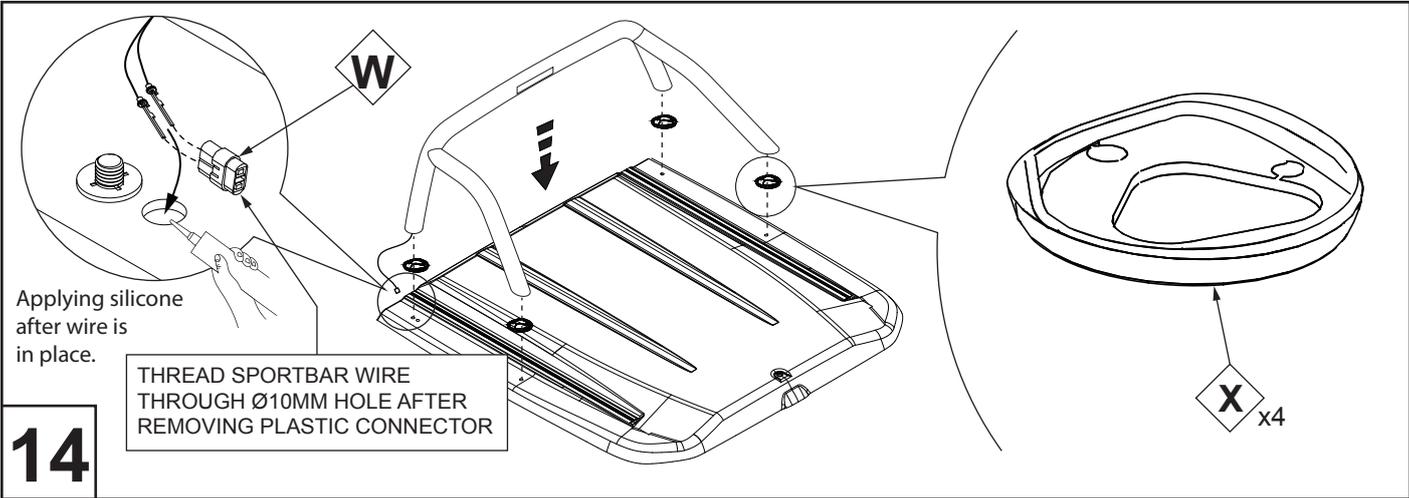

Fitting Kit Number	Manufacturer	Model Type	Year	Stockist	Cab Size	Product	Revision	Date	Page
K314	Ford	Ranger	2011	-	DC	Ford OE Bar	4	03-05-17	4 of 4