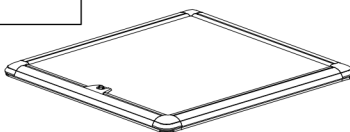
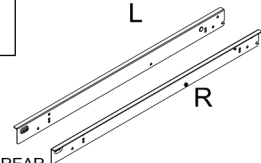
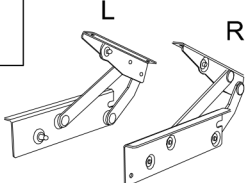

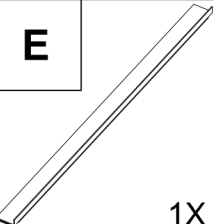














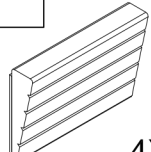






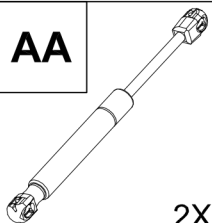


ROAD RANGER®




INSTALLATION INSTRUCTIONS K403

A  1X	B  1X	C  1X	D  2X		
E  1X	F  4X	G  M8x25mm 4X	H  M8 x16 Stainless Steel Washer 6X	I  2X	J  M8 Nylock 4X
K  M8 Stainless Steel Spring Washer 2X	L  2X	M  2X	N  2X	O  2X	P  M6x18 12X
Q  M6x13mm Zinc 12X	R  M6x10mm 8X	S  4X	T  4X	U  M10x24mm 4X	V  M8 x16 Zinc Washer 4X
W  RH 1X	X  LH 1X	Y  M5 Cable Bolt, Washer & Dome Nut 2X	Z  2X	AA  2X	

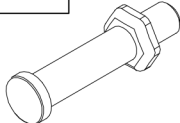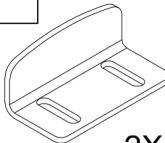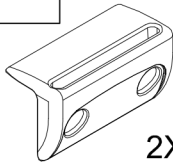Note 1: If at any stage of installation you find your sportlid to be an unacceptable fit please contact the manufacturer before continuing.

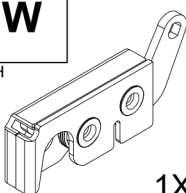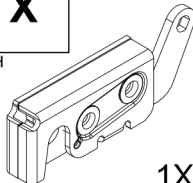Note 2: If required, use Under Rail Bed Liner only. **NOT FOR USE WITH OVER RAIL BED LINER!**

Tools Required:

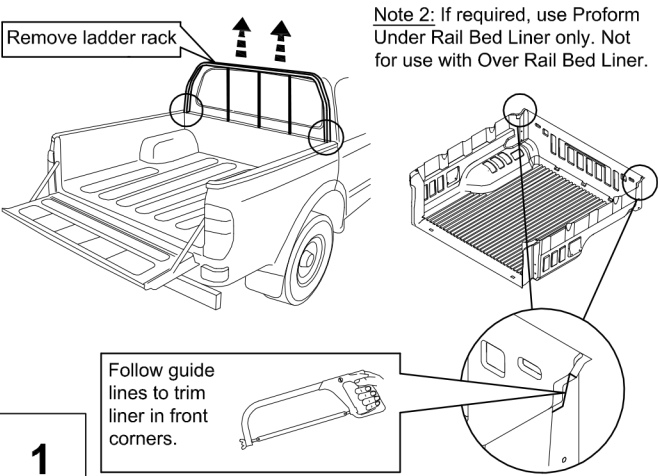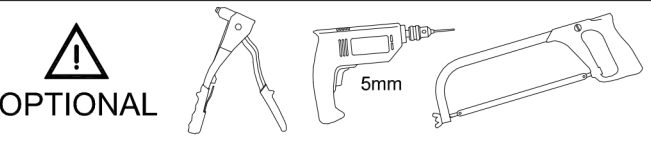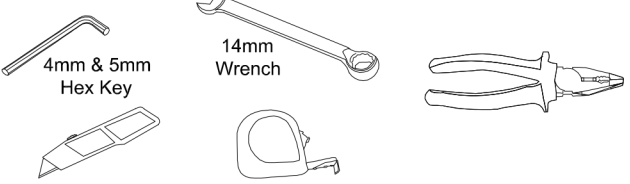

1

2

Vehicle Model	α
Isuzu D-Max Double & Extra Cab 2012 ATFS, ATFR	N/A - Do Not Fit
Volkswagen Amarok Double Cab 2010 2H, 2HS2	1
Ford Ranger T6 Double & Extra Cab 2011 2AB	2
Holden Colorado Double Cab 2012	N/A - Do Not Fit
Mitsubishi L200 Double Cab Long Bed 2009 KA0T	3


3

4

Place front of side mounting brackets back from inside corners of the cargo box - See table for measurement

5




Vehicle Model	β	δ	φ
Isuzu D-Max Double & Extra Cab 2012 ATFS, ATFR	69mm	1	4
Ford Ranger T6 Double & Extra Cab 2011 2AB	72.4mm	4	3
Volkswagen Amarok Double Cab 2010 2H, 2HS2	70.4mm	3	1
Holden Colorado Double Cab 2012	63mm	4	2
Mitsubishi L200 DC Long Bed 2009 KA0T	70.4mm	4	2

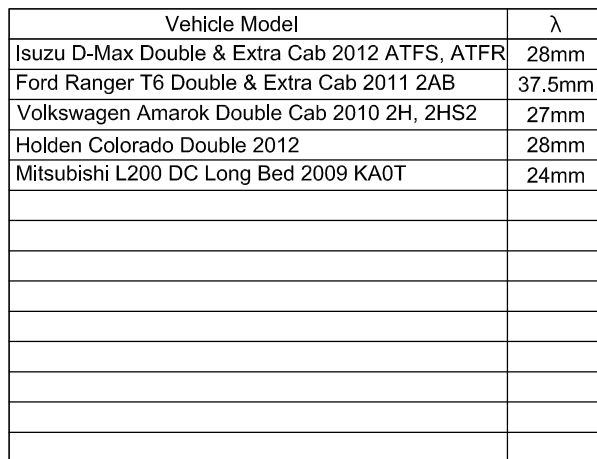


6



DO NOT apply below 15°C.
Apply pressure to part. Adhesive is pressure activated.
Allow 3hrs minimum to cure before installling lid

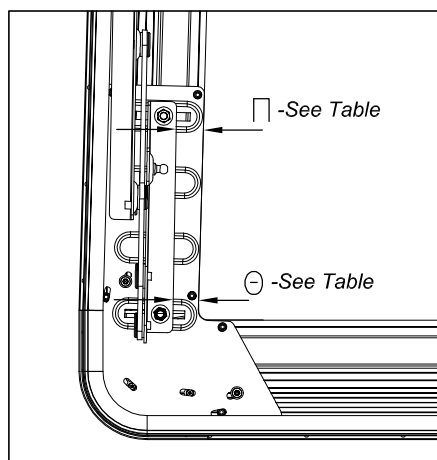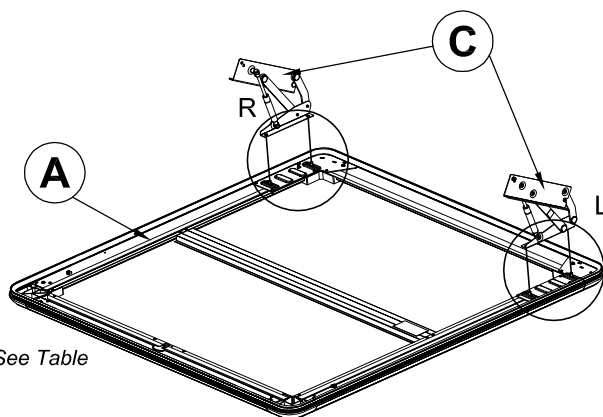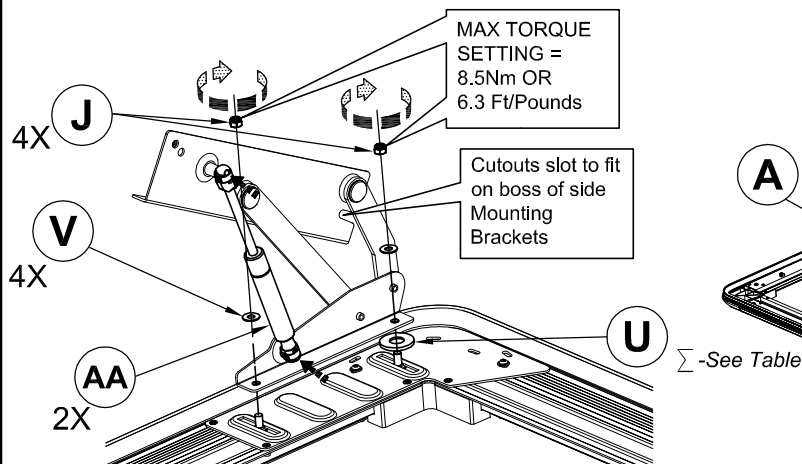
[illegible]

7

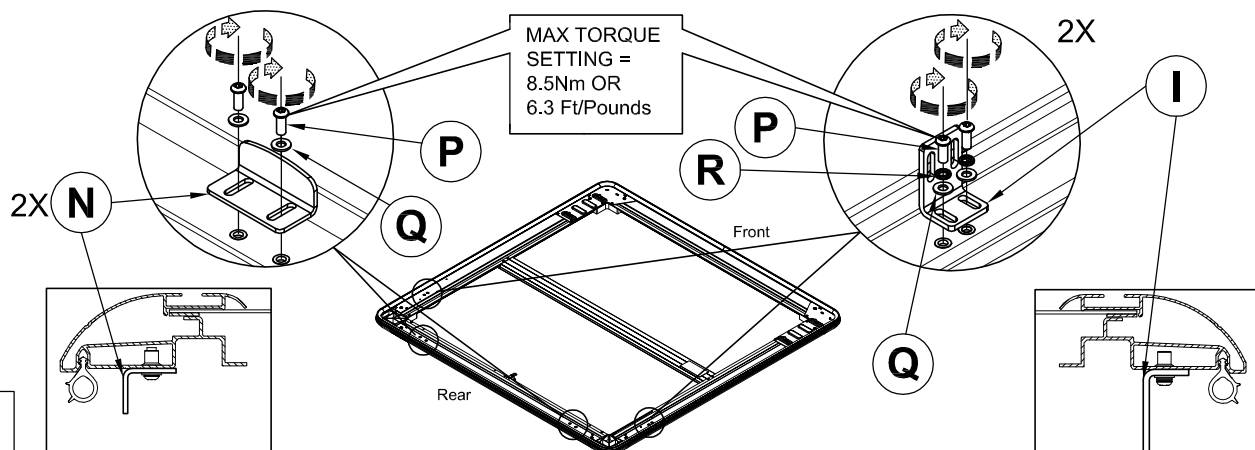


8


Fitting Kit Number	Product	Revision	Date	Page
K403		5	23-10-2013	3 of 6

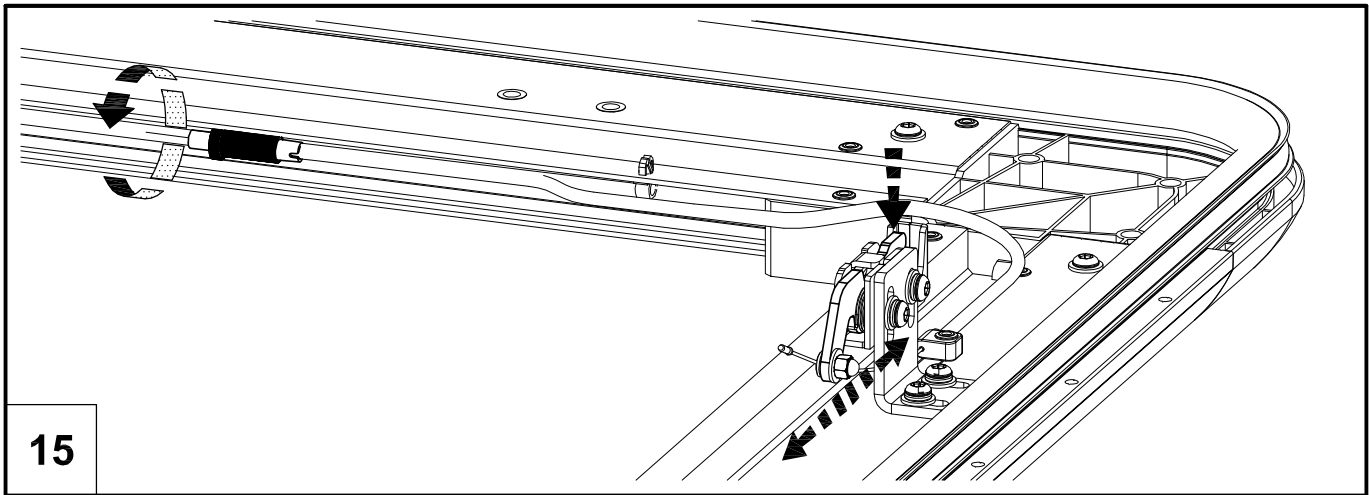


15

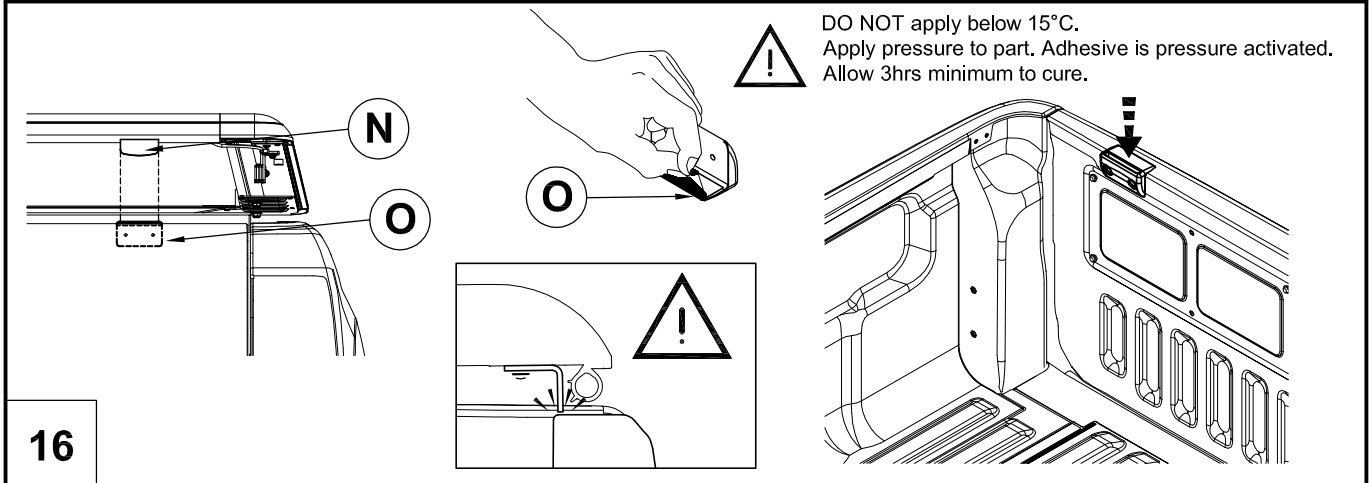


16

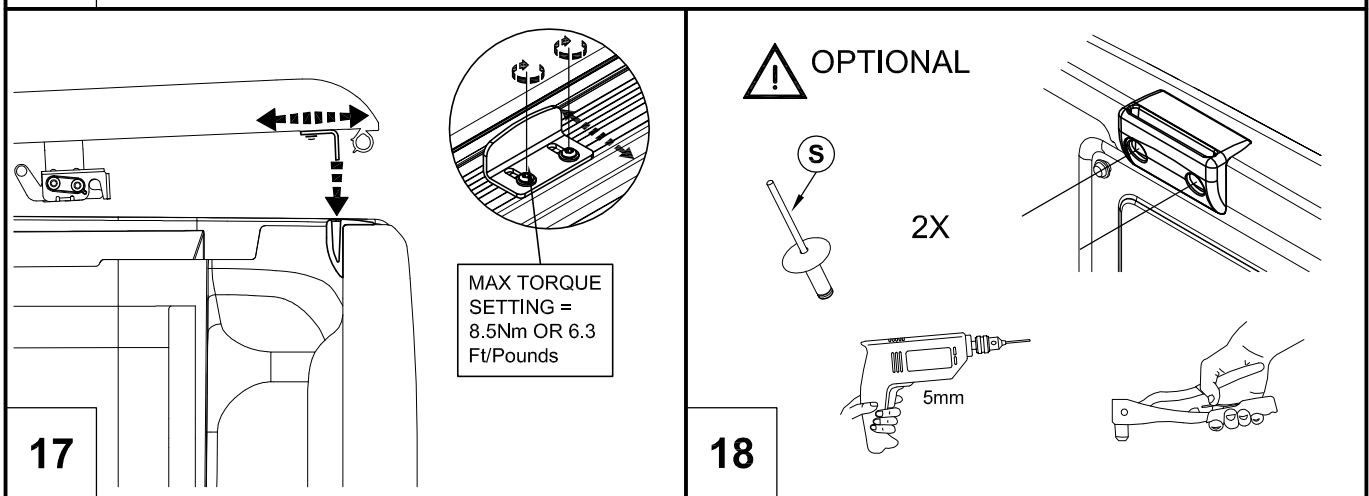

17


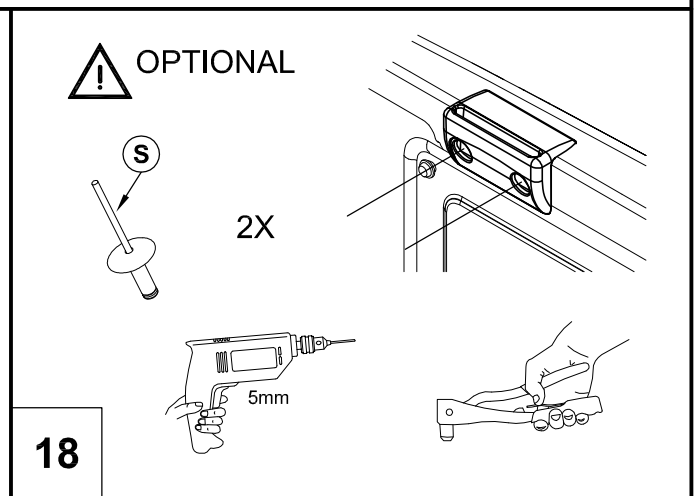


18

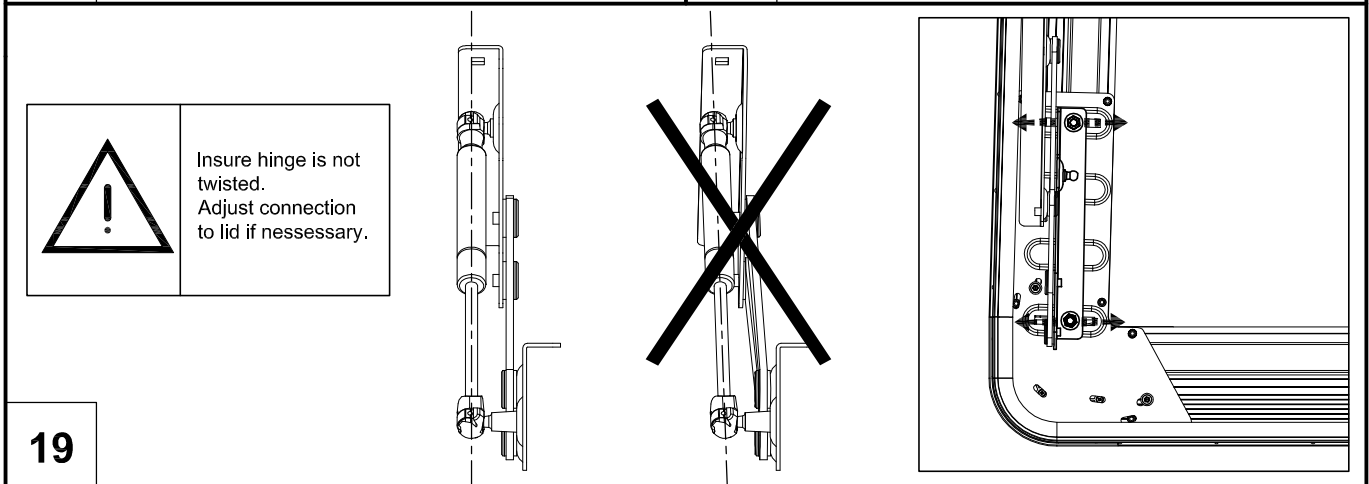

19

Fitting Kit Number	Product	Revision	Date	Page
K403		5	23-10-2013	5 of 6

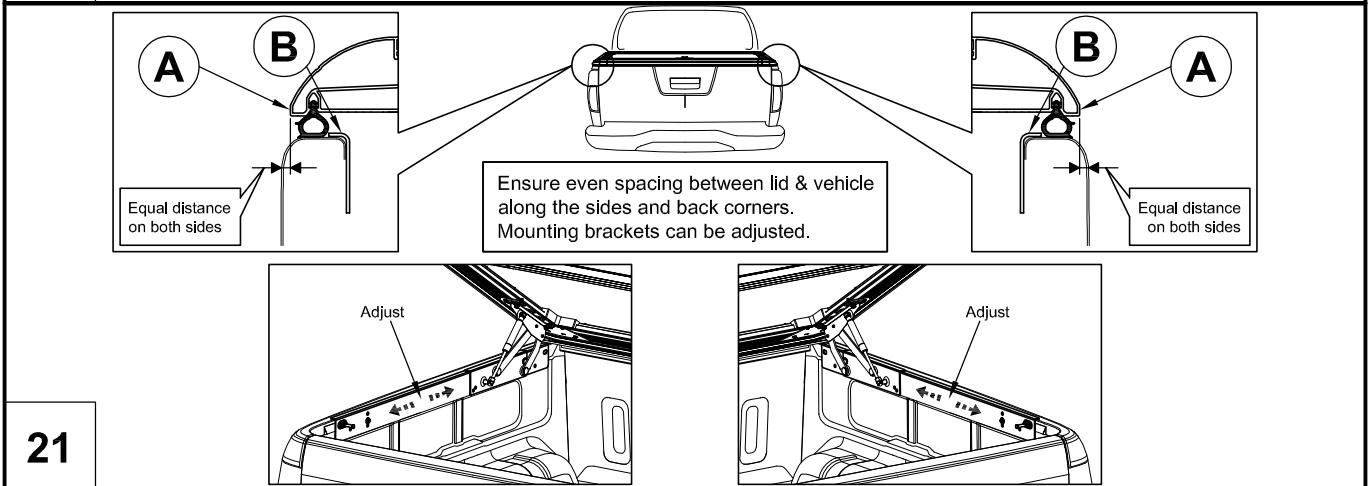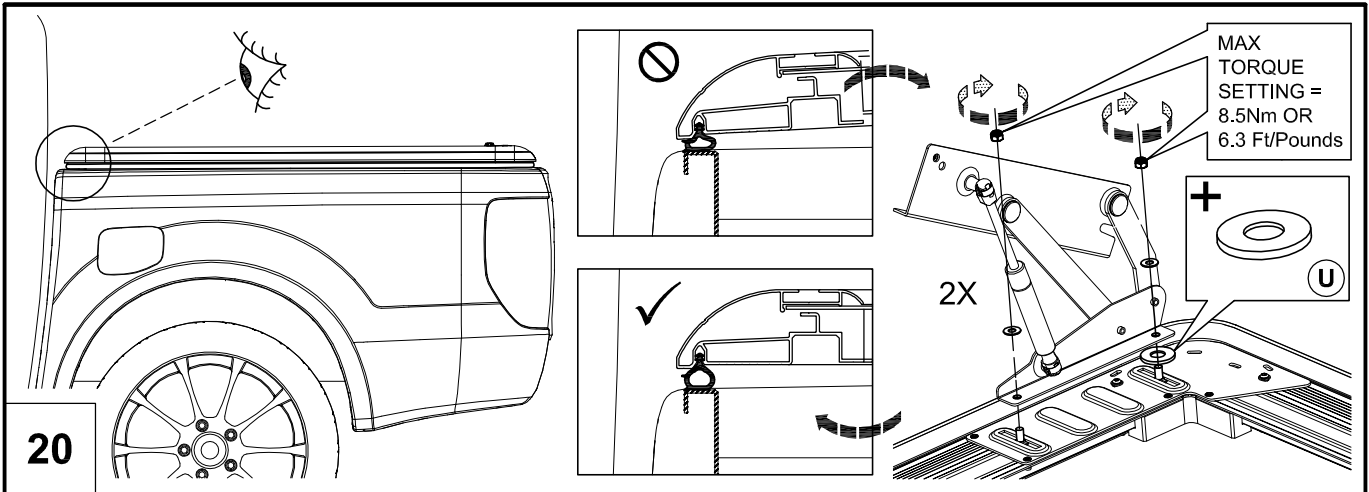

After installation carefully and thoroughly clean all debris from the inside of the cargo box.
Retain these instructions for future reference



CAUTION!

- NEVER allow people or animals under the closed cover
- Do not place unsealed solvents or chemicals under the cover
- Do not stand or place heavy objects on the cover
- Do not open lid when under load.
- Close the cover before operating the vehicle
- Do not allow oil, solvents or chemicals to contact the cover
- Clean only with a mild detergent and water solution

Fitting Kit Number	Product	Revision	Date	Page
K403		5	23-10-2013	6 of 6