


**Schublade 1700 / Montagesatz mit 11E9290**  
**Drawer 1700 / Assembly-kit with 11E9290**  
**Tiroir 1700 / Assemble-kit avec 11E9290**



# **ASSEMBLY INSTRUCTION**

**Montageanleitung • Instructions de montage**

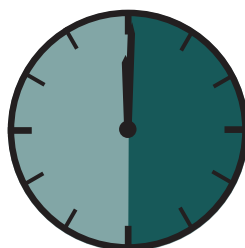

**90 Minuten**

**article-no:**  
006085 black Steel

**Revision 9: 06.02.2019**




# Schublade 1700 / Montagesatz mit 11E9290


## Drawer 1700 / Assembly-kit with 11E9290

### Tiroir 1700 / Assemble-kit avec 11E9290

#### Required tools / Benötigte Werkzeuge / Outillage requis

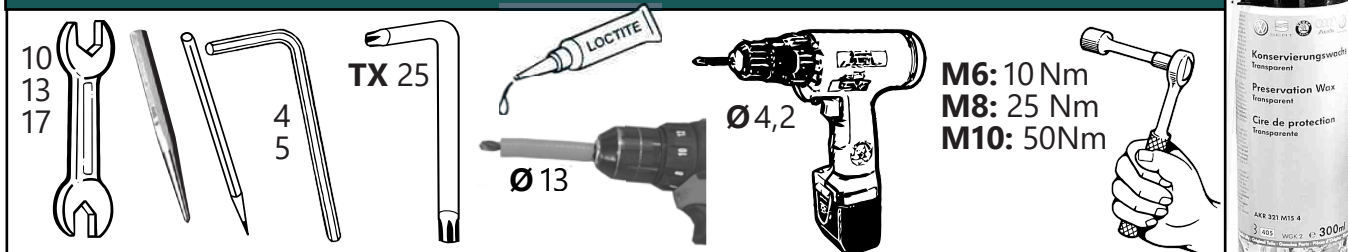

#### Parts list/Teileliste/Lista de accesorios


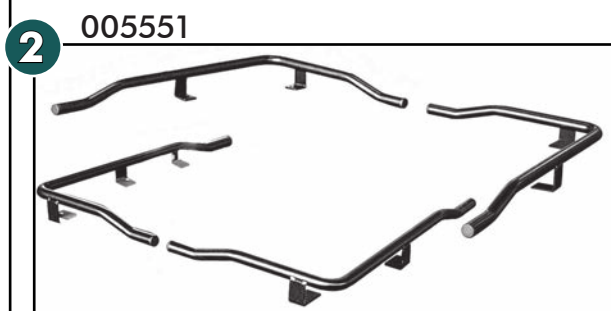


<b>a</b>		ø5,5x25; DIN 7976	<b>2x</b>
<b>b</b>		M6x30; DIN 7991	<b>14x</b>
<b>c</b>		M6x12; ~ISO7380	<b>10x</b>
<b>d</b>		M6x25; ~ISO7380	<b>8x</b>
<b>e</b>		M6x20; DIN 933	<b>2x</b>
<b>f</b>		M8x20; DIN 933	<b>2x</b>
<b>g</b>		M6 weld nut/Anschweißmutter/ soudure écrou	<b>10x</b>
<b>i</b>		ø6,4; DIN 9021	<b>6x</b>
<b>m</b>		M6; DIN 985 Zn	<b>2x</b>
<b>n</b>		M6; DIN 934 Zn	<b>14x</b>

<b>8</b> ø9; 005497	<b>2x</b>	<b>9</b> ø6,6; 005495	<b>14x</b>

#### Assembly-kit / Montagesatz / Assemble-kit

**11E9290**

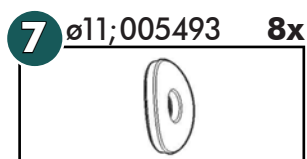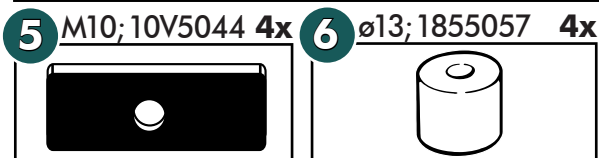


<b>o</b>		M10x60; DIN 933	<b>4x</b>
<b>p</b>		M10; DIN 934	<b>4x</b>

**article-no:**  
006085 black Steel

**Revision 9: 06.02.2019**



**Schublade 1700 / Montagesatz mit 11E9290**  
**Drawer 1700 / Assembly-kit with 11E9290**  
**Tiroir 1700 / Assemble-kit avec 11E9290**

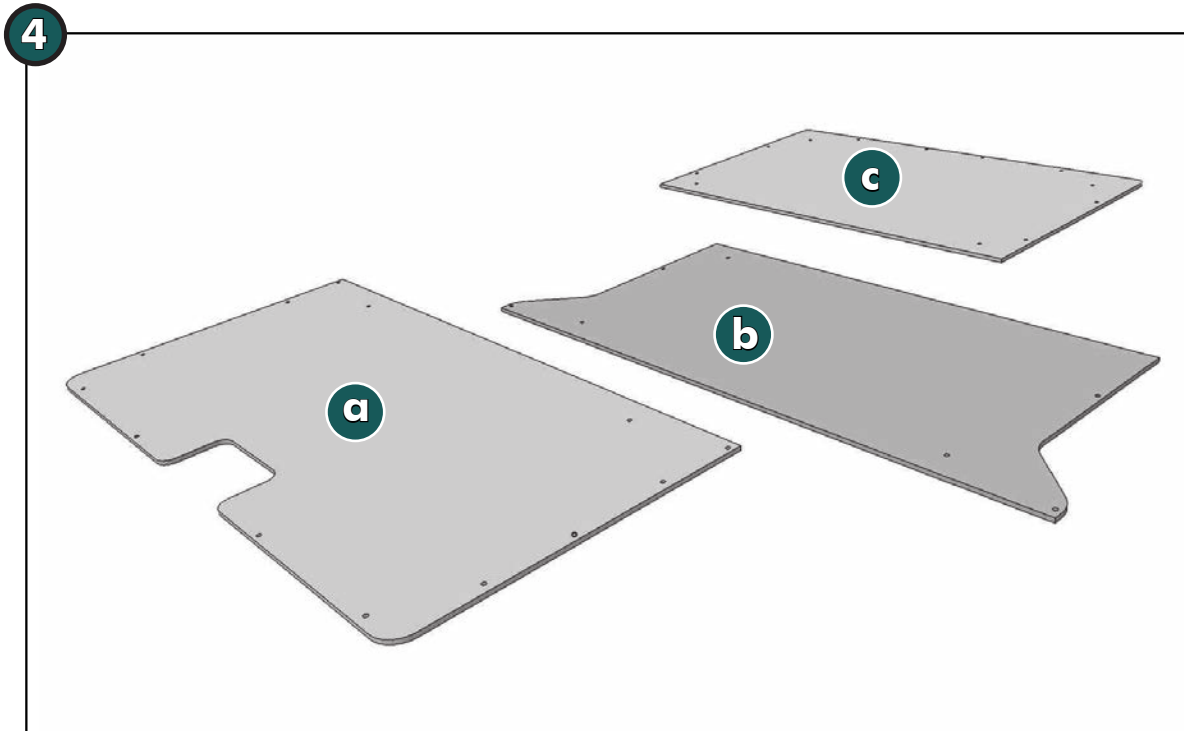









Artikel-Nr. Item-Nr. numéro d'article	KFZ Hersteller auto- motive manufacturer constructeur automo- bile	Bezeichnung designation désignation	Modell model modèle	Holzauflagen timber vehicle part exigences bois
1665690N	Nissan	Navara D40 King Cab NP300 Navara D23 King Cab <b>without bedliner*</b>	ab 2005 ab 2016	005566N
13R5690N	Nissan	NP 300 King Cab	04/2008	005566N
1935690N	Isuzu	D MAX Space Cab	2007	005566N
10V5690N	Mitsubishi	L200 Club Cab	2006	005566N
11K5690N	Madza	BT50 Freestyle Cab (L Cab) RAB Cab)	2006 / 2009	005566N
11K5690N	Ford	Ranger Superkabine (Extrakabine)	2009	005566N
15V5690N 15V5590N	Ford	Ranger Extrakabine (Extra Cab) Ranger Extra Cab (XC)	2012 2016	007770N 007788N
17W5690N	Mitsubishi	L200 Club Cab,(KJ0T)	2016	007783N
17W5690N	Fiat	Fullback Extended Cab	2016	007783N
11E5490N	Toyota	Hilux Xtra Cab	2016	007790N

**\*without bedliner**  
**ohne Laderaumwanne** !  
**sans doublure de caisse** ■

**article-no:**  
006085 black Steel

**Revision 9: 06.02.2019**











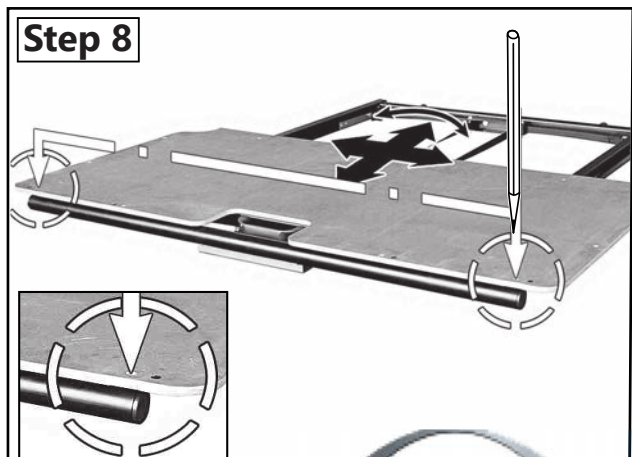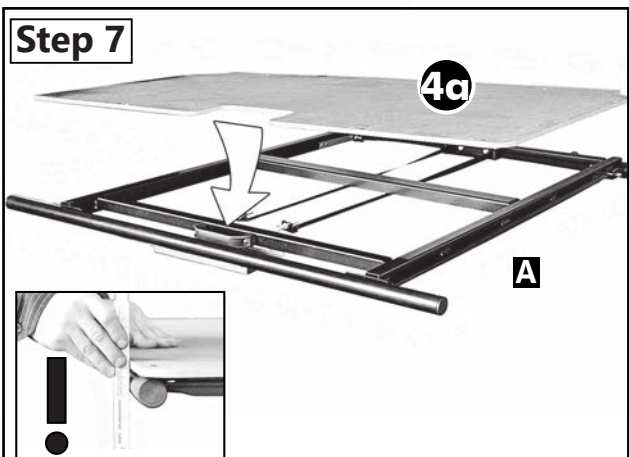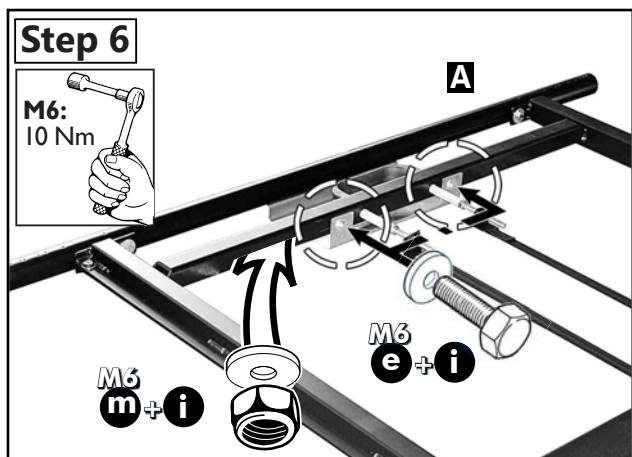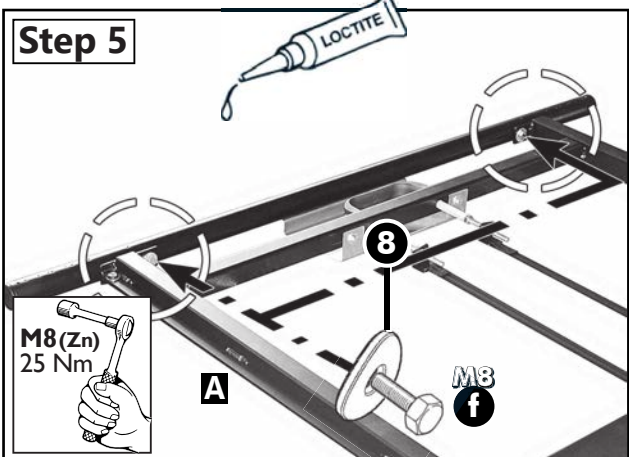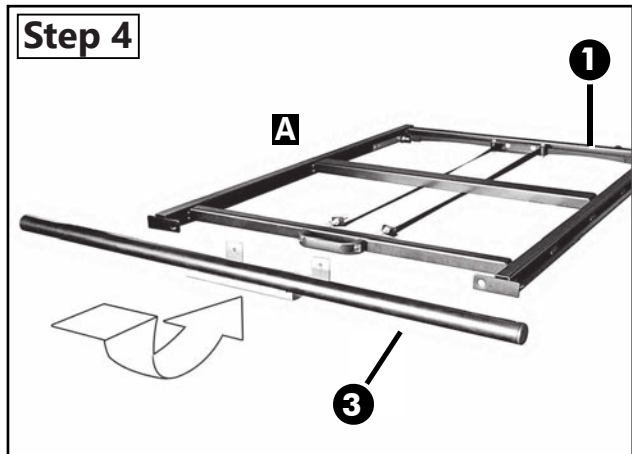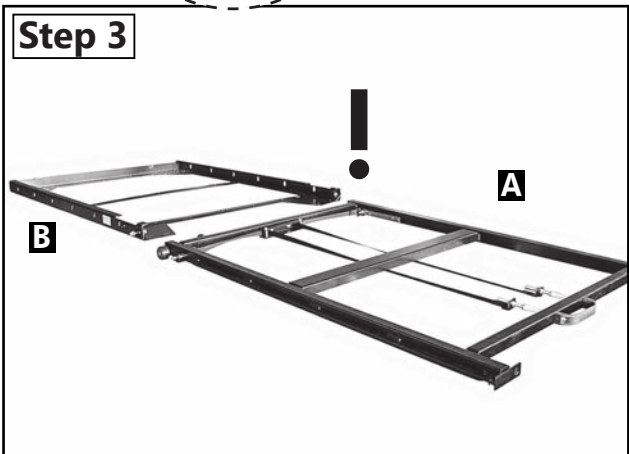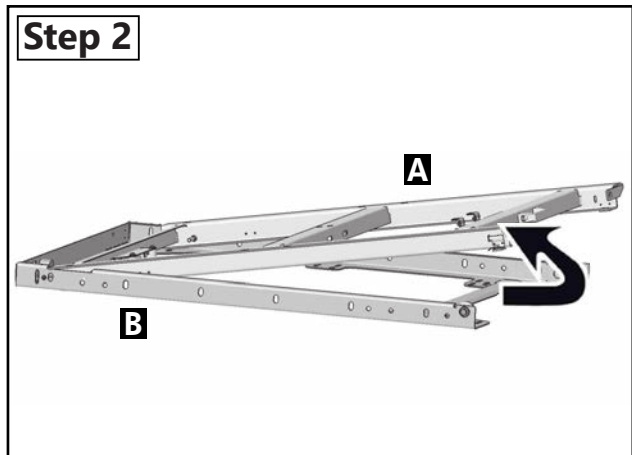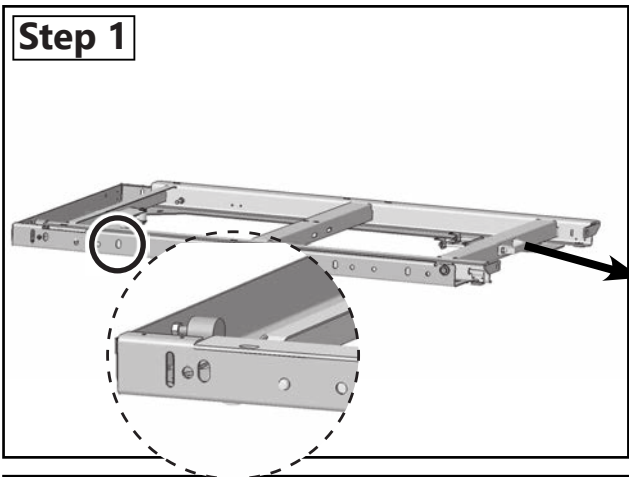

**article-no:**  
006085 black Steel

**Revision 9: 06.02.2019**










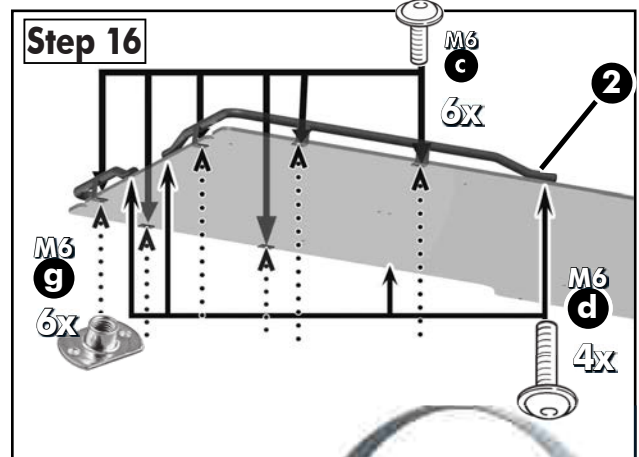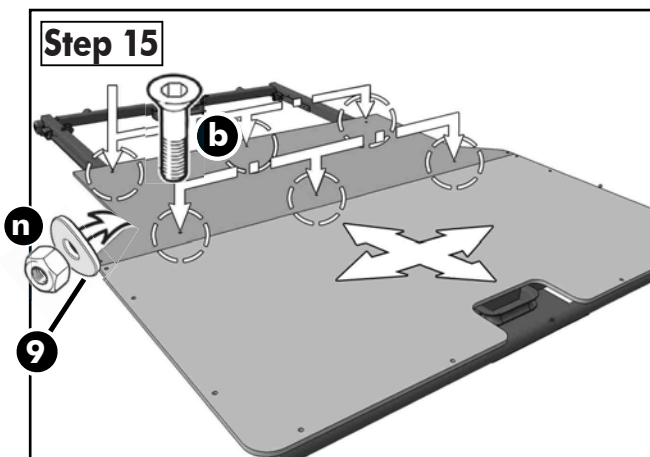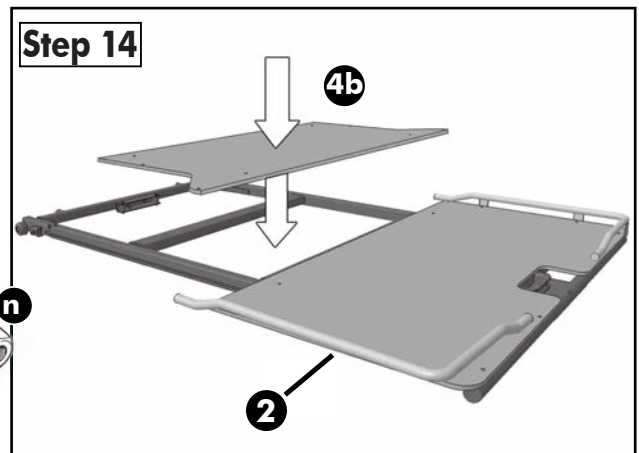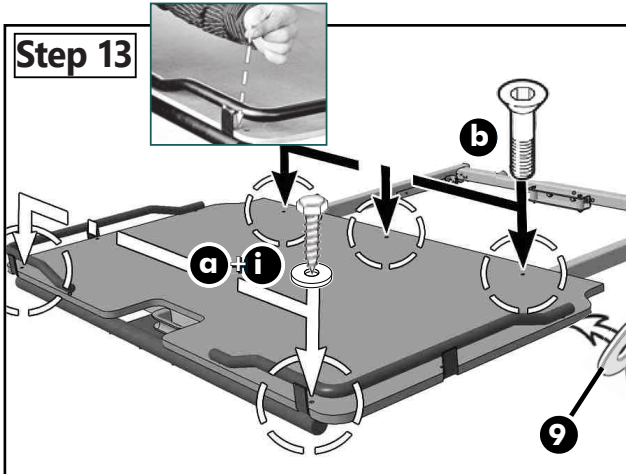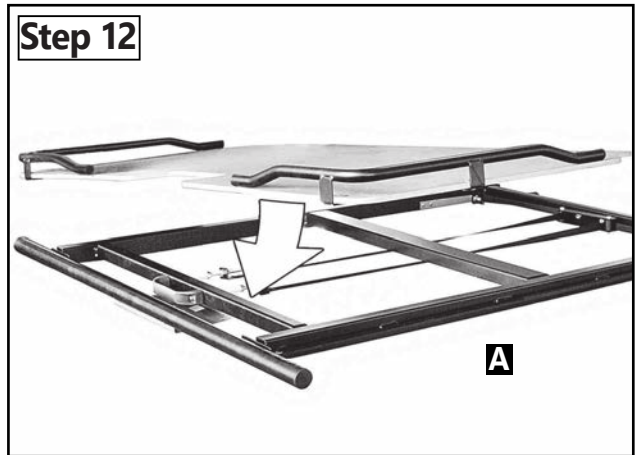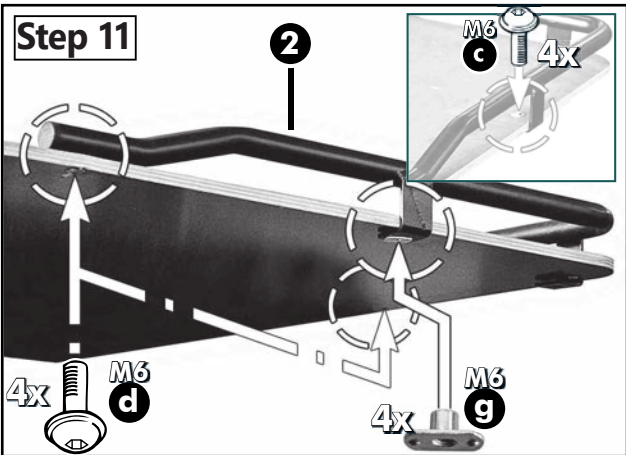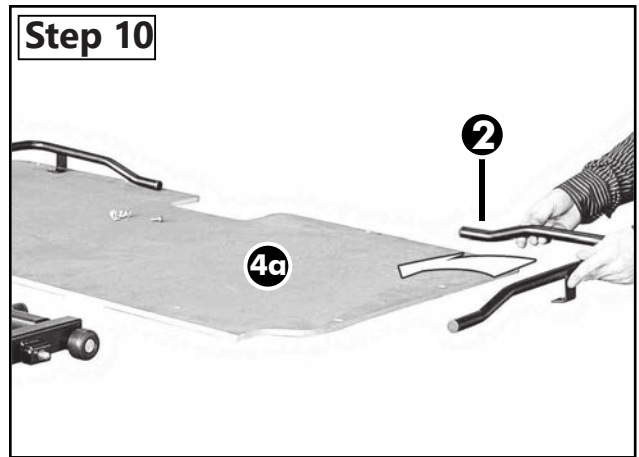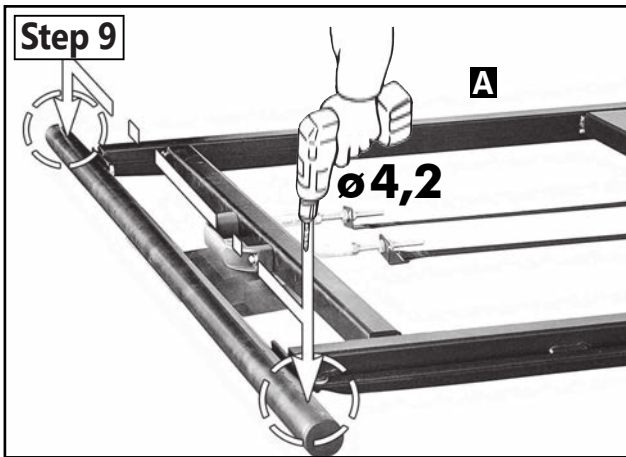

**article-no:**  
006085 black Steel

**Revision 9: 06.02.2019**









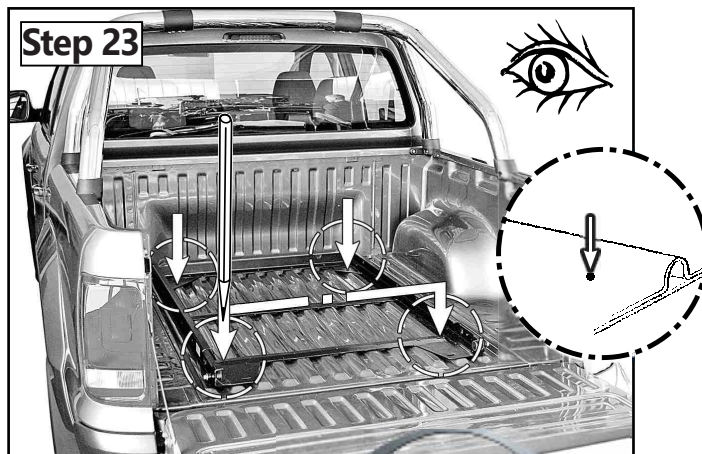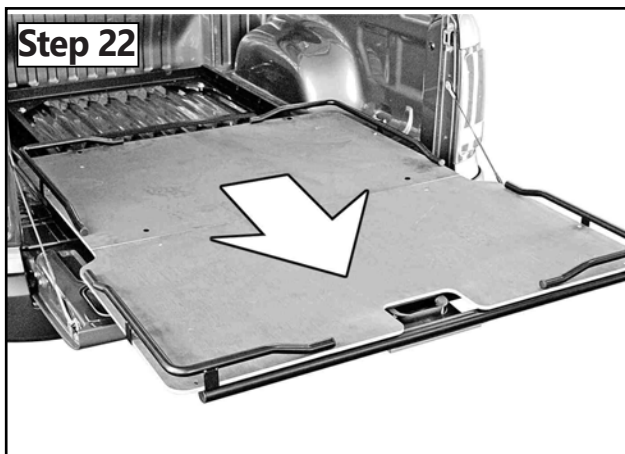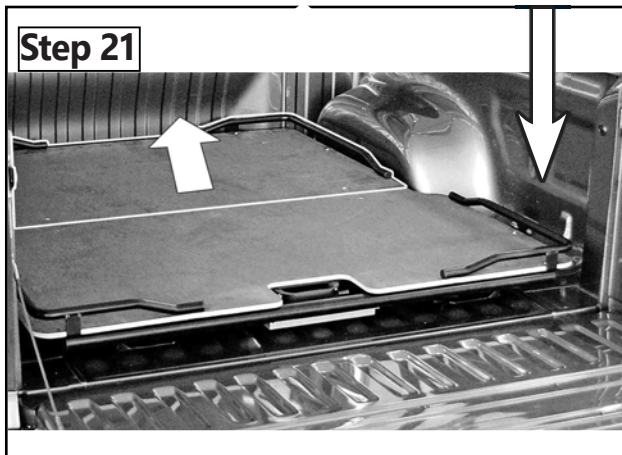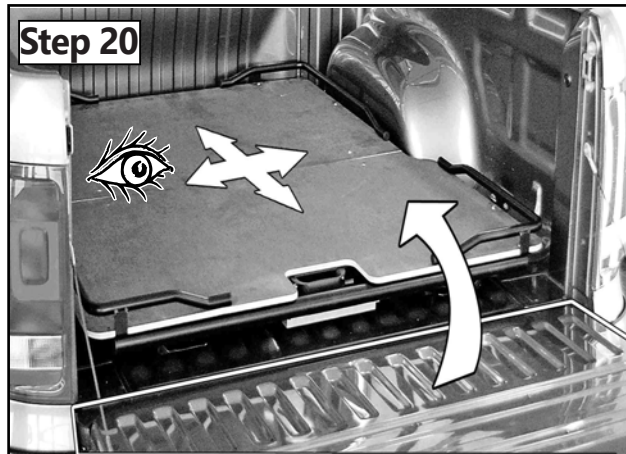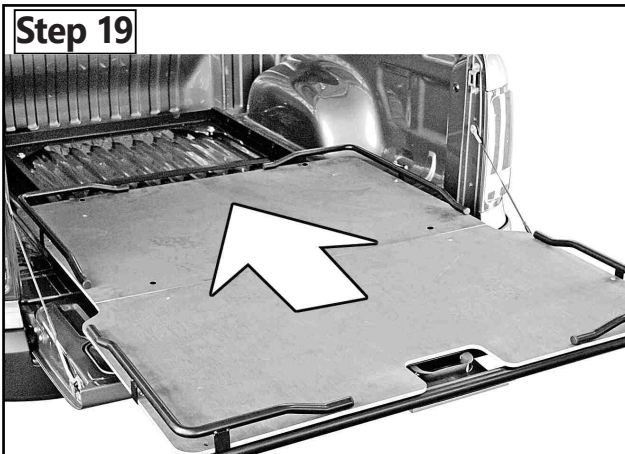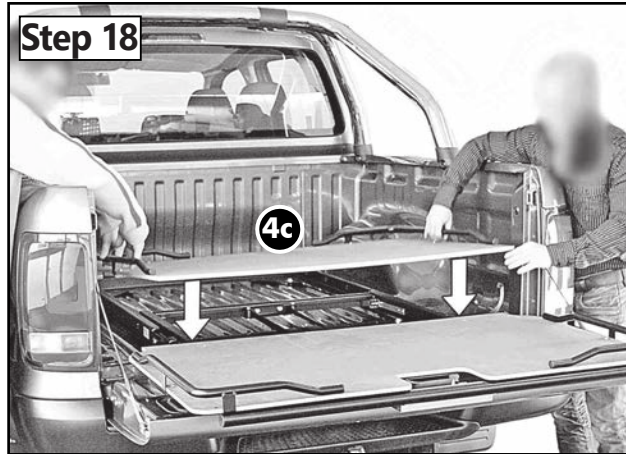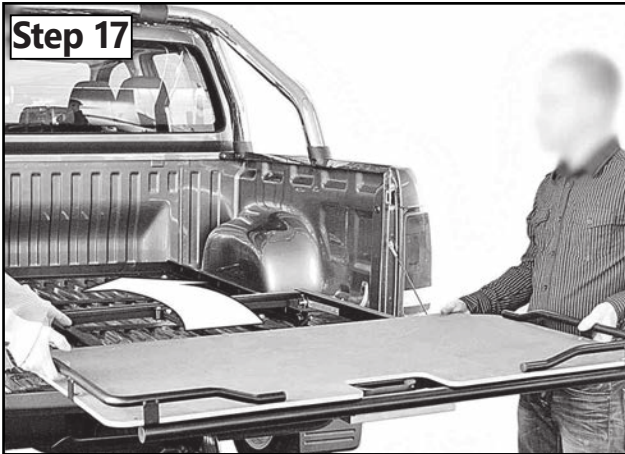

**article-no:**  
006085 black Steel






**Revision 9: 06.02.2019**



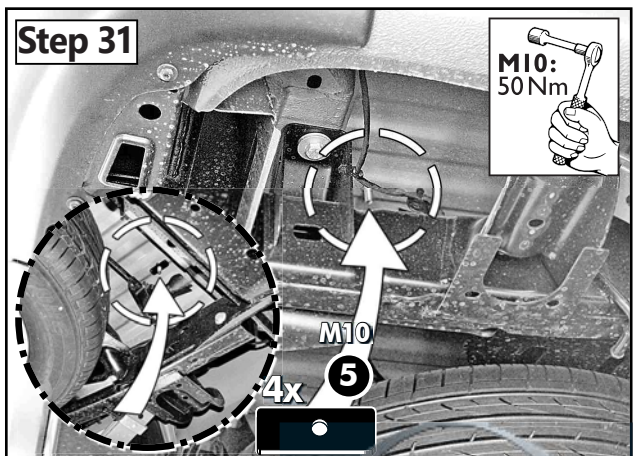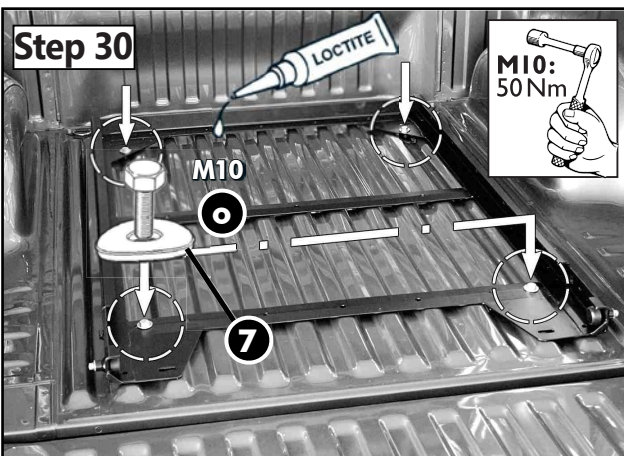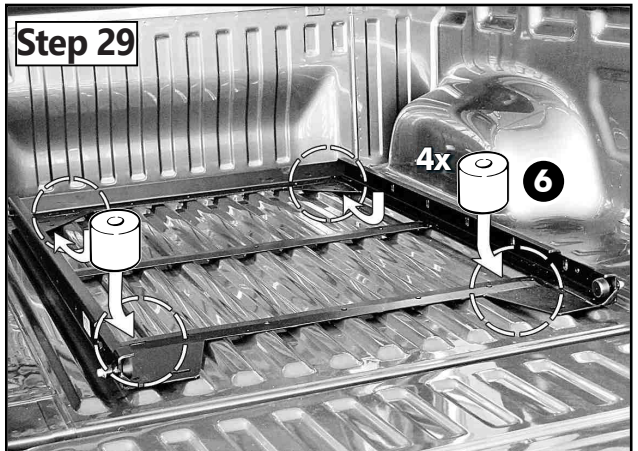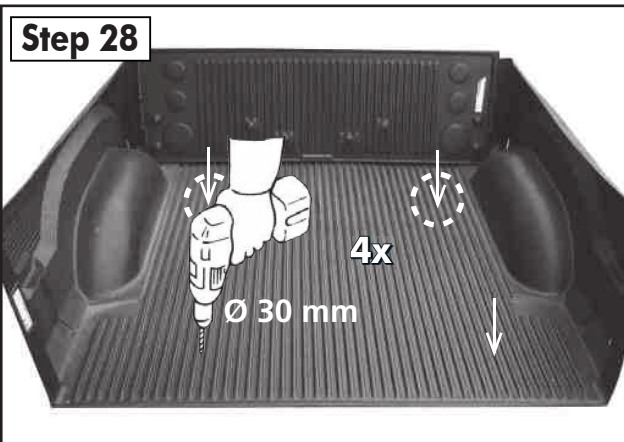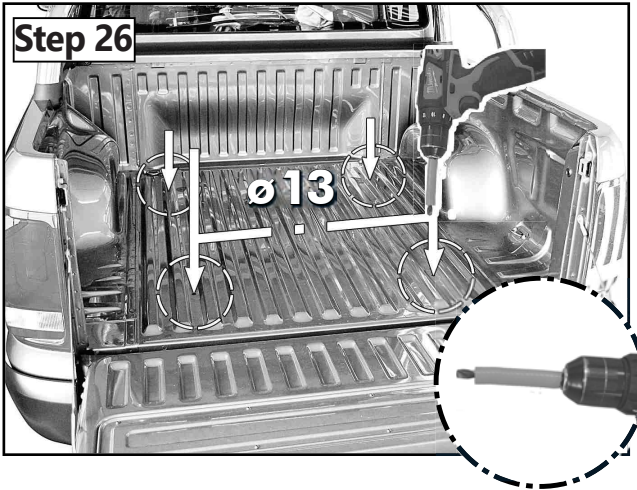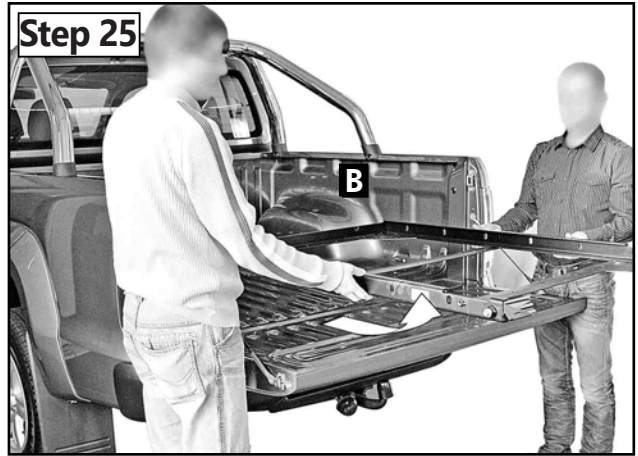

**article-no:**  
006085 black Steel      **Revision 9:** 06.02.2019



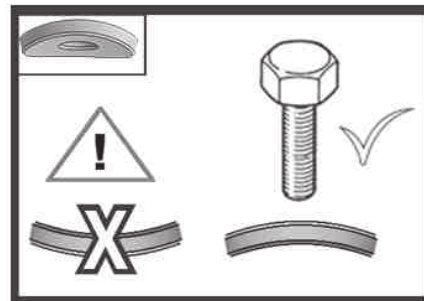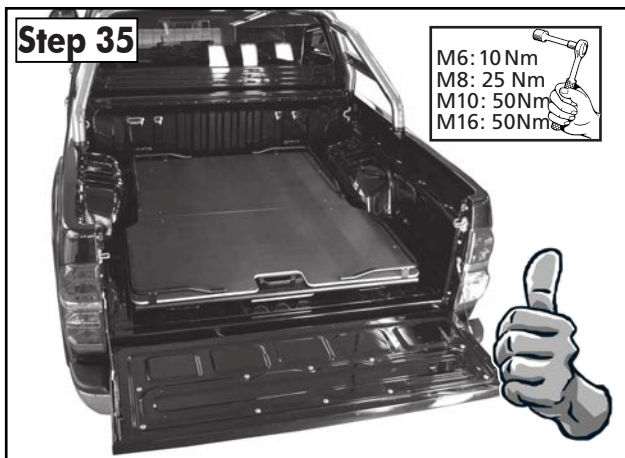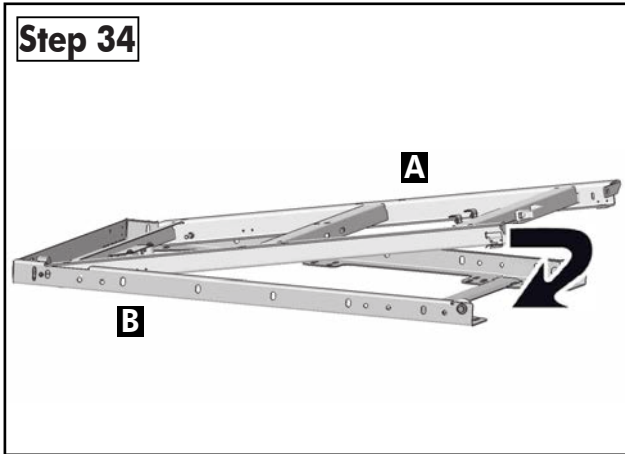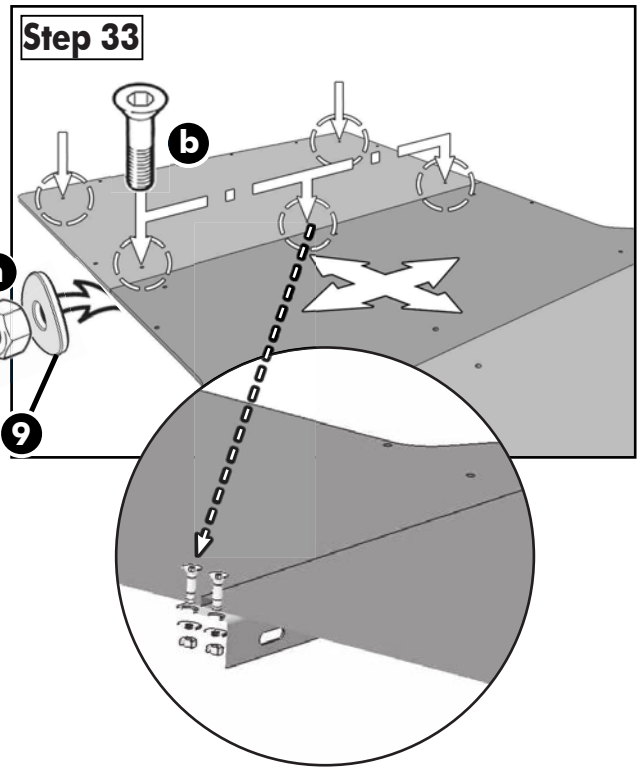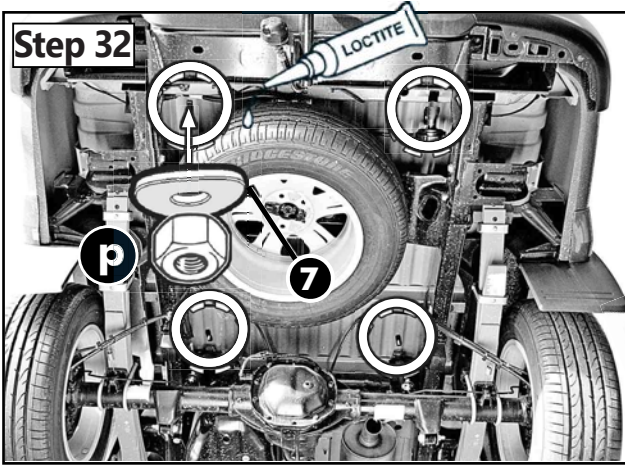

**350 kg  
max**



**article-no:**  
006085 black Steel

**Revision 9: 06.02.2019**

