






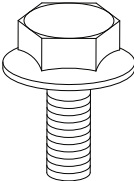
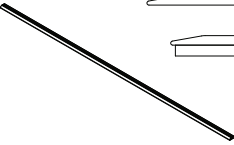

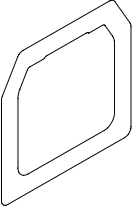


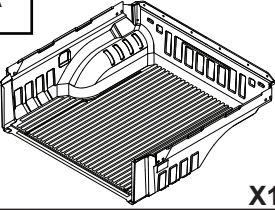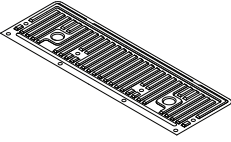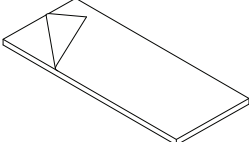
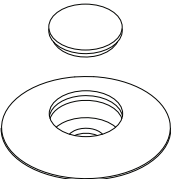
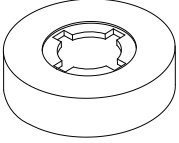


# INSTALLATION INSTRUCTIONS (K715)









## Under Rail Liner

### Mercedes Benz X Class 2018 Double Cab









<b>A</b>  X1	<b>B</b>  X1	<b>C</b>  X8	<b>D</b>  X8
<b>E</b>  X8	<b>F</b>  X2	<b>G</b>  X4	<b>H</b>  X4
<b>I</b>  X1	<b>J</b>  X8	<b>K</b>  X1	◆ = EXISTING PART ○ = NEW PART

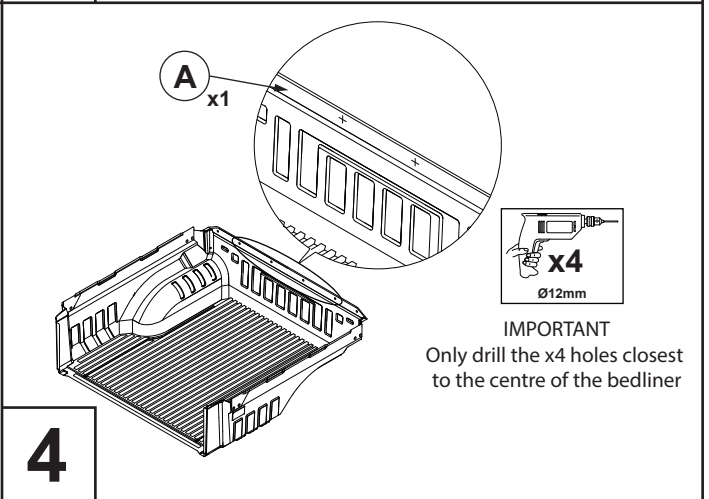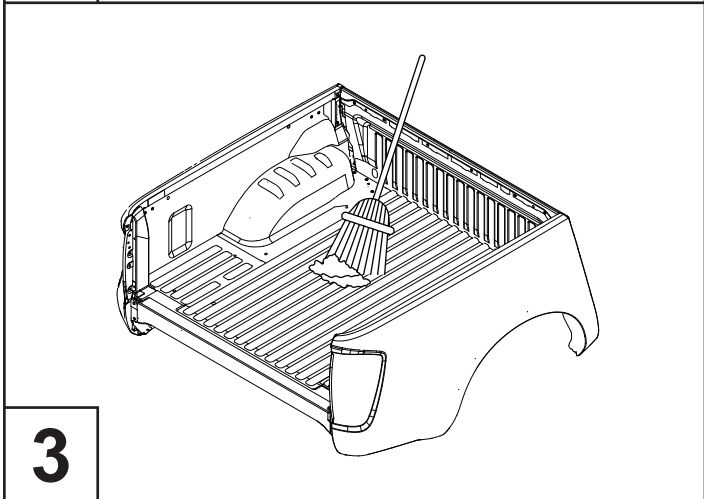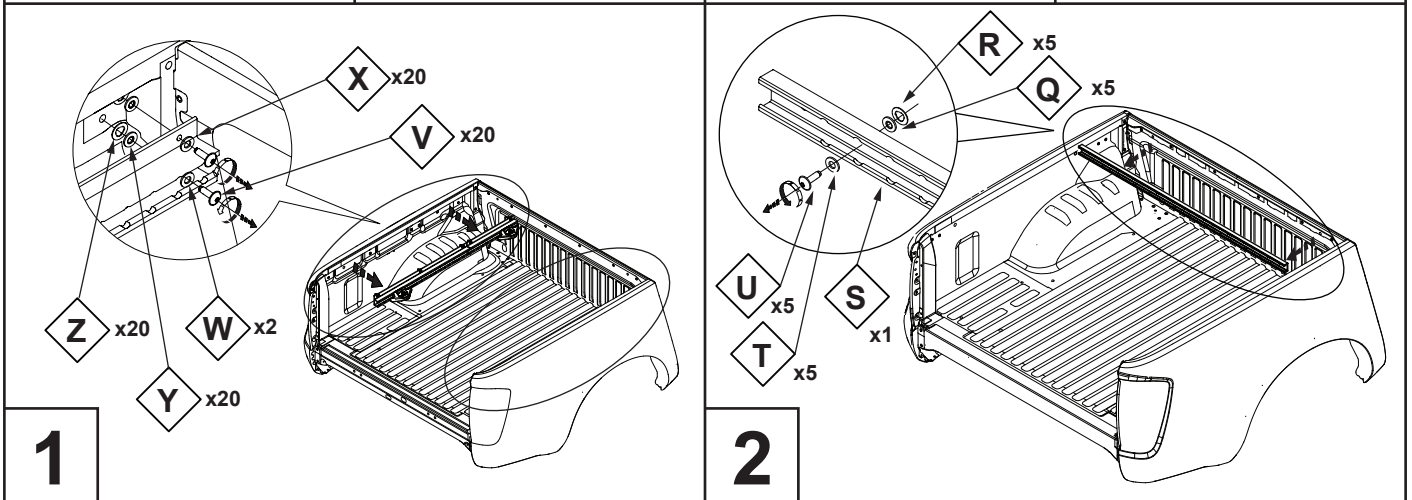

Fitting Kit Number	Manufacturer	Model Type	Year	Stockist	Cab Size	Product	Revision	Date	Page
K715	Mercedes Benz	X-Class	2018	PRO-FORM	DC	Bedliner	1	6/12/17	1 of 4

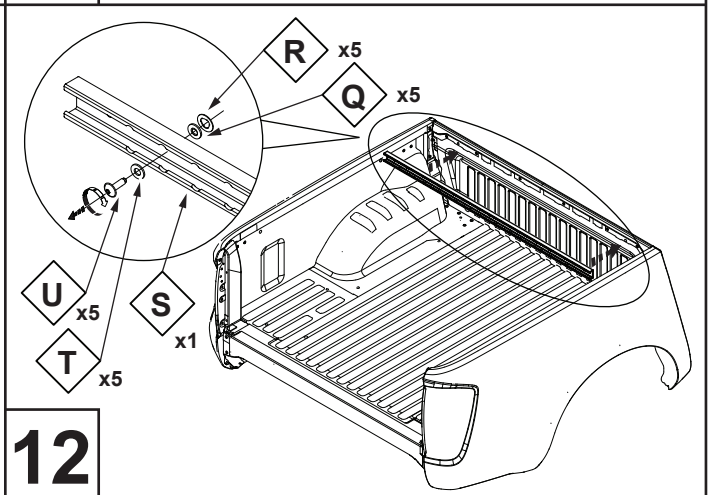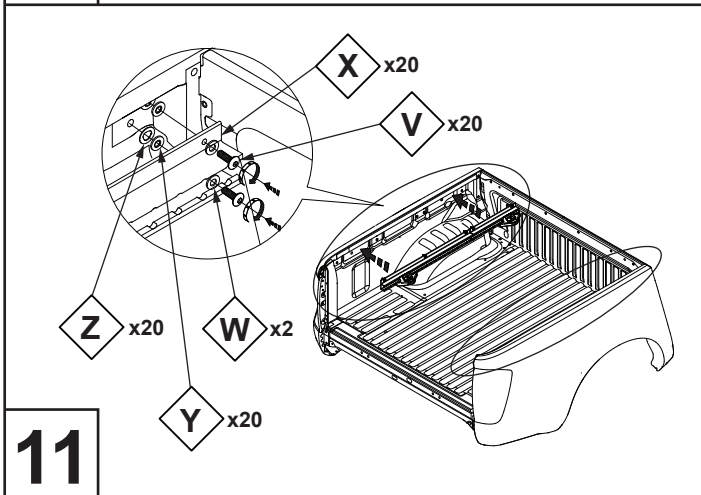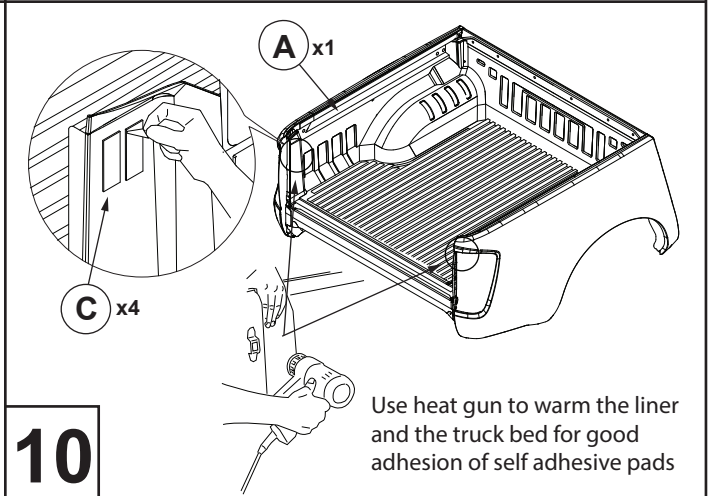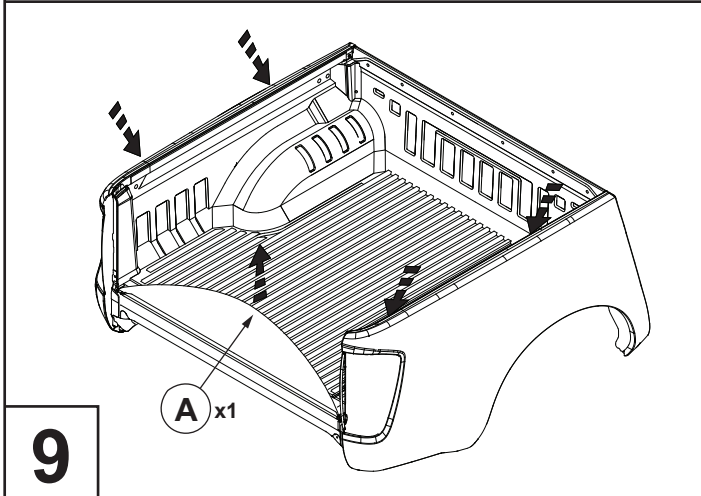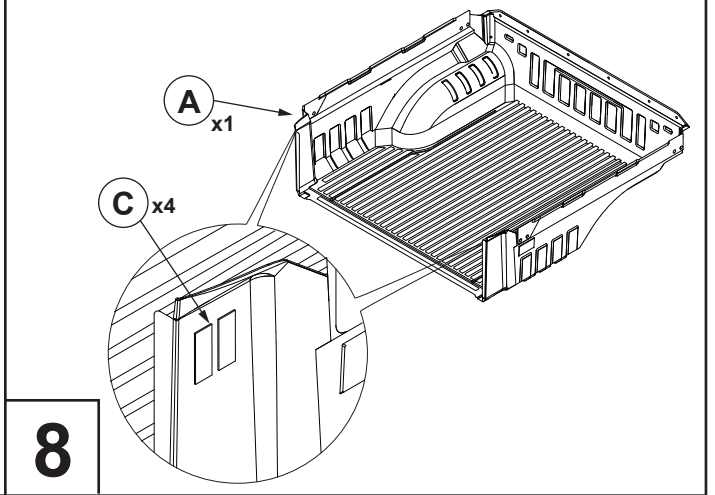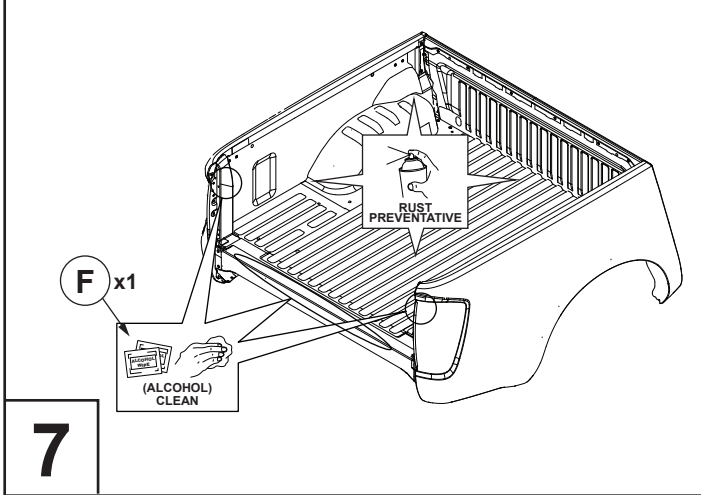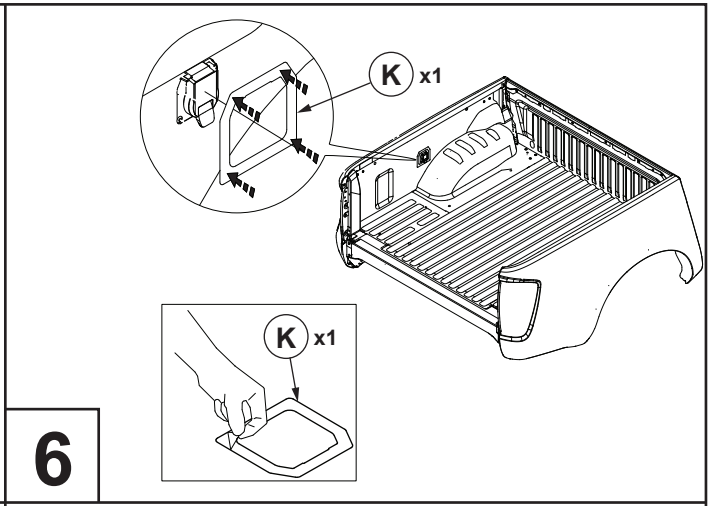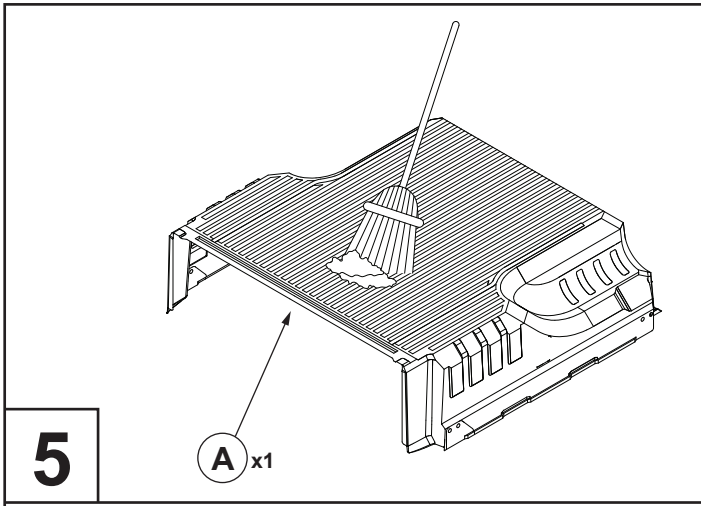

Fitting Kit Number	Manufacturer	Model Type	Year	Stockist	Cab Size	Product	Revision	Date	Page
K715	Mercedes Benz	X-Class	2018	PRO-FORM	DC	Bedliner	1	6/12/17	2 of 4

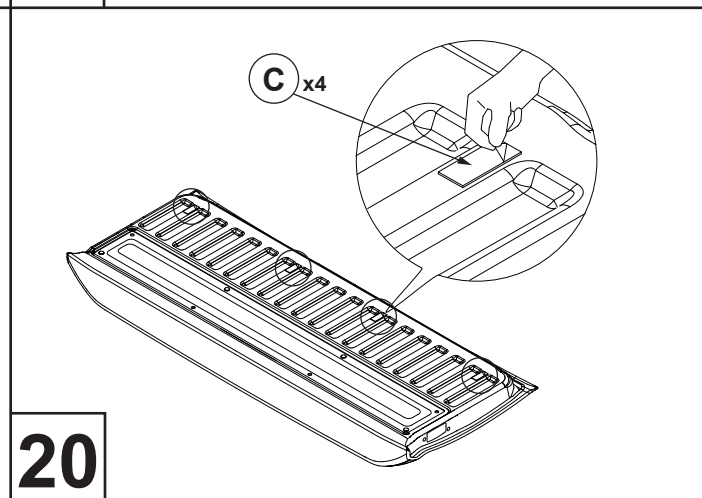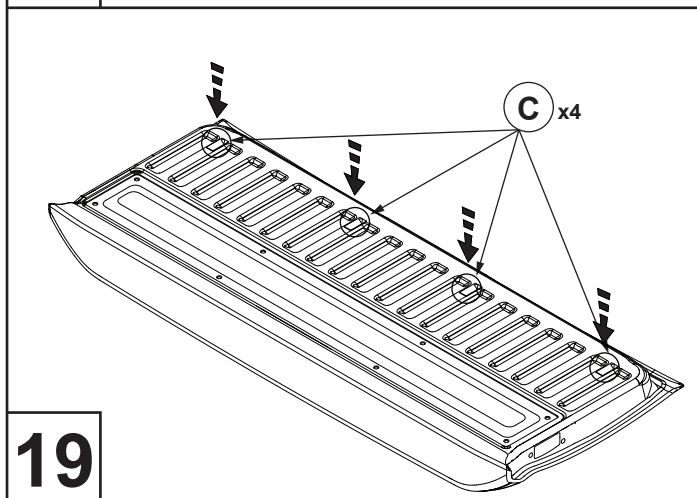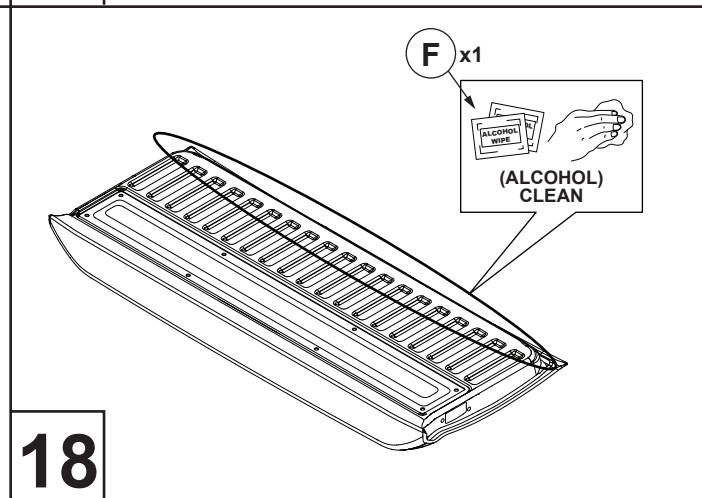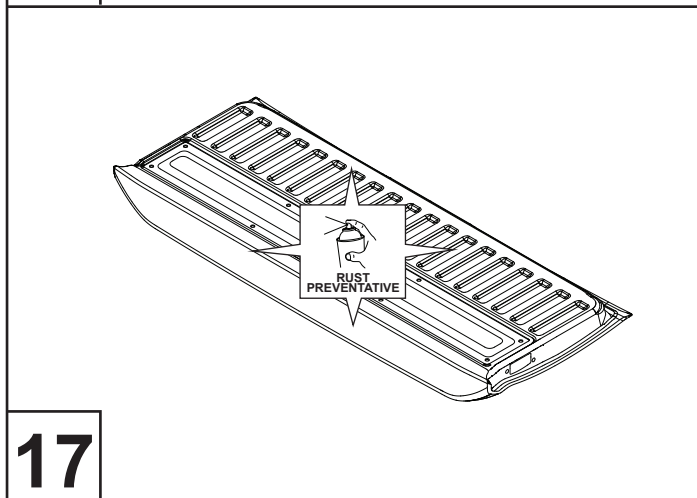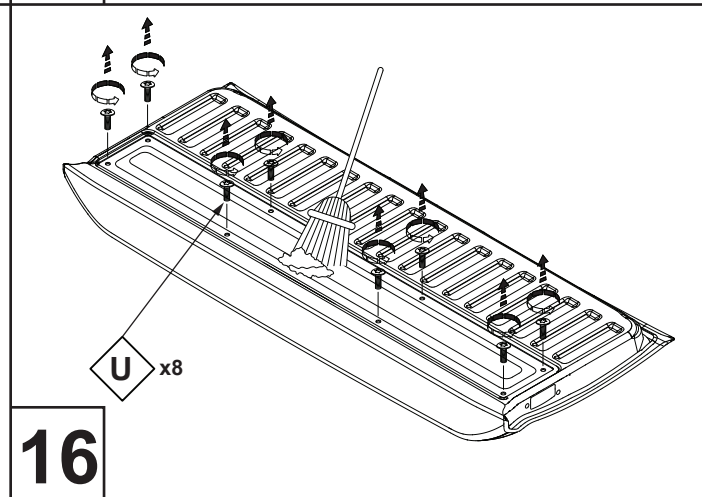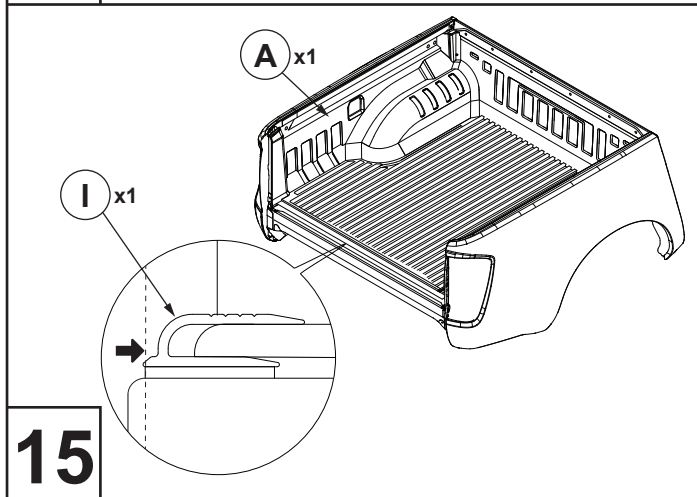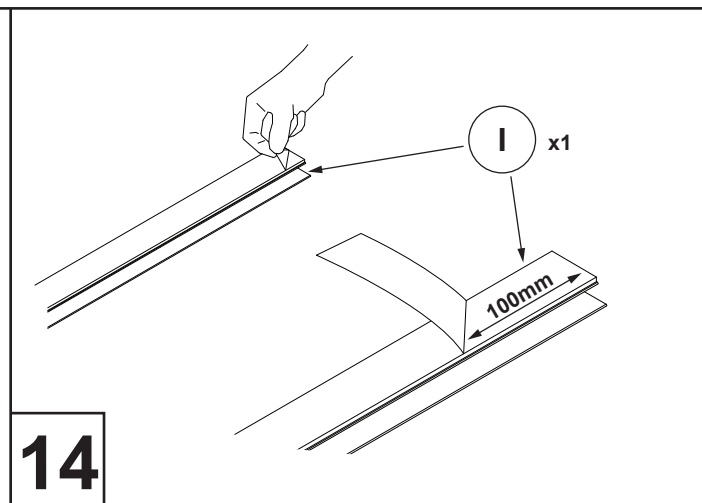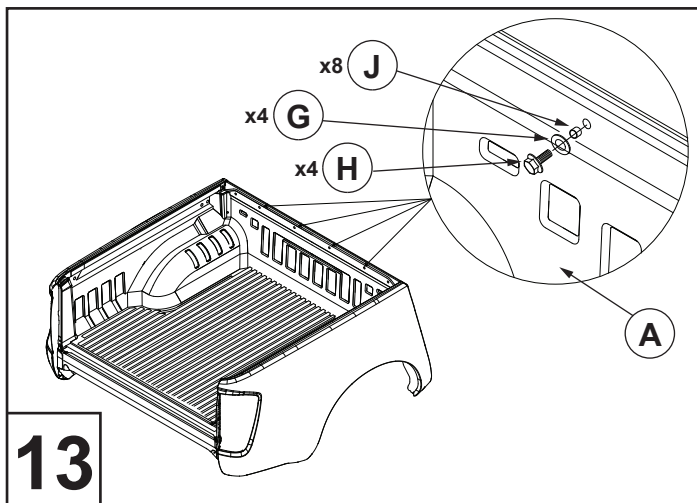

Fitting Kit Number	Manufacturer	Model Type	Year	Stockist	Cab Size	Product	Revision	Date	Page
K715	Mercedes Benz	X-Class	2018	PRO-FORM	DC	Bedliner	1	6/12/17	3 of 4

21

