


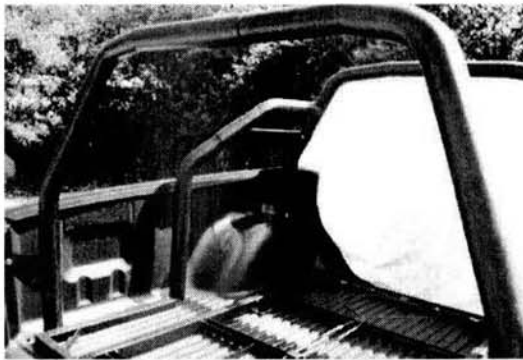





## Montageanleitung / Fitting Instruction

De instructie van de montage / Instruction convenable / Οδηγία συναρμολογήσεων / Istruzione adatta / Instrução apropriada / Fitting инструкция / 貼合指示 / Instrucción apropiada / Passande anvisning / Asennusohje














Revision 2 : 20.07.2006		Art.-Nr.	
Nissan Navara Pick-Up 4x4 ab Modell 2005	Tragebügel gerade hinten	Edelstahl poliert	1664021
		Stahl schwarz	1665021




Teileliste / Parts list / Lijst van onderdelen / Liste des pièces / Κατάλογος μερών / Elenco delle parti / Lista de peças / Список частей / Lista de piezas / 零件單









 <b>a</b>	 <b>b</b> Gegenplatte Ø 11 2 x	 <b>c</b> Halter 2 x
 <b>d</b> Schutzgummi I 2 x	 <b>e</b> Schelle 1 x	 <b>f</b> Montageplatte M10 2 x


Normteile / standard parts / standaard delen / pièces standard / Τυποποιημένα μέρη / Parti standard / Peças padrão / Стандартные части / Piezas estándares / 標準零件

 <b>1</b> 10Nm M6 x 20 2 x	 <b>2</b> 25Nm M8 x 30 2 x	 <b>3</b> 50Nm M10 x 30 2 x	 <b>4</b> 50Nm M10 x 55 2 x	 <b>5</b> M 6 2 x	 <b>6</b> M 10 2 x	 <b>7</b> Ø 6,4 4 x
 <b>8</b> Ø 8,4 2 x	 <b>9</b> Ø 10,5 6 x	 <b>10</b> Ø 6 2 x	 <b>11</b> Ø 8 2 x	 <b>12</b> Ø 10 2 x	 <b>13</b> SW17 mm 6 x	


Benötigte Werkzeuge / Required tools / Vereiste hulpmiddelen / Outils requis / Απαραίτητα εργαλεία / Attrezzi richiesti / Ferramentas requeridas / Требуемые инструменты / Herramientas requeridas / 必需的

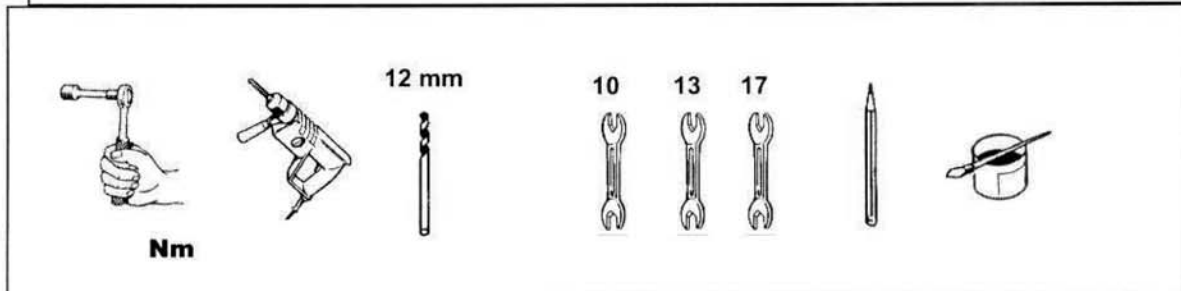

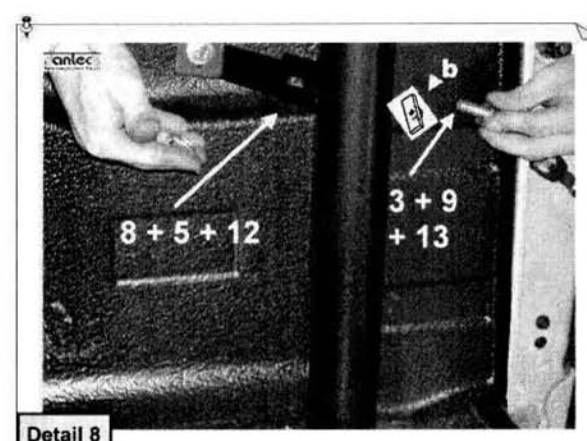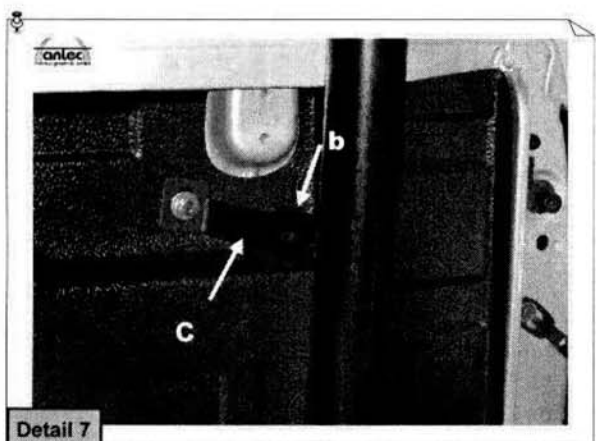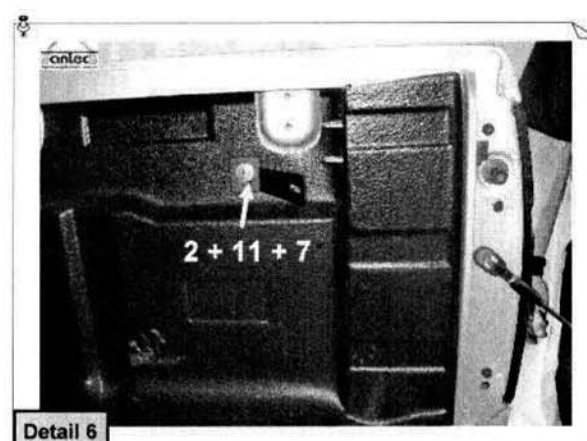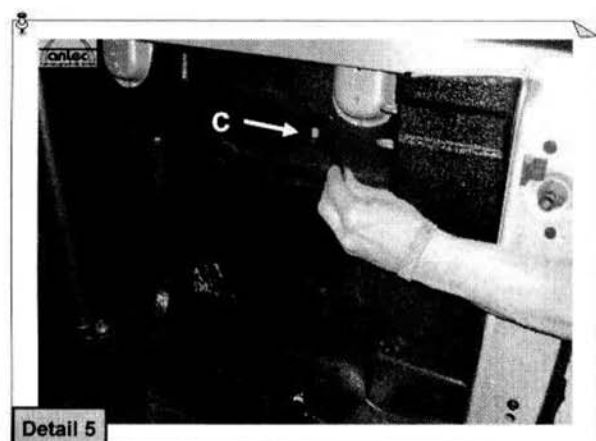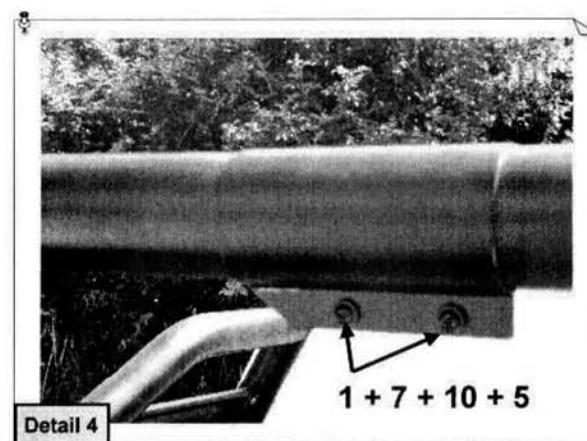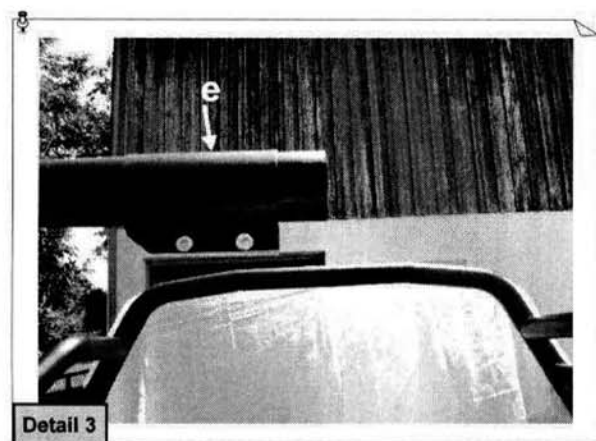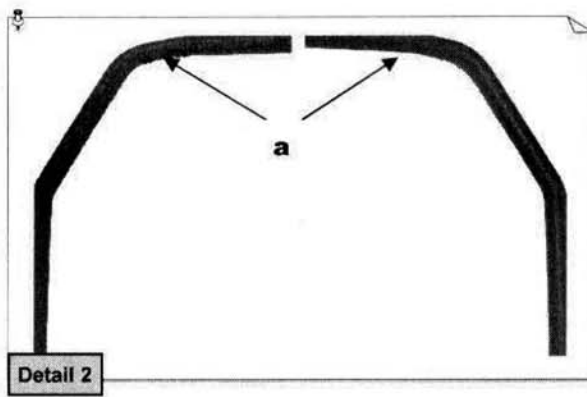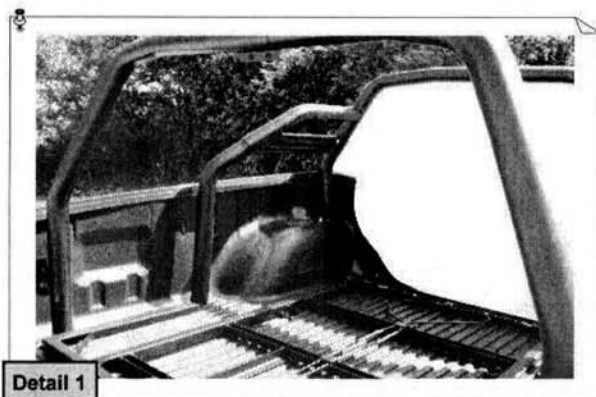


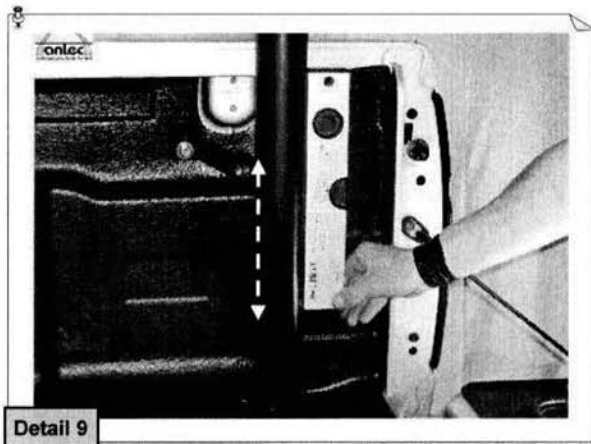


Detail 9

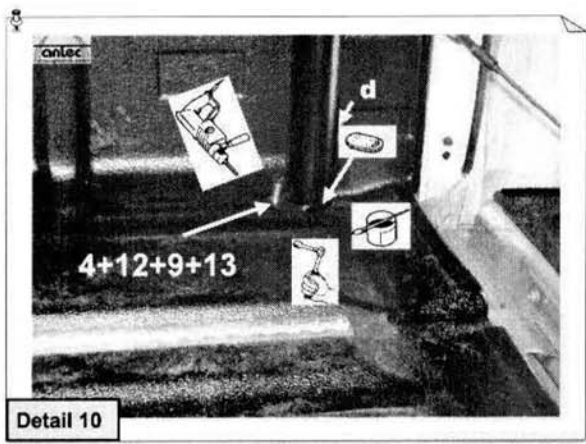

Detail 10

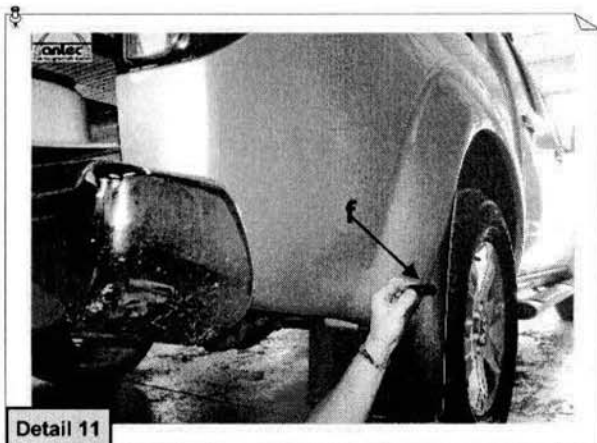

Detail 11

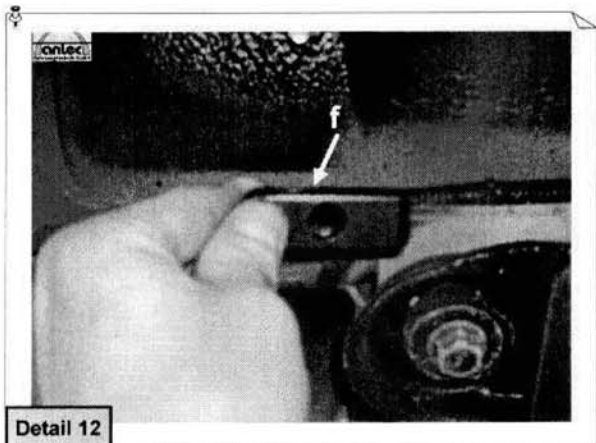

Detail 12



Detail 13