


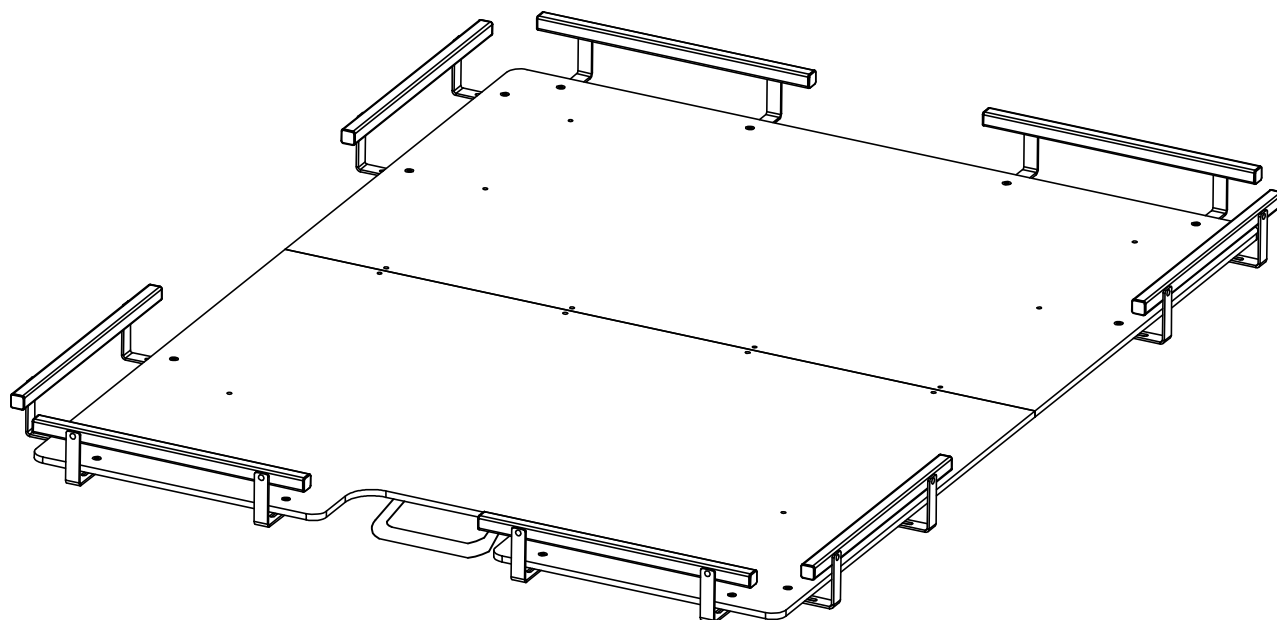
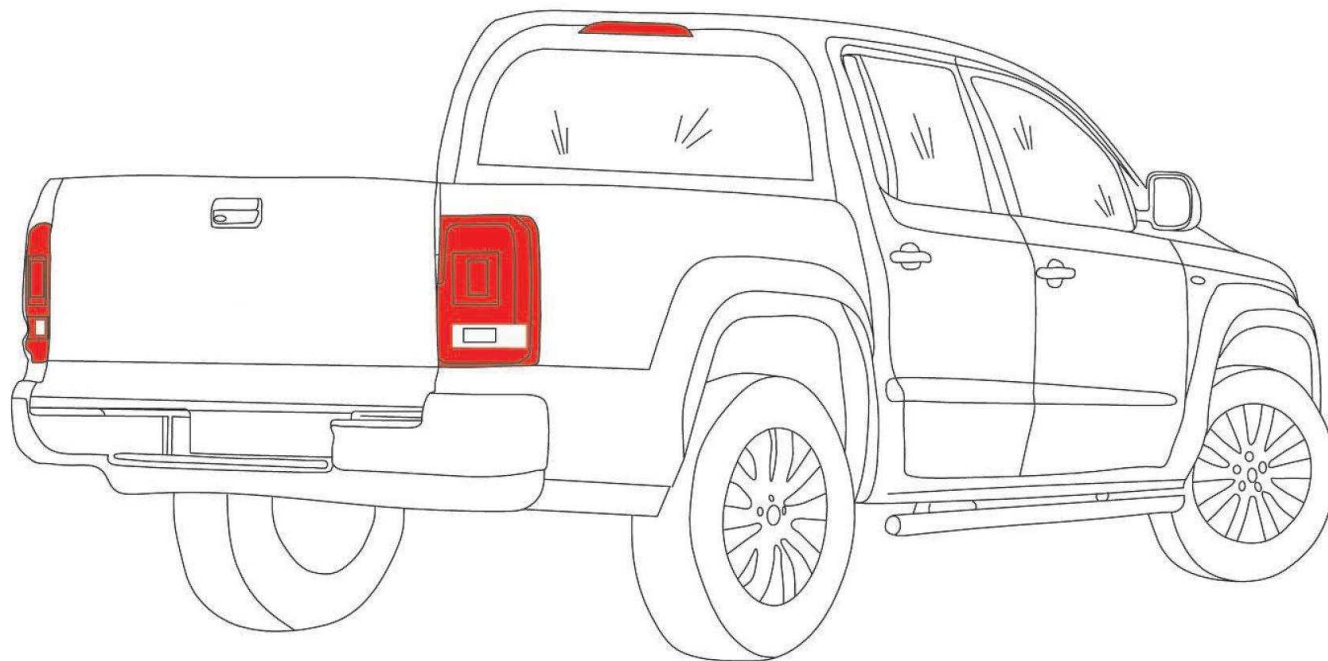
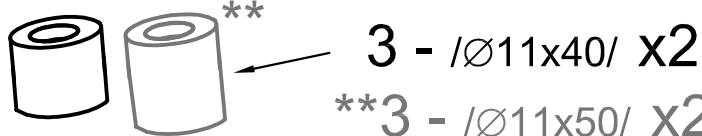


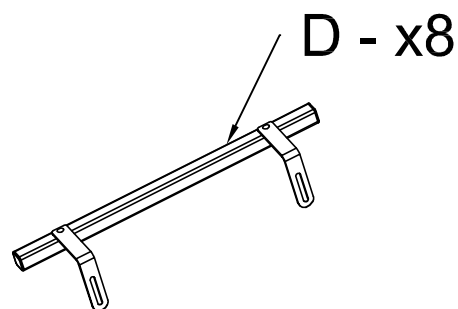
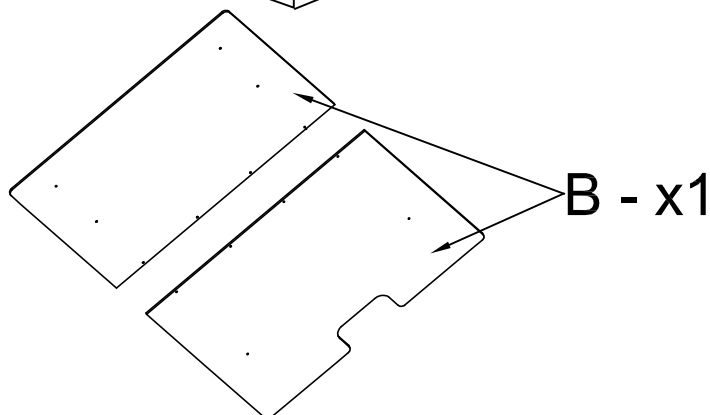


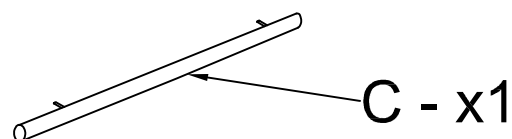











ROAD RANGER®

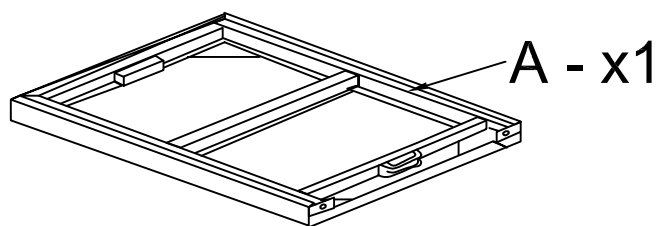

**3 - /Ø11x50/ x2

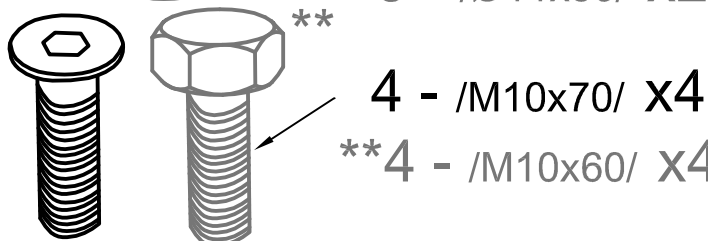



**4 - /M10x60/ x4

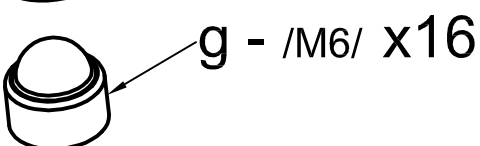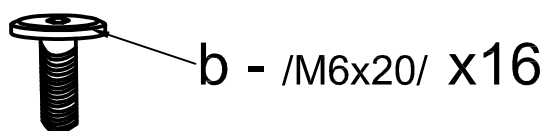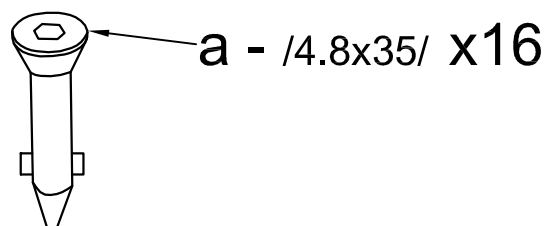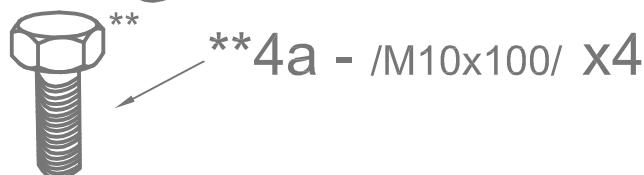

ATTENTION!

Please be sure that the platform brake is locked in one of five safety positions.
Unlocked platform is unstable and is able to move themselves!



ROAD RANGER®

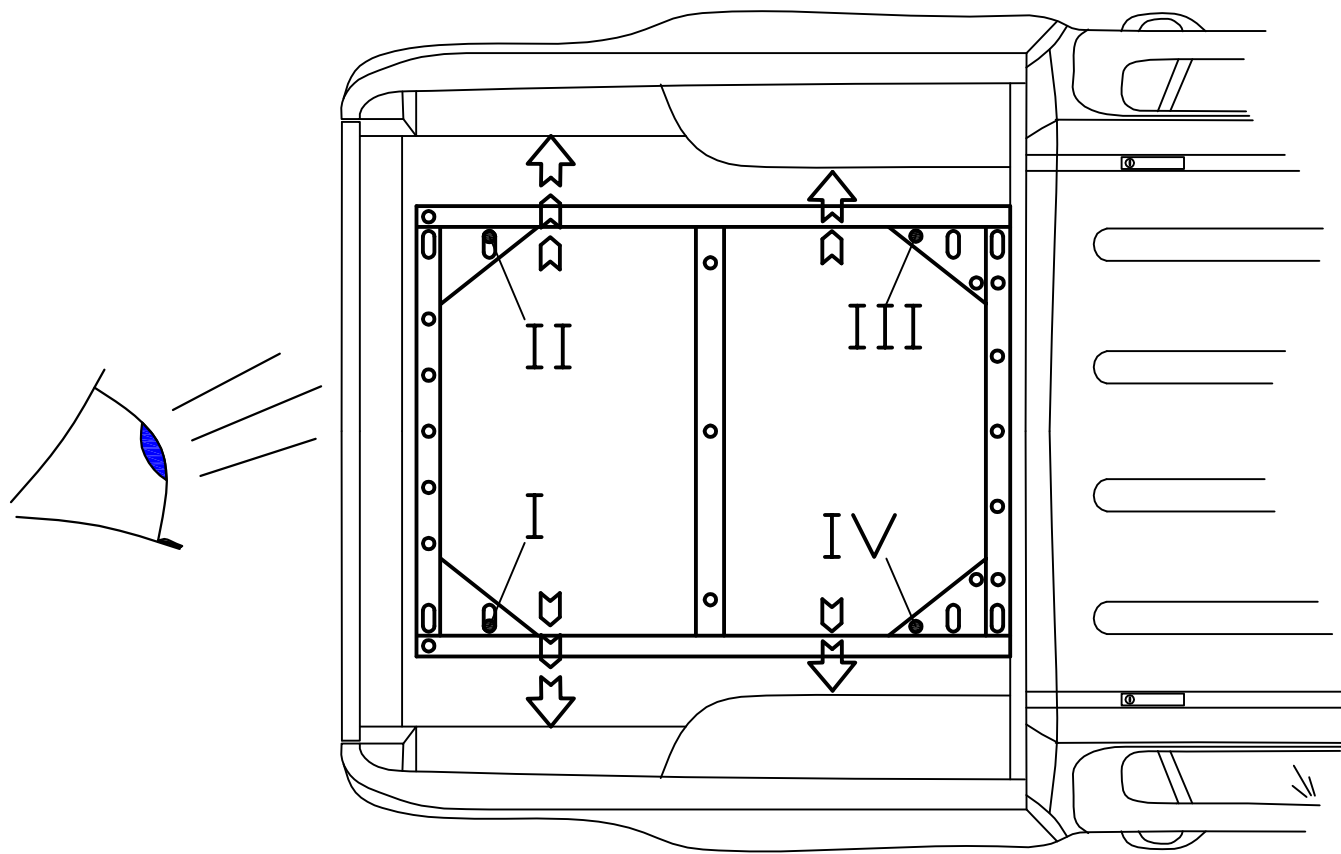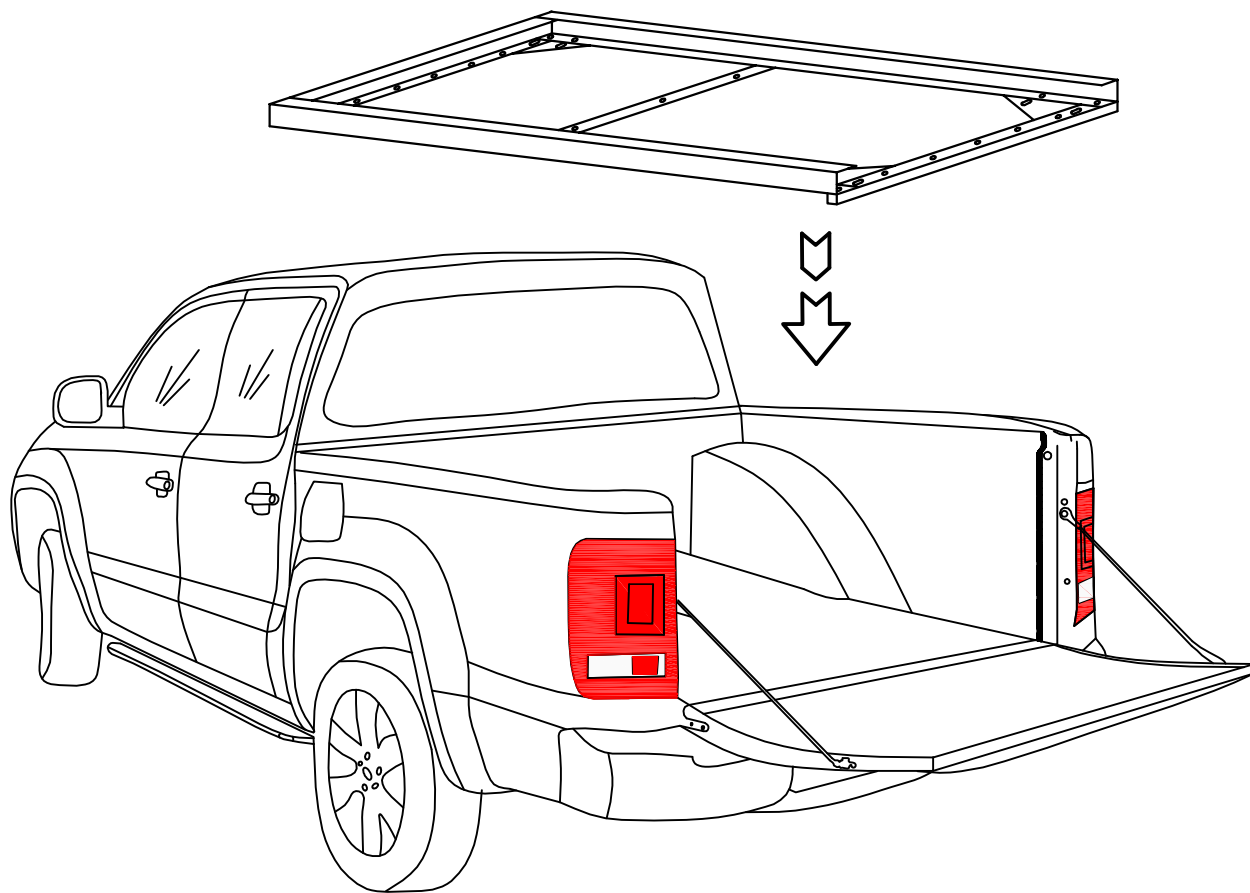

Installation manual >> Montageanleitung >>



>> Инструкция по установке >> Instructions de montage >> Istruzioni di montaggio >> Montageanvising >> Instruções de Montagem

ROAD RANGER®

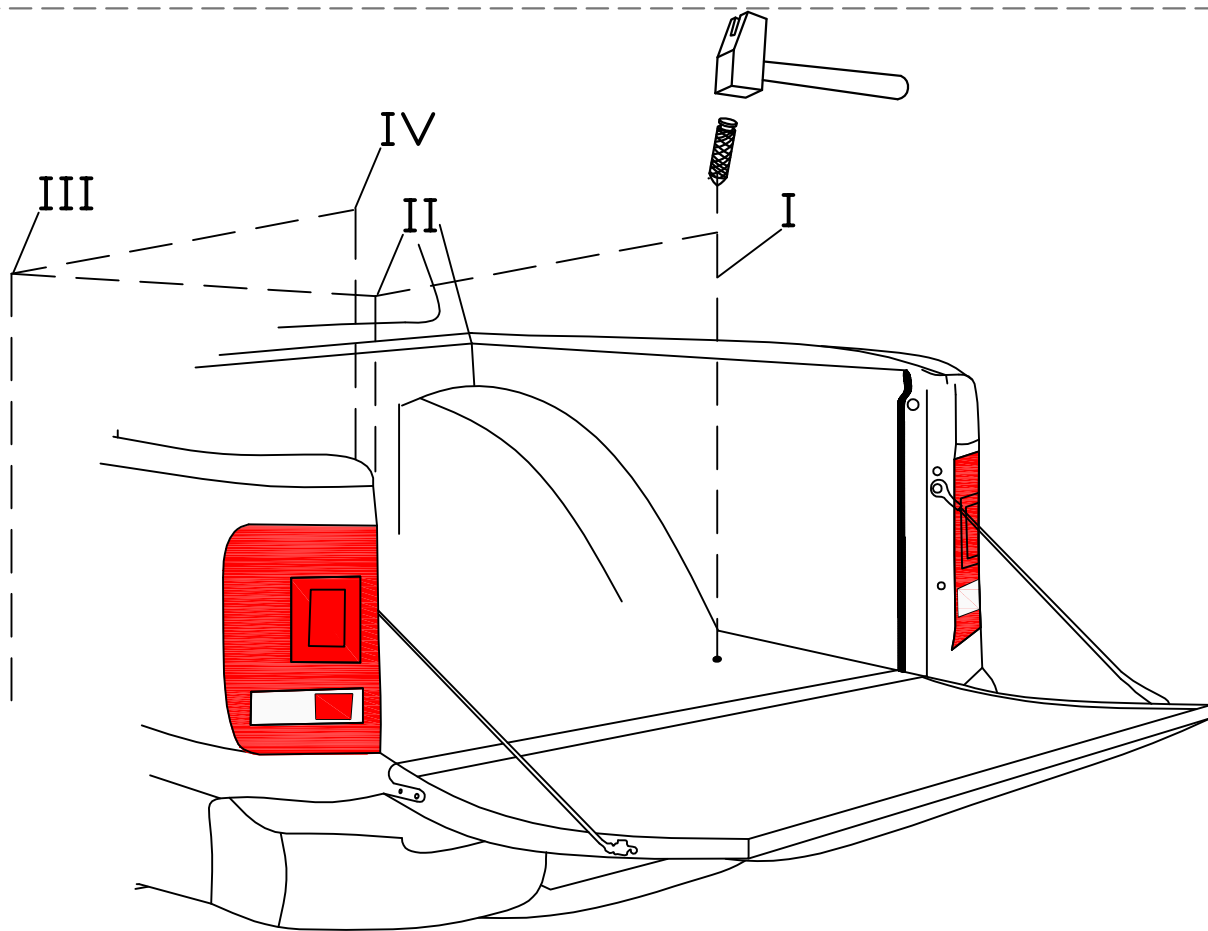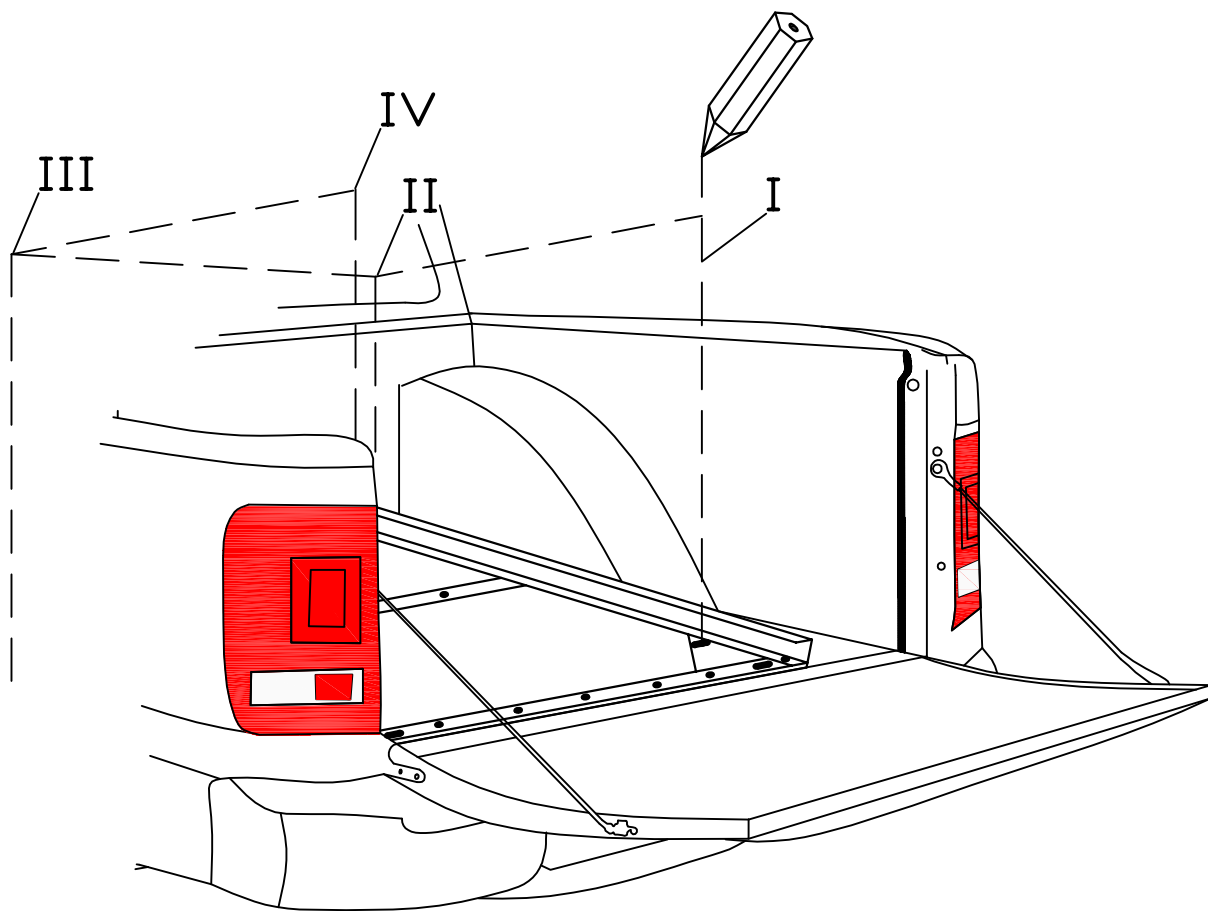

ROAD RANGER®

Ø12 !!!

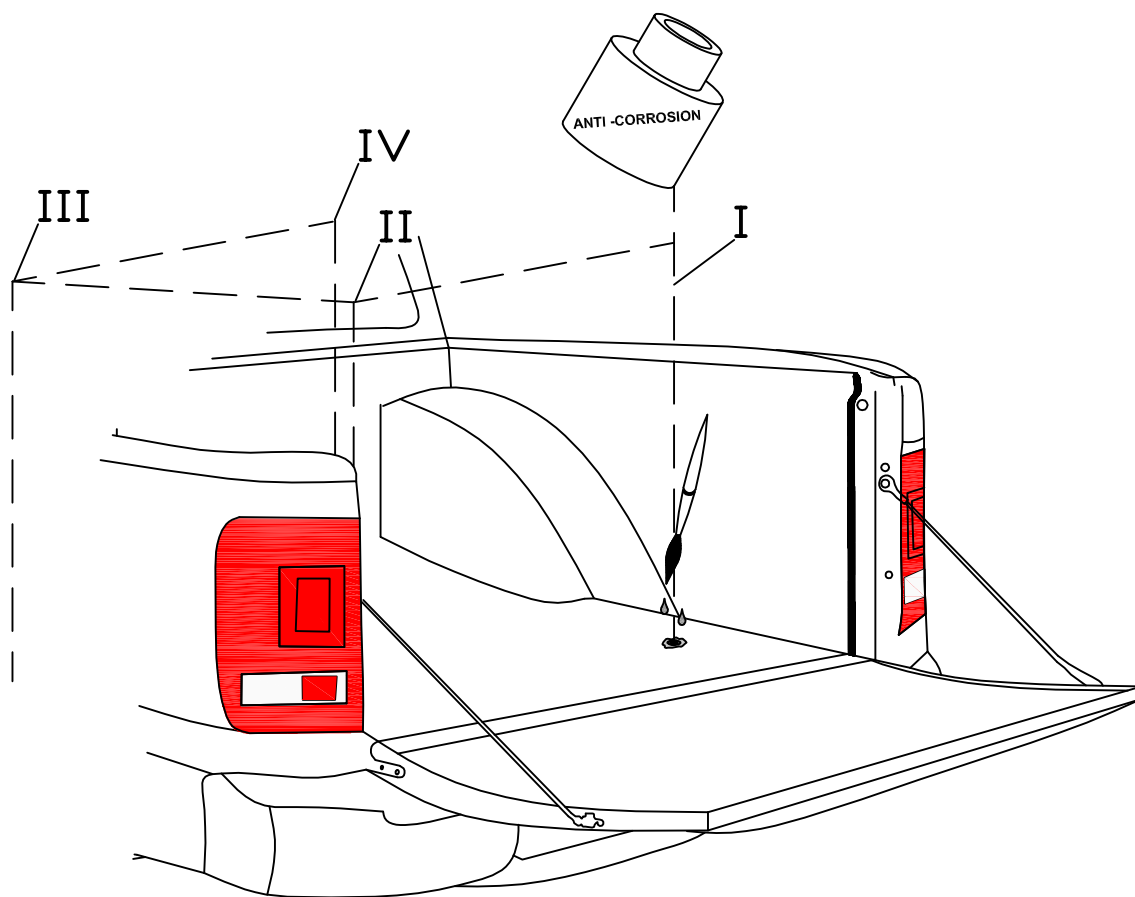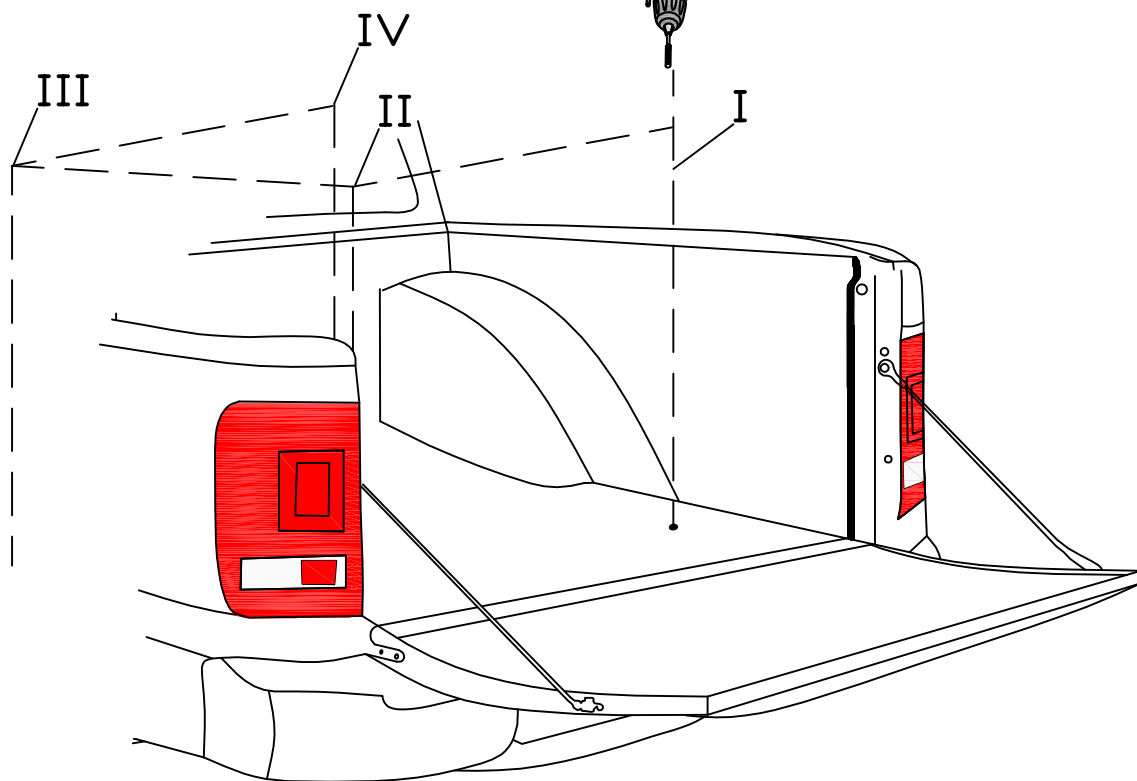

5 Installation manual >> Montageanleitung >>

>> Инструкция по установке >> Instructions de montage >> Istruzioni di montaggio >> Instrucciones de montaje >> Montageanvisning >> Instruções de Montagem



ROAD RANGER®

Important!



If the cargo area is equipped with an ABS bedliner on the loading area, Ø22mm holes for the bushings in the ABS should be drilled.

Achtung!

Beim Einbau von Laderaumwanne bitte beachten, die Löcher für die Ø22mm Buchsen in Kunststoff aufbohren.

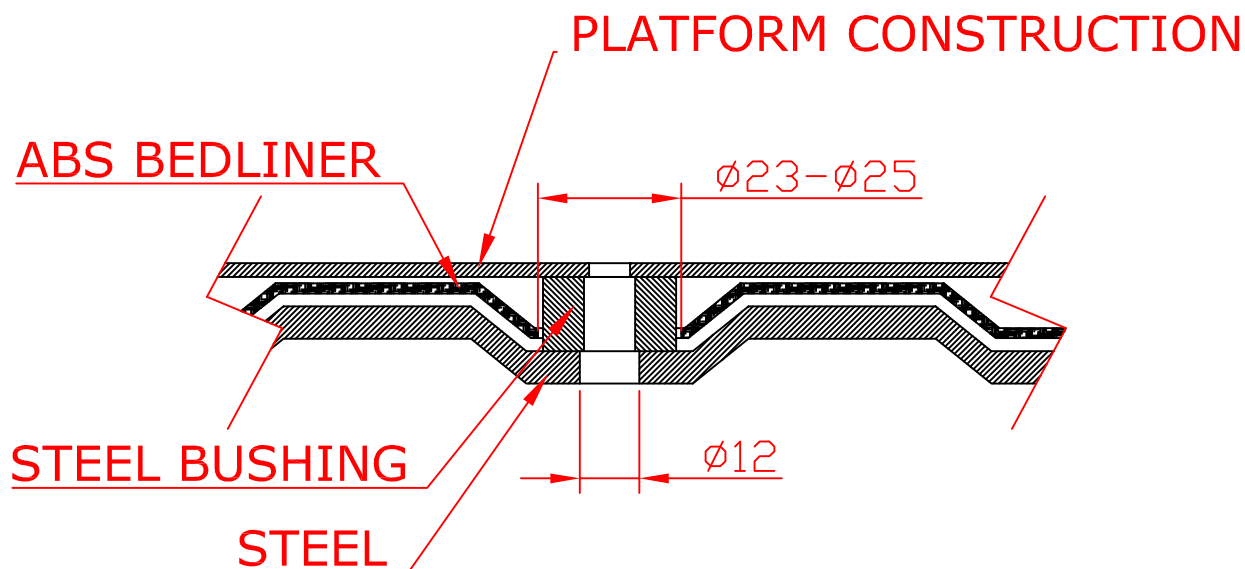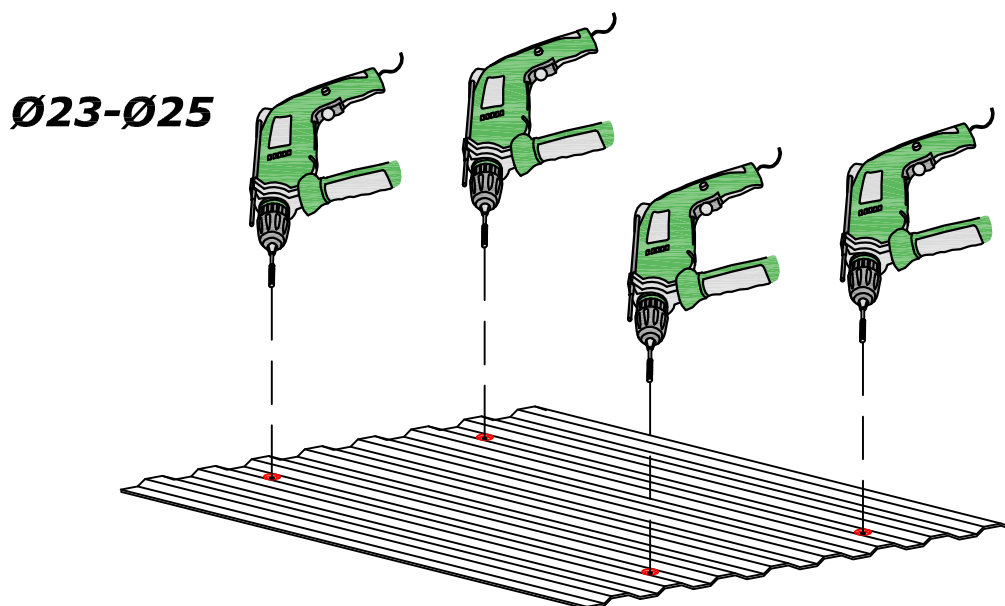


ROAD RANGER®

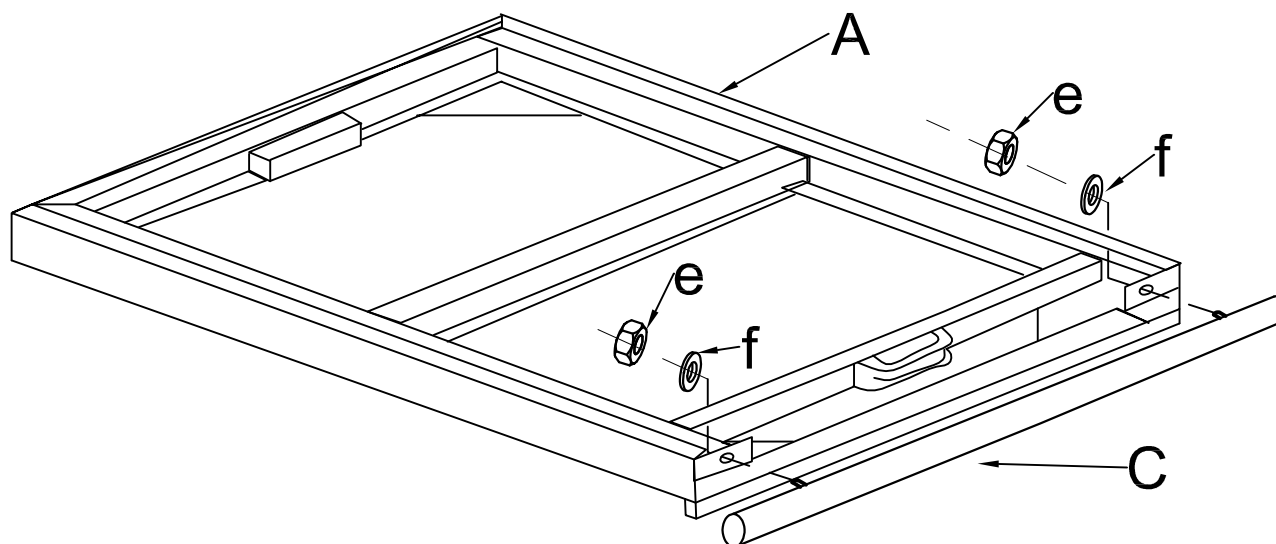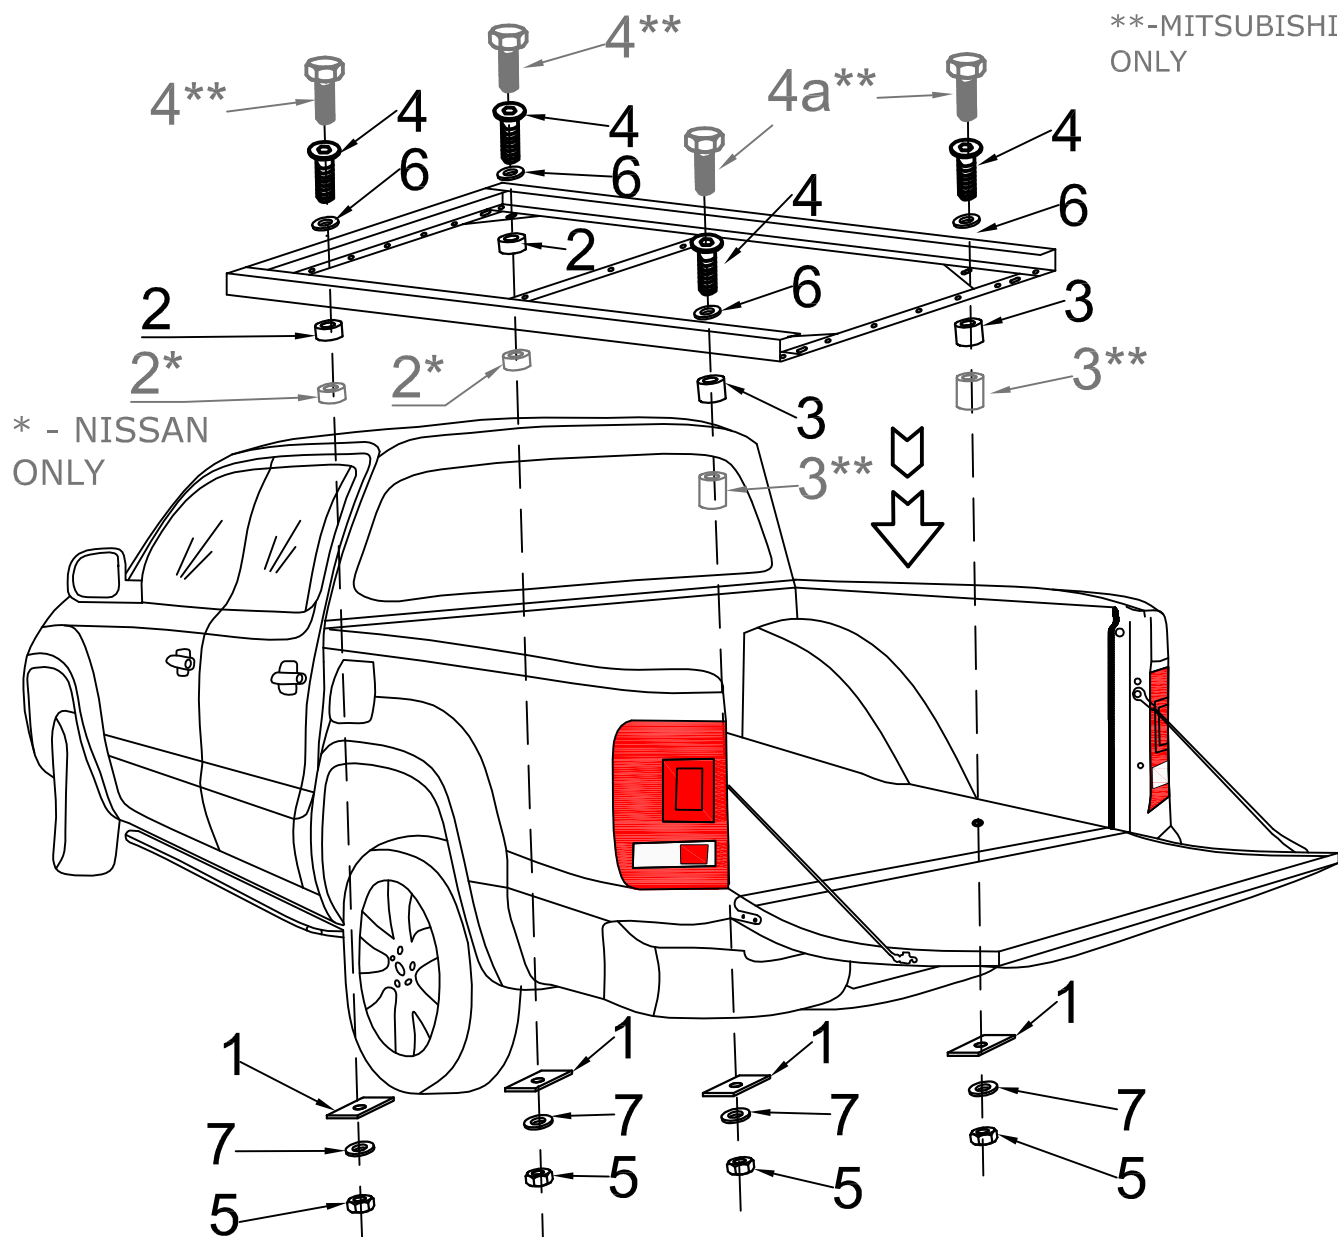


Installation manual >> Montageanleitung >> Montagemanual >> Montagemanual

>> Инструкция по установке >> Istruzioni di montaggio >> Instrucciones de montaje >> Instruções de montagem >> Instruções de montagem




ROAD RANGER®

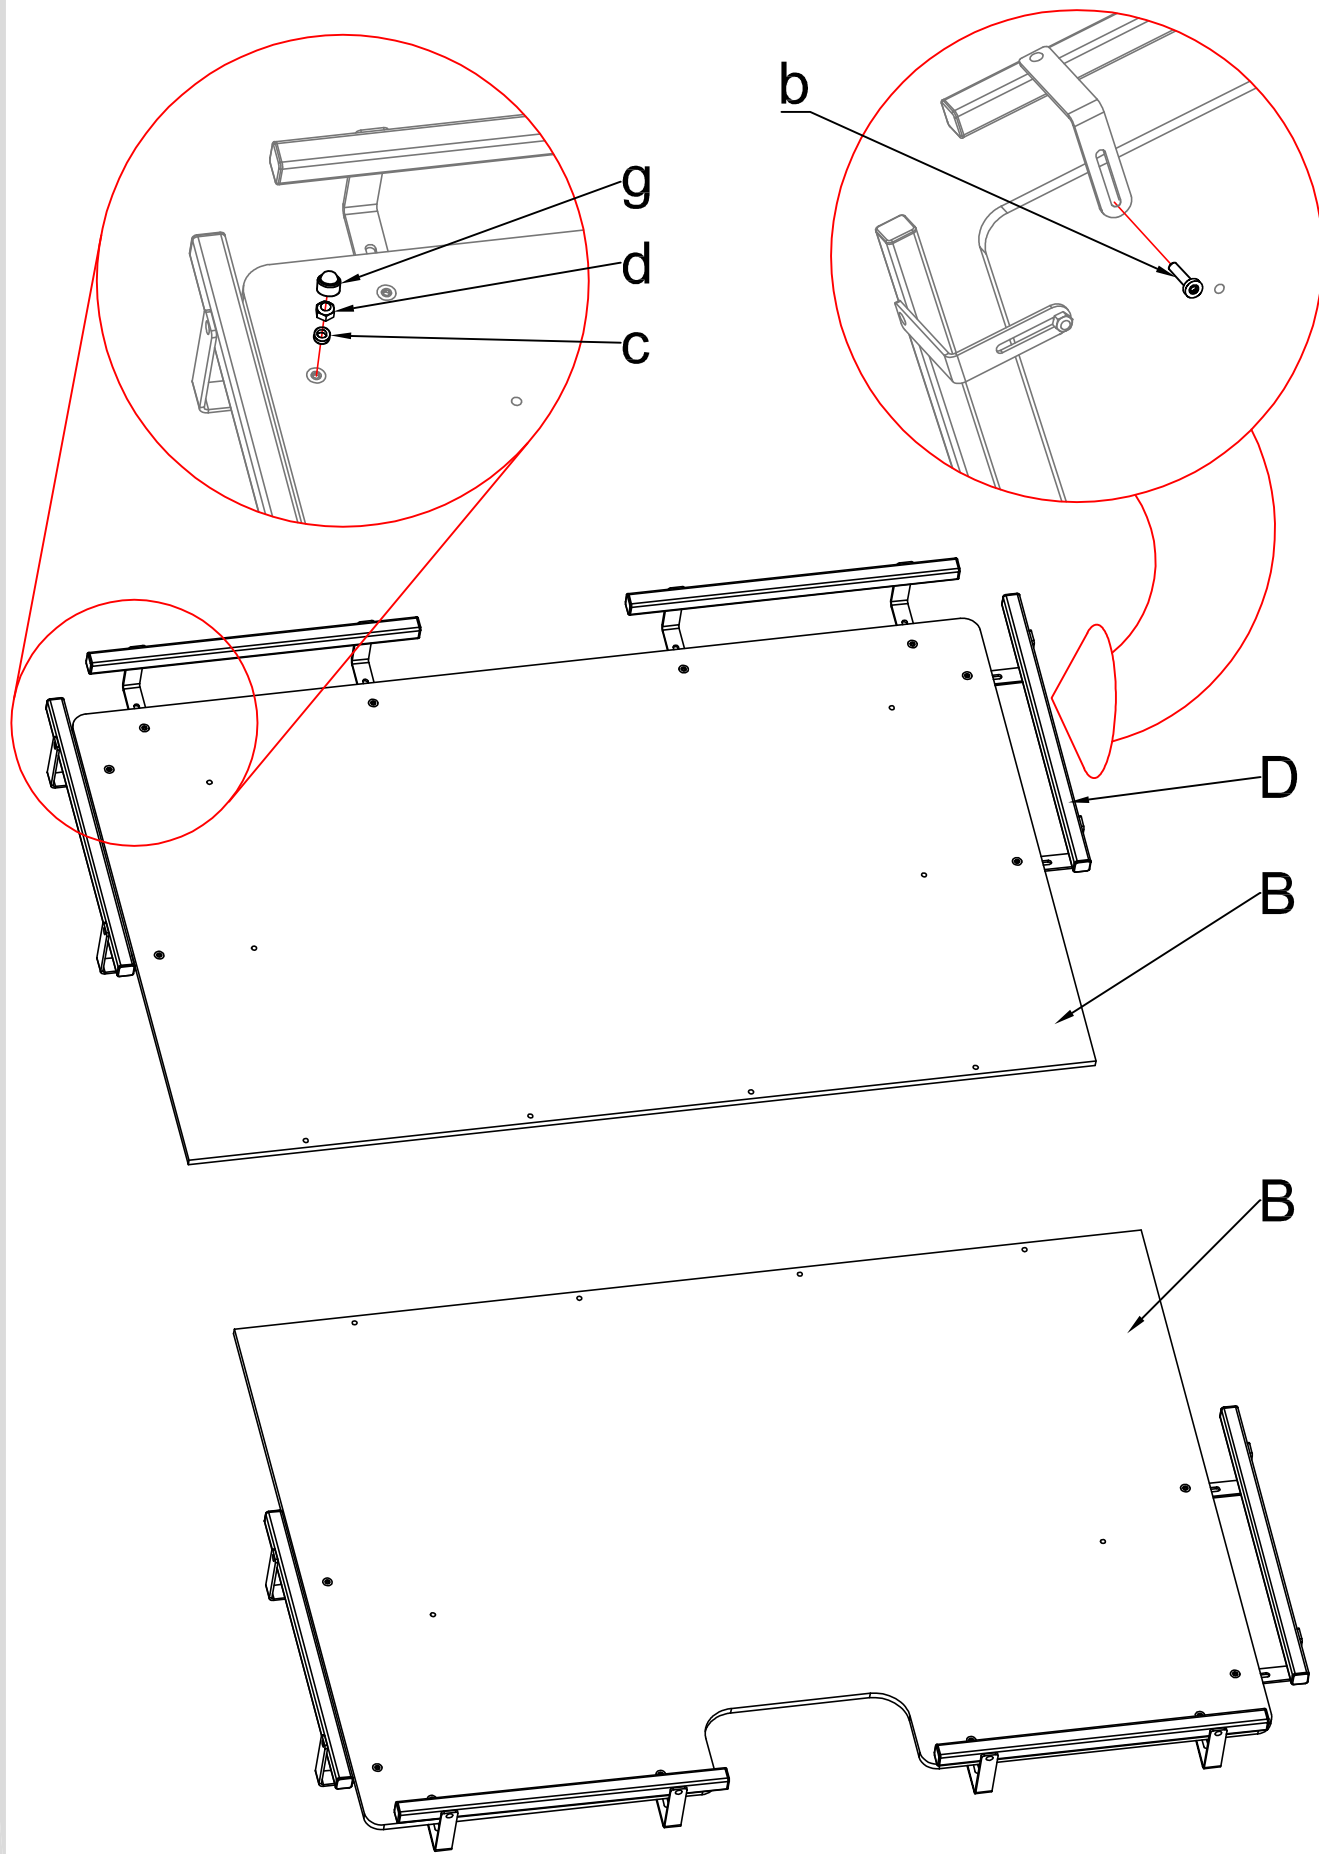

> > Инструкция по установке > > Istruzioni di montaggio > > Instrucciones de montaje > > Instruções de Montagem

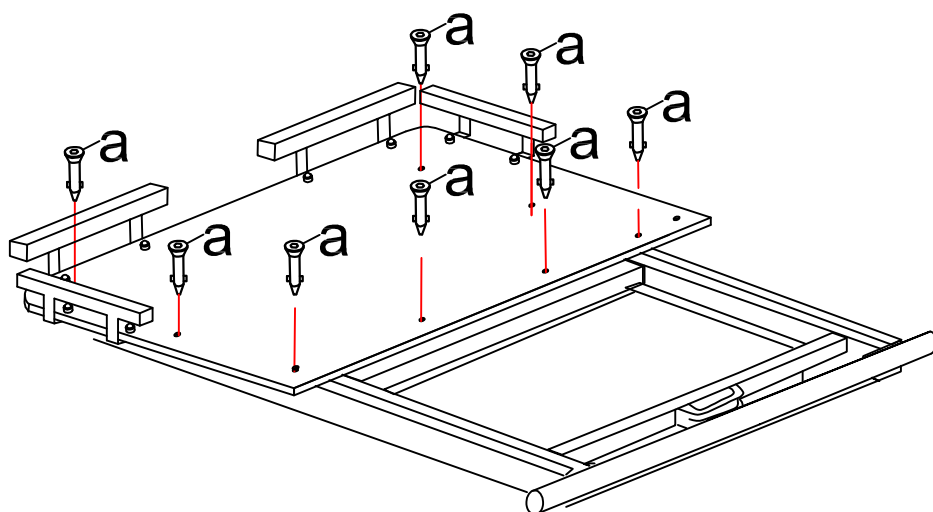

ROAD RANGER®

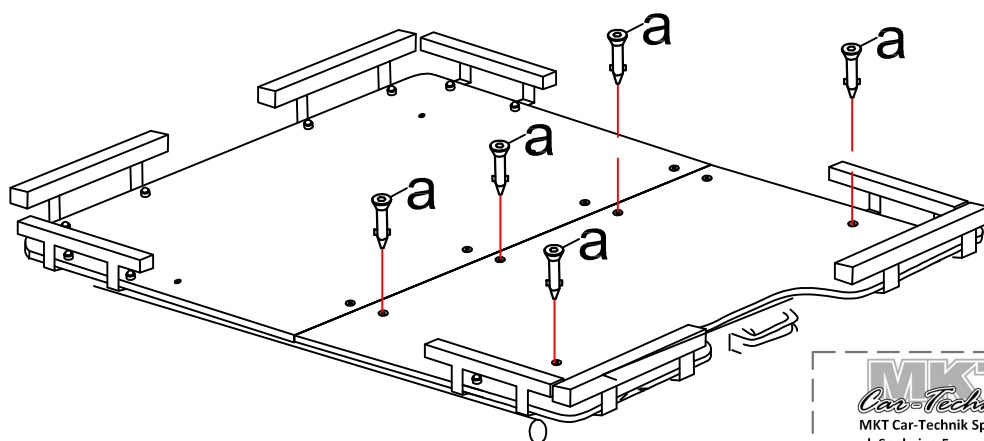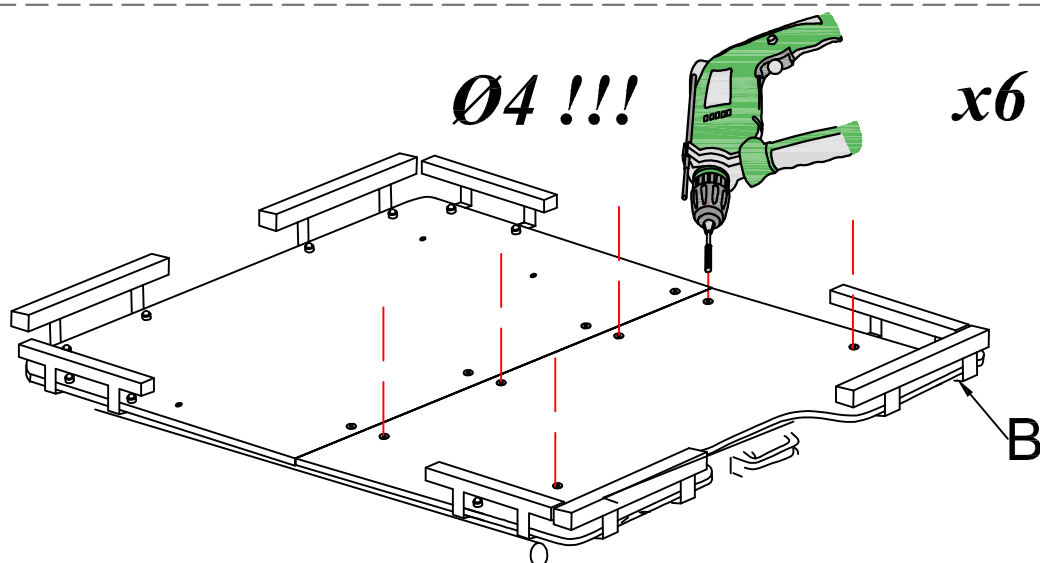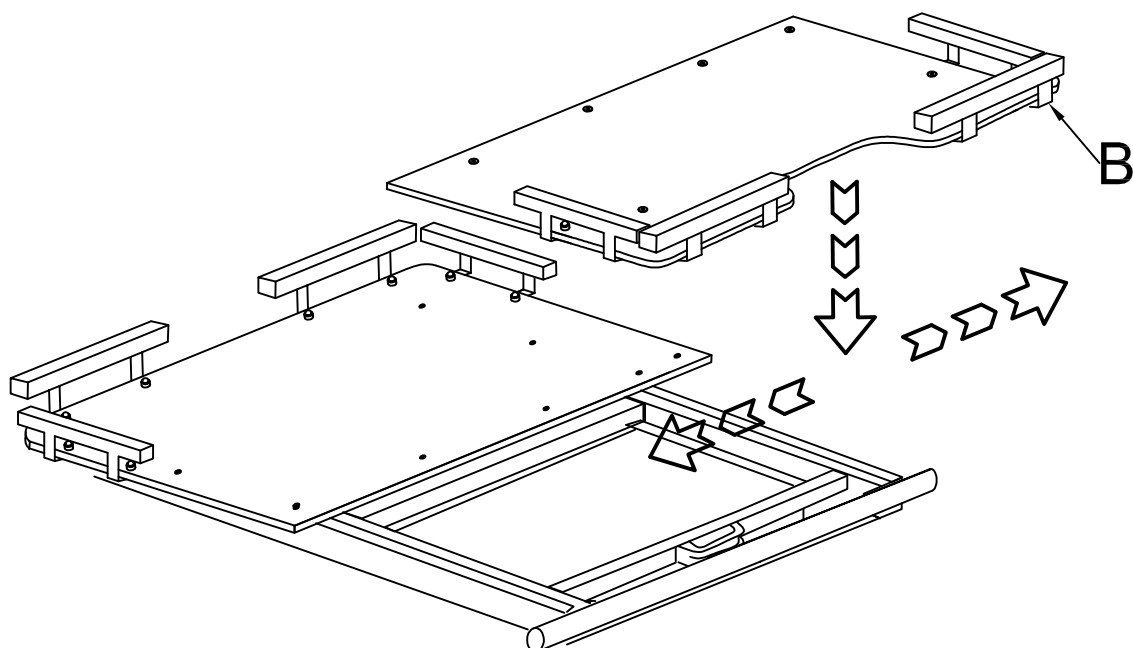

ATTENTION!

Please be sure that the platform brake is locked in one of five safety positions.
Unlocked platform is unstable and is able to move themselves!

MKT
Car-Technik

MKT Car-Technik Sp. z o.o.
ul. Spokojna 5
14-100 Ostróda
Poland
Telefon: +48 89-646-13-23
Fax: +48 89-646-13-24
Email: info.mkt@hoehn.pl

DR. HOHN
Die Formel für Fahrvergnügen

Dr. Höhn GmbH
Künzelsauer Str. 13
74653 Ingelfingen
Germany
Telefon: +49 7940 9202 41
Fax: +49 7940 9202 45
www.hoehn.de
Email: roadranger@hoehn.pl