



Rear Window Safety Guard / Heckscheibenschutzgitter

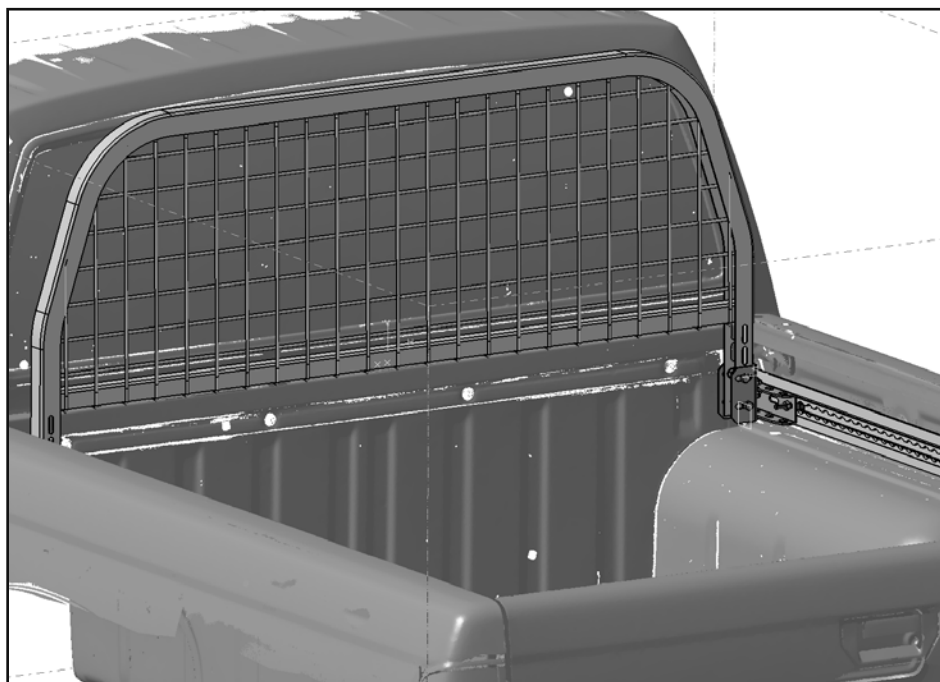

FITTING INSTRUCTIONS

Montageanleitung • Instructions de montage
Instrucciones de montaje • Manual

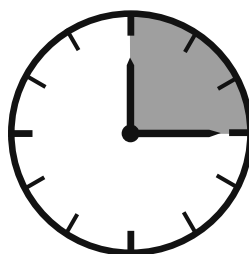

15 Minuten

Artikel-Nr:


00 5670 Steel black
00 5671 Mounting Set

Revision I: 13.10.2009


ROAD RANGER®

Rear Window Safety Guard / Heckscheibenschutzgitter




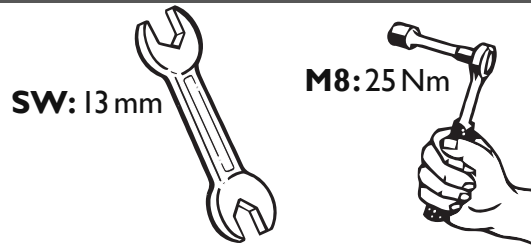

Required tools / Benötigte Werkzeuge / Outillage requis / Herramientas necesarias

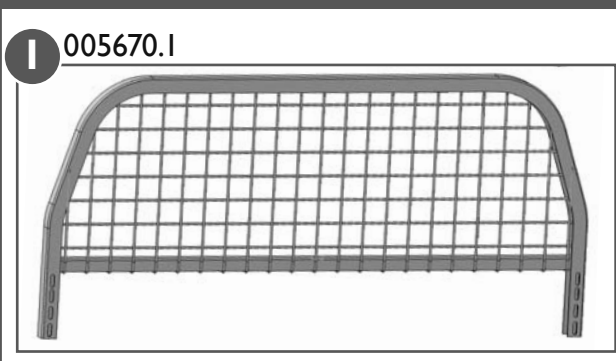


Parts list / Teileliste / Lista de accesorios




Standard Parts list / Normteileliste

a		M8x20; DIN 933	8x
b		M8; DIN 934	12x
c		Ø8; DIN 127	12x
d		Ø8,4; DIN 9021	20x
e		SW 13mm	20x

Mounting set 00 5671 / Montagesatz 005671

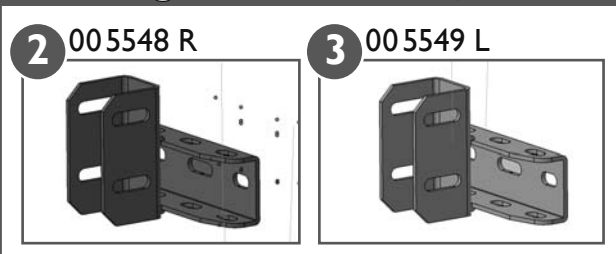

not included - seperate

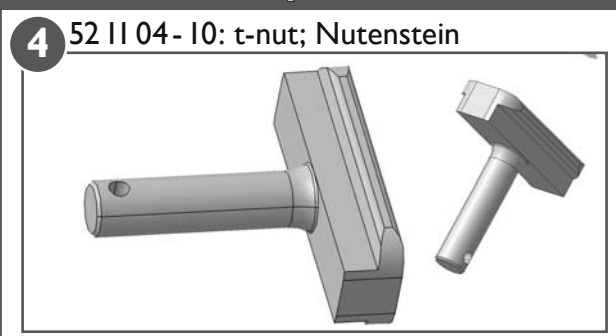

4x

Artikel-Nr:

00 5670 Steel black
00 5671 Mounting Set

Revision I: 13.10.2009

ROAD RANGER[®]
page/Seite 2

