

VOLKSWAGEN AMAROK 2023+ DOUBLE CABINE  
EVOS1600S

**ROAD RANGER®**

# ROAD RANGER ALUCOVER

MONTAGEANLEITUNG  
INSTALLATION INSTRUCTION

**ROAD RANGER®**

# ROAD RANGER®



















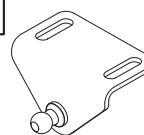







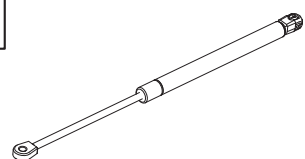
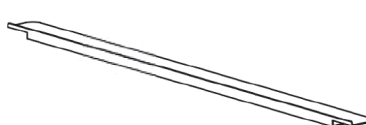


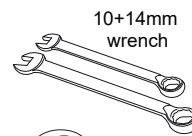



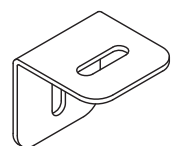


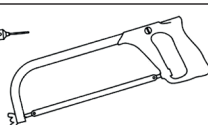
## INSTALLATION INSTRUCTION MANUAL

### VOLKSWAGEN AMAROK 2023+ DOUBLE CABINE

### EVOS1600S

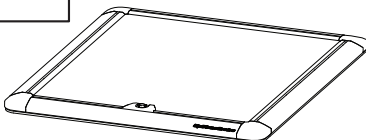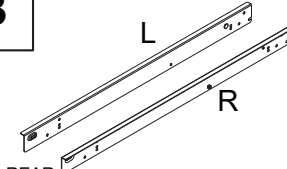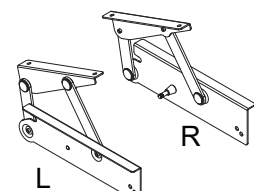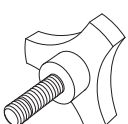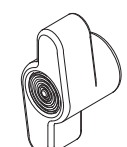**COVER EVOS1600S**


**KIT1600S-RLBF**
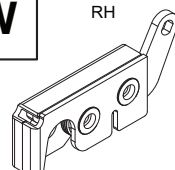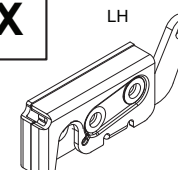
<b>A</b>  1X	<b>B</b>  1X	<b>C</b>  1X	<b>D</b>  2X		
<b>E</b>  2X	<b>F</b> BHC M6x30  6X	<b>G</b> Ø6.4x Ø20 x10 Nylon spacer  8X	<b>H</b> FHC M6x25  2X	<b>I</b>  x2 Incl. kit 607 2X	<b>J</b> M8 Nylstop Stainless Steel  x4 Incl. kit 607 4X
<b>K</b> Ø8 grower washer stainless steel  2X	<b>L</b> Latch Pin  2X	<b>M</b>  2X	<b>N</b> BHC M8x25 stainless steel  4X	<b>O</b> M6 Nylstop Stainless Steel  8X	<b>P</b> BHC M6x18  x12 Incl. kit 607 12X
<b>Q</b> Washer M6 Stainless steel  x12 Incl. kit 607 30X	<b>R</b>  Ø6 grower washer stainless steel x12 Incl. kit 607 12X	<b>AC</b>  4X	<b>T</b> Washer M8 Stainless Steel  x4 Incl. kit 607 10X	<b>U</b> 25x25 tape  1X	<b>V</b> BHC M6x16  2X
<b>W</b> RH  Incl. kit 607 1X	<b>X</b> LH  Incl. kit 607 1X	<b>Y</b> M5 Cable Bolt, Washer & Dome Nut  Incl. kit 607 2X	<b>Z</b>  Incl. kit 607 2X	<b>AA</b> Gas springs  2X	
<b>AB</b>  1X		<b>AD</b> <div><b>Note 1:</b> If at any stage of installation you find your sportlid to be an unacceptable fit please contact the manufacturer before continuing.</div> <div><b>Note 2:</b> If required, use Under Rail Bed Liner only. NOT FOR USE WITH OTHER RAIL BED LINER!</div> <div><b>Required Tools :</b>     BLACK SILICONE  </div>			
<b>AE</b>  2X	<b>AF</b>	<b>AG</b>			
<b>OPTIONAL</b>    Ø5mm					


**Note 1:** If at any stage of installation you find your sportlid to be an unacceptable fit please contact the manufacturer before continuing.

**Note 2:** If required, use Under Rail Bed Liner only.  
NOT FOR USE WITH OTHER RAIL BED LINER!

#### Required Tools :

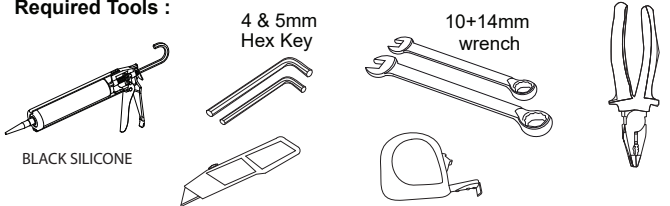


#### OPTIONAL

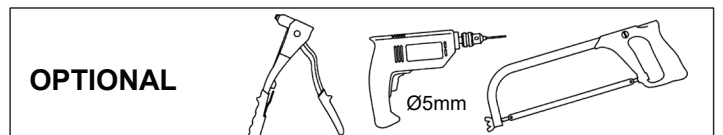



Fitting Kit Number	Product	Revision	Date	Page
EVOS1600S	VOLKSWAGEN AMAROK	3.0	15.07.2024	1

1


Remove ladder rack

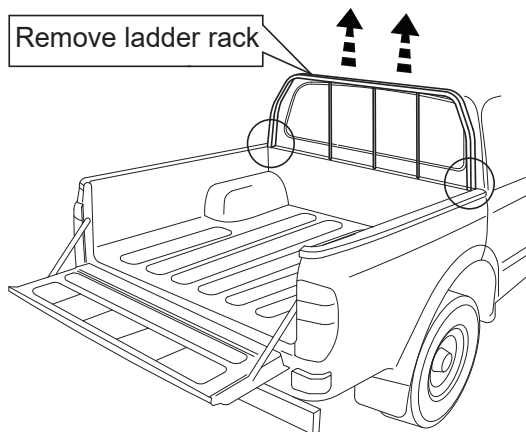

2



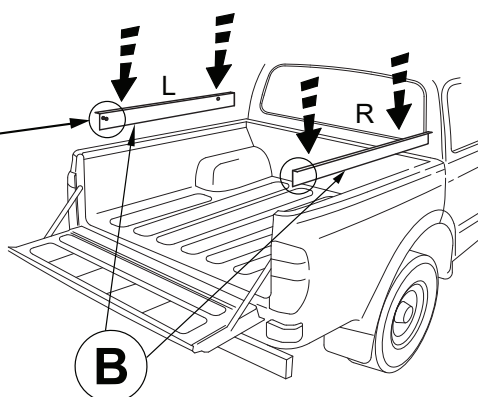
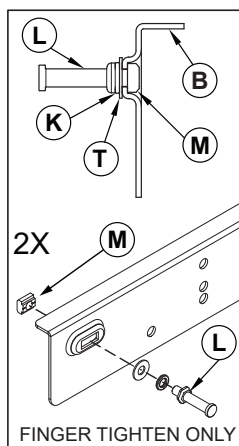


3

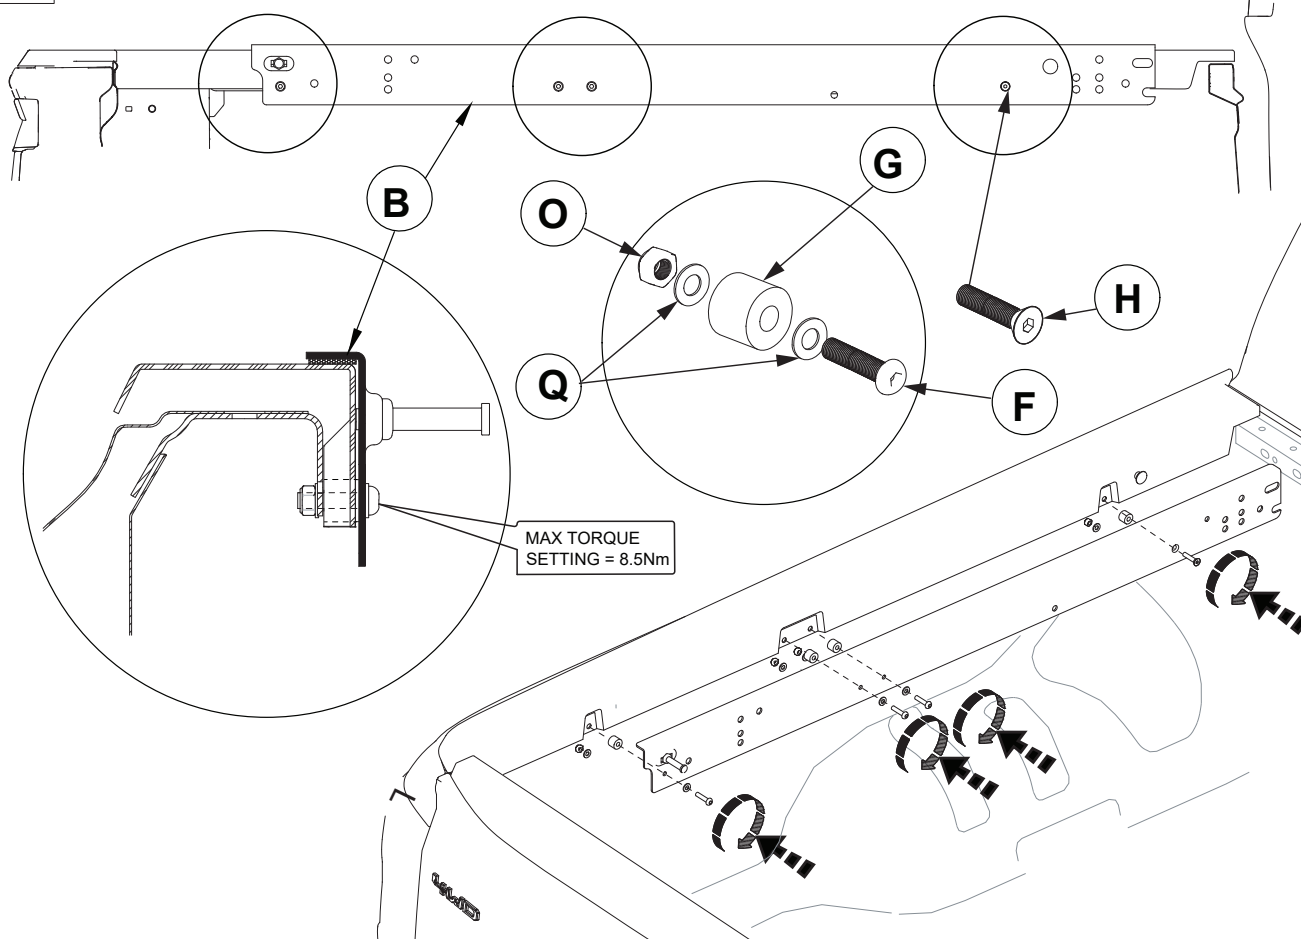


**4**

Diagram 4 illustrates the step of attaching the front of the seat to the car body. The seat is shown being lowered into the vehicle. Callout **AE** points to a bolt and washer being inserted into the front of the seat. Callout **N** points to the washer. Callout **T** points to the seat's front rail. Callout **U** points to a coiled cable being attached to the seat's front rail. Arrows indicate the direction of assembly.

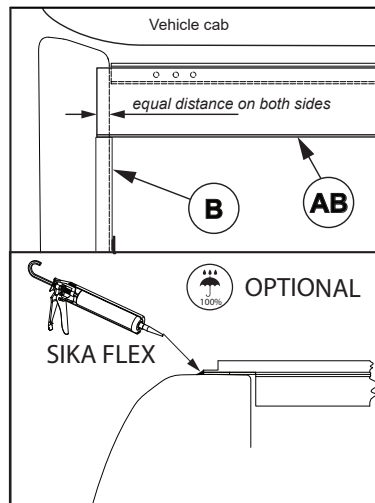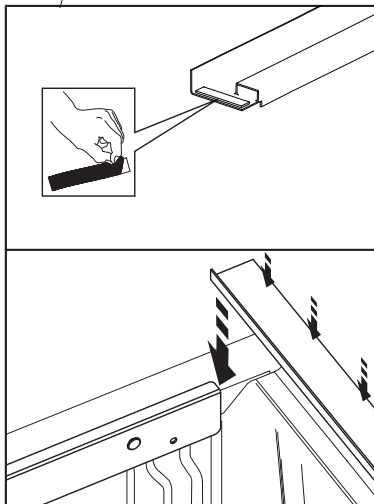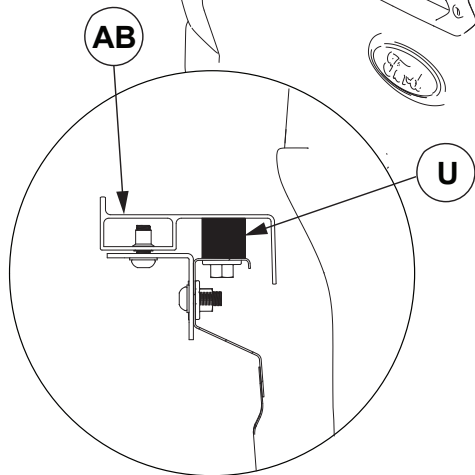


Fitting Kit Number	Product	Revision	Date	Page
<b>EVOS1600S</b>	<b>VOLKSWAGEN AMAROK</b>	<b>3.0</b>	<b>15.07.2024</b>	<b>3</b>

6


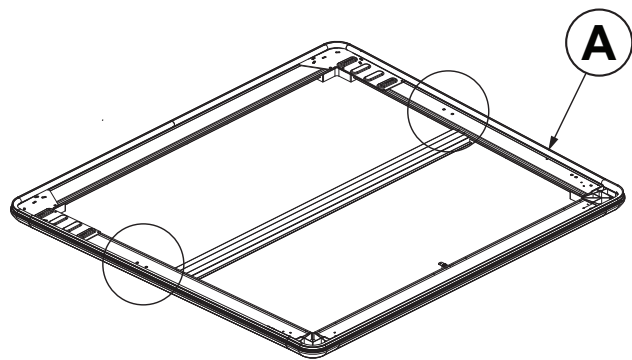


MAX TORQUE  
SETTING =  
8.5 Nm or  
6.3 ft.lb

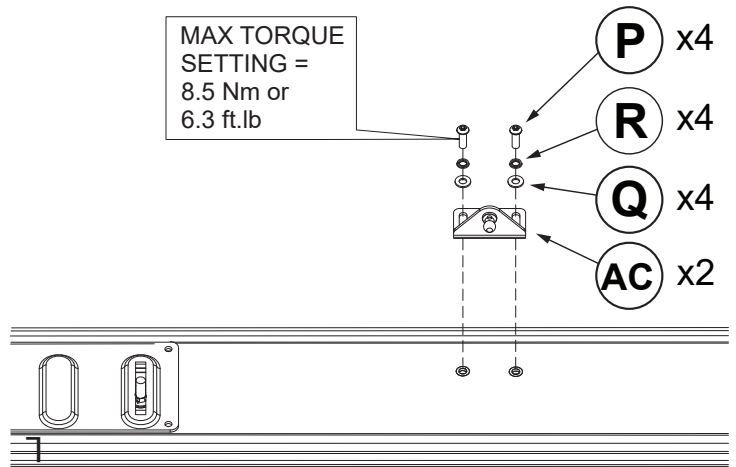


7

MAX TORQUE  
SETTING =  
8.5 Nm OR  
6.3 ft.lb

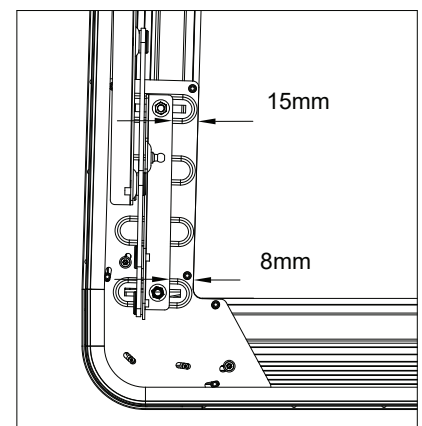
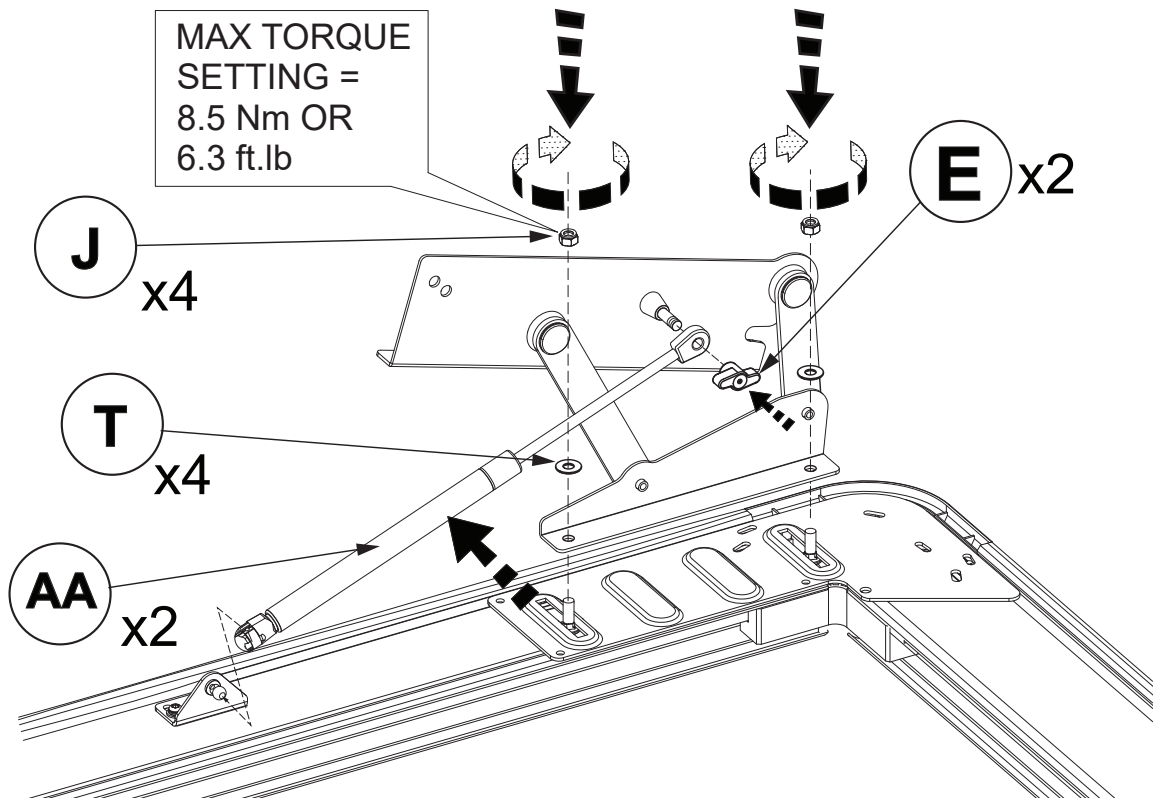





8

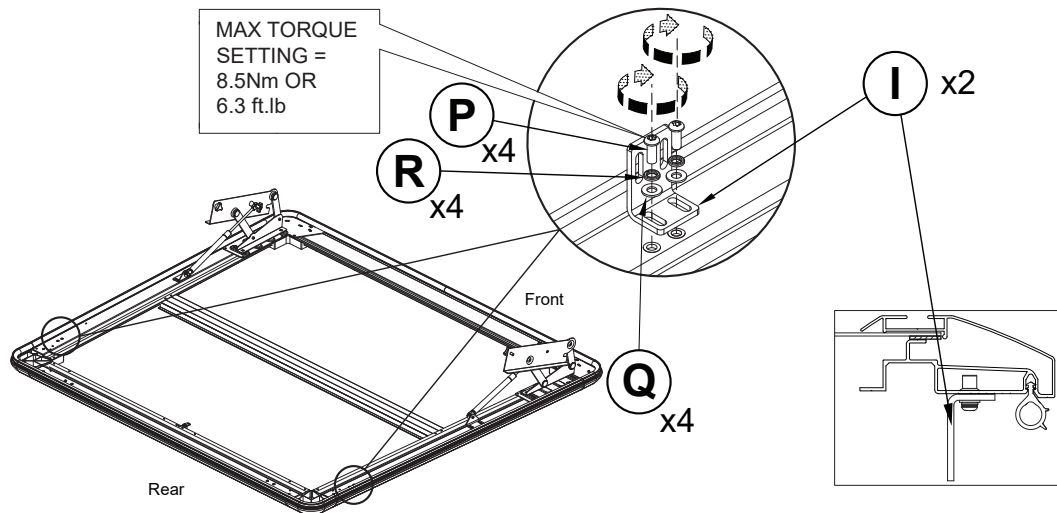


9

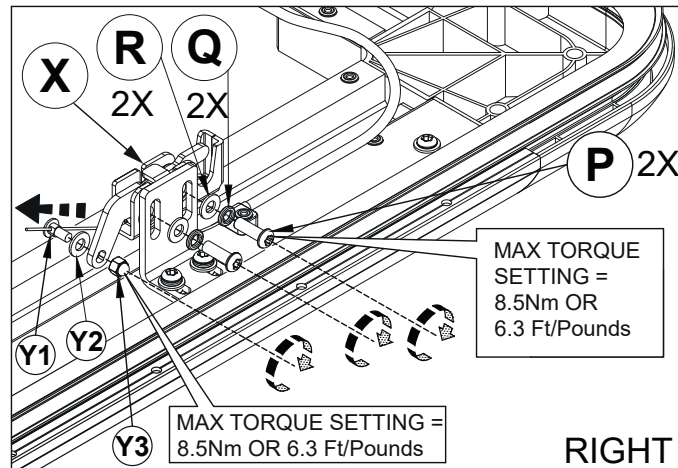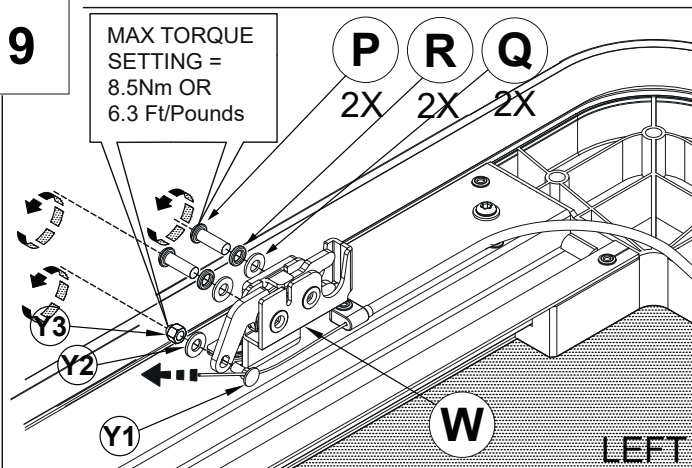



10

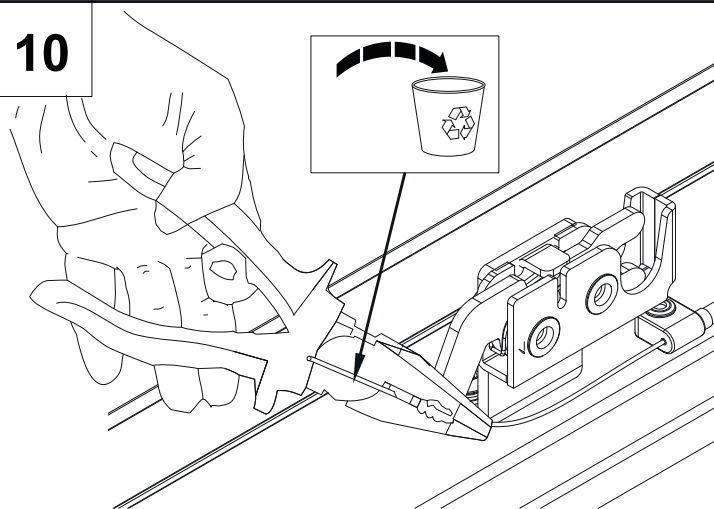


11

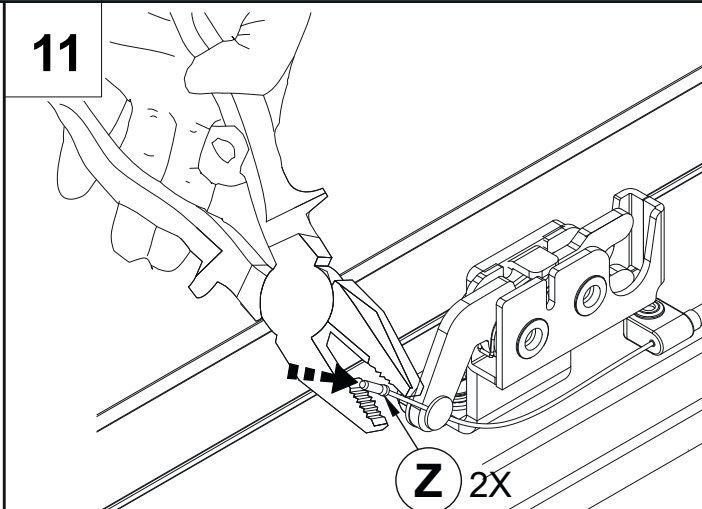


12

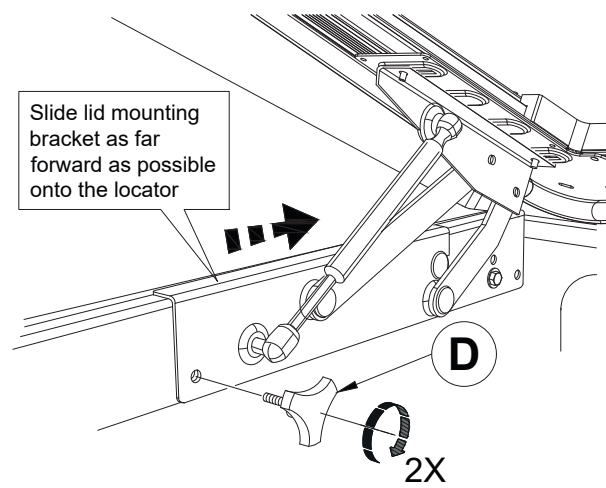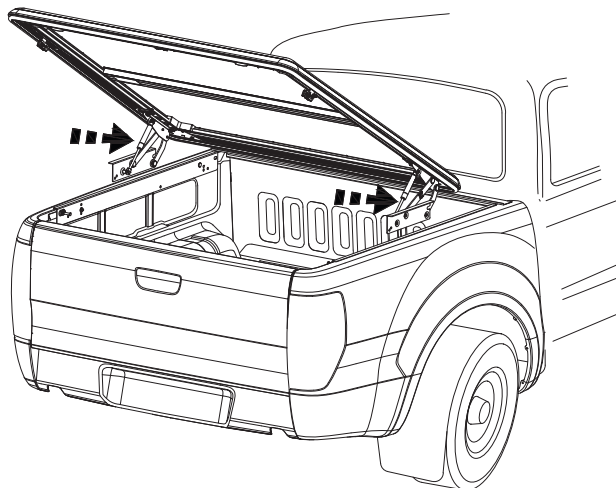


13

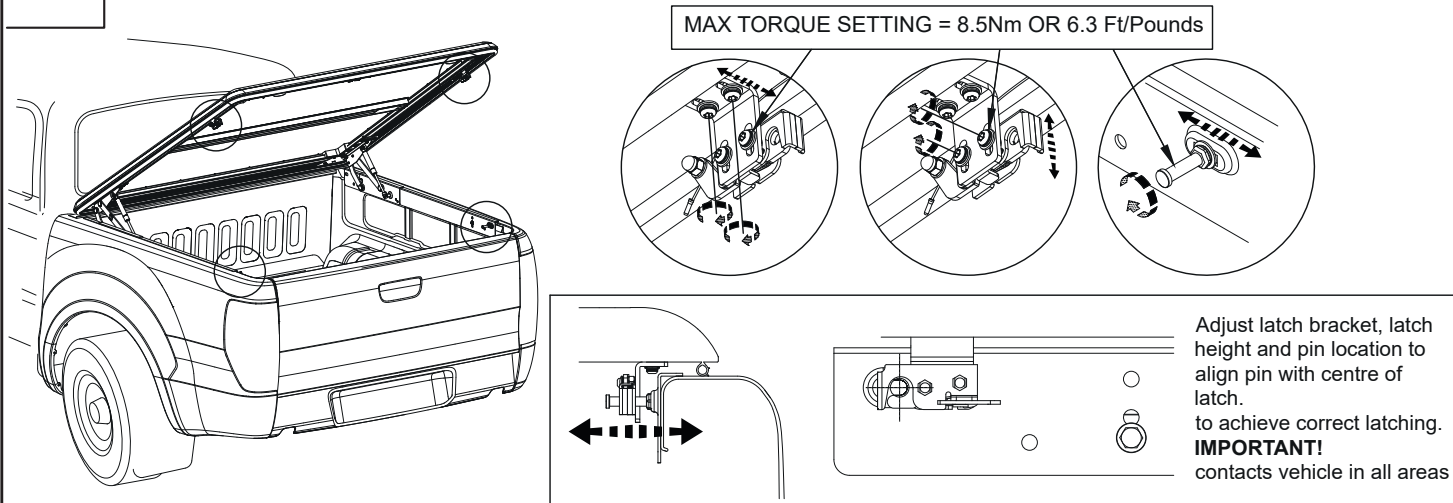

14

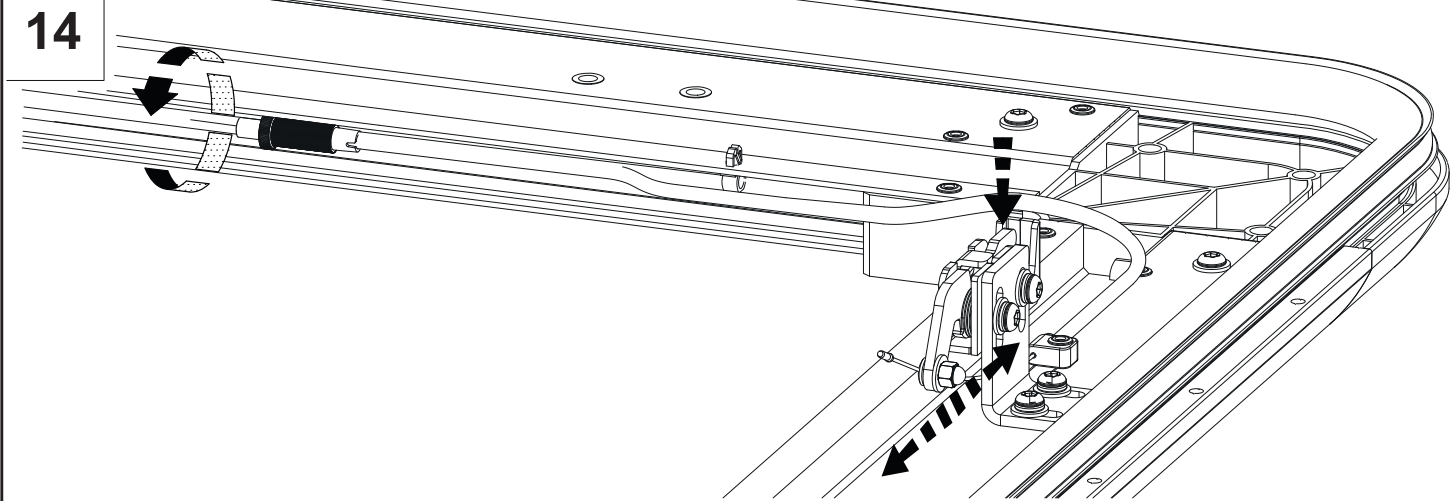


15

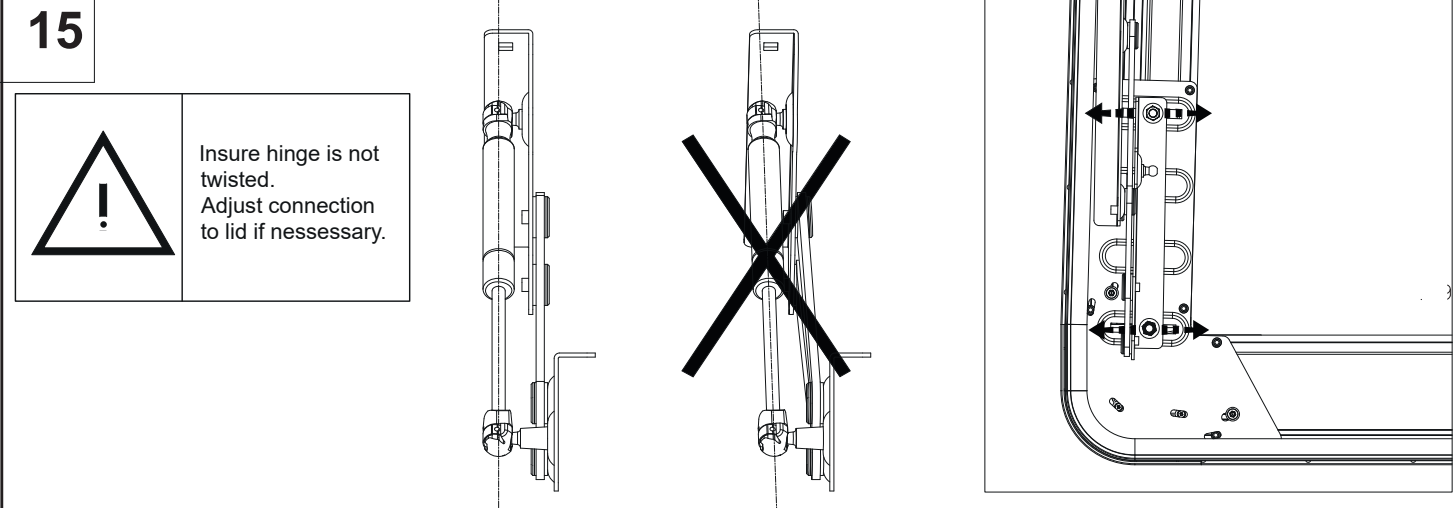


Fitting Kit Number	Product	Revision	Date	Page
<b>EVOS1600S</b>	<b>VOLKSWAGEN AMAROK</b>	<b>3.0</b>	<b>04.07.2024</b>	<b>6</b>



16

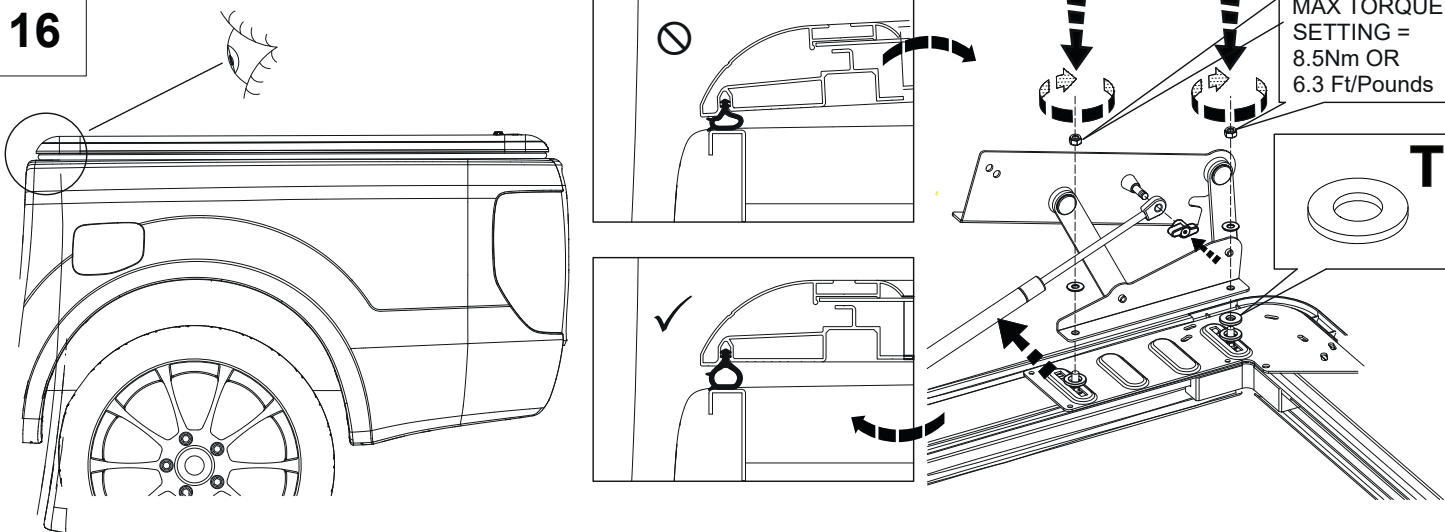

17

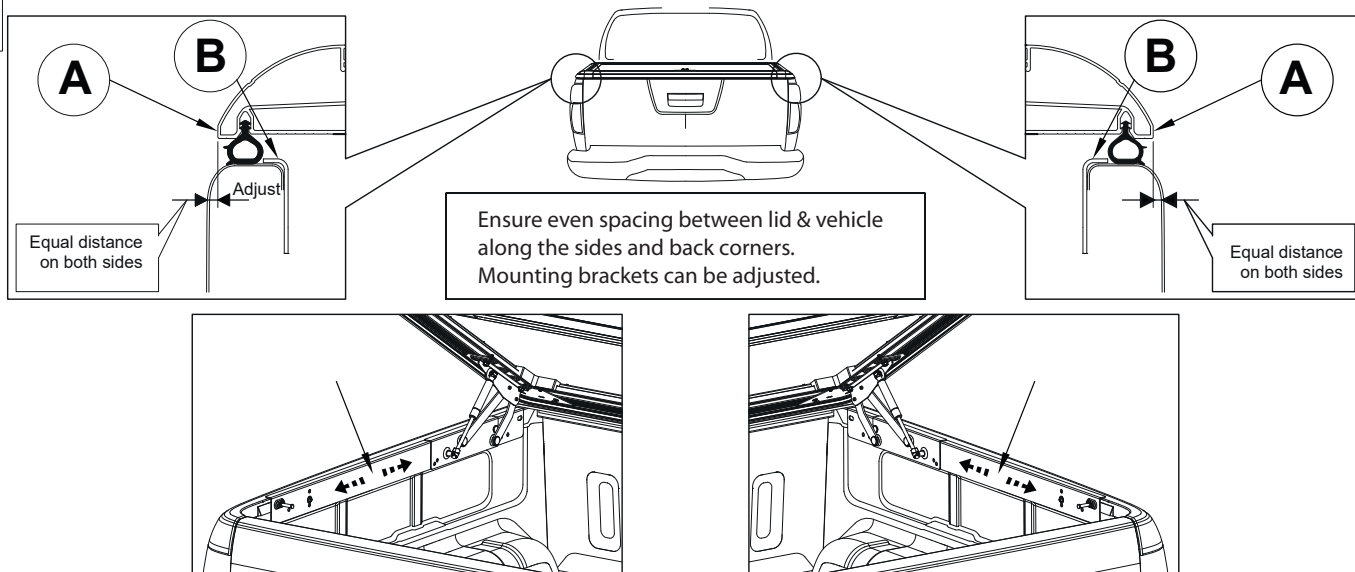

# ROAD RANGER®



## CAUTION!

- NEVER allow people or animals under the closed cover
- Do not place unsealed solvents or chemicals under the cover
- Do not stand or place heavy objects on the cover
- Do not open lid when under load.
- Close the cover before operating the vehicle
- Do not allow oil, solvents or chemicals to contact the cover
- Clean only with a mild detergent and water solution

**After installation carefully and thoroughly clean all debris from the inside of the cargo box.  
Retain these instructions for future reference**

**ROAD RANGER®**

