Vehicle Tub Sealing Kit Fitting Instruction for Nissan Navara NP300 2015+

Part # SLVS06 / 10055905

Instruction # 37800006 (1 of 2) / 10056018

READ INSTRUCTIONS CAREFULLY BEFORE COMMENCING THIS ACTIVITY.

General Notes

To aid in installation the correct order of accessory installation needs to be observed:

- 1. Install all electrical components first.
- 2. Install Vehicle Tub Sealing Kit.
- 3. Install vehicle tub protective products such as tub liners*.
- 4. Install styling bar onto Sportlid.
- 5. Install the Sportlid Fitting Kit.
- 6. Install the Sportlid.
- 7. Install any additional accessories such as roof racks.

*Sportlid is compatible with under rail and Sport Guard style tub liners. Some trimming may be required. OEM liner compatibility cannot be guaranteed. Please contact your dealer for more information.

- · Read through the fitting instructions before installation of accessory.
- Always install the accessory following the fitting instructions. Failure to do so may cause damage to the vehicle or the accessory and void the warranty.
- Ensure all recyclable discarded vehicle/accessory components and packaging are disposed following local recycling regulations.
- It is always recommended that this accessory is fitted by a qualified Technician.
- Safely store and protect any removed vehicle components.
- Ensure all bare metal surfaces are protected using Automotive Bare Metal Primer and touch-up paint.
- Remove all metal swarf and dust from all vehicle surfaces if surface is used for accessory installation.
- Ensure all fasteners are torqued to the specifications as per instruction.
- Apply any adhesives to the vehicle only when the surface temperature is between 20°C to 40°C.
- Recommended all smooth lids are painted. Failure to paint lid will void the warranty.

Rev 2.0 - 02/07/2020

37800006 / 10056276

Page 2 of 8

READ INSTRUCTIONS CAREFULLY BEFORE COMMENCING THIS ACTIVITY.

General Vehicle and Accessory Warranty Notes and Cautions

- For correct installation and proper operation of the vehicle and accessory we recommend this accessory is fitted by a qualified Technician.
- During the accessory fitment ensure all automotive safety practices and regulations are followed.
- Do not modify the vehicle in any way other than specified in these Accessory Fitting Instructions as this may void the warranty.

Safety Notes

- Check that all work practises comply with safety standards.
- It is advisable to seek assistance from another person when lifting heavy components.
- While using power tools ensure safe procedures are followed.
- Appropriate clothing & PPE must be worn.



Rev 2.0 - 02/07/2020

37800006 / 10056276

READ INSTRUCTIONS CAREFULLY BEFORE COMMENCING THIS ACTIVITY.

Тоо	Tools Required							
No.	Description	Image	No.	Description	Image			
1	Power drill & 5mm drill bit		2	Clear non-acetic silicone				
3	Metric ruler		4	Cleaning rags	- Martin			
5	Rivet Gun		6					

Rev 2.0 - 02/07/2020

37800006 / 10056276

Page 4 of 8

Vehicle Tub Sealing Kit Fitting Instruction for Nissan Navara NP300 2015+

Part # SLVS06 / 10055905

READ INSTRUCTIONS CAREFULLY BEFORE COMMENCING THIS ACTIVITY.


Kit Contents- Hardware						
No.	Item Description	Quantity	Image	Part Number		
1	Nissan Sealing Channel (1490mm)	1		10055917		
2	Pop rivets 4X18MM	4		10053982		
3	3M Surface Primer	2	refet	10051996		
4	Alcohol wipes 2			10051664		

Rev 2.0 - 02/07/2020

37800006 / 10056276

Page 5 of 8

READ INSTRUCTIONS CAREFULLY BEFORE COMMENCING THIS ACTIVITY.

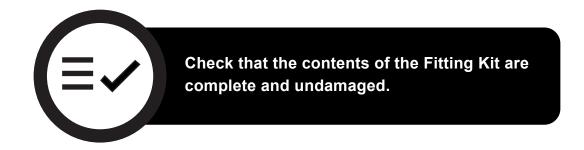




Rev 2.0 - 02/07/2020

37800006 / 10056276

READ INSTRUCTIONS CAREFULLY BEFORE COMMENCING THIS ACTIVITY.

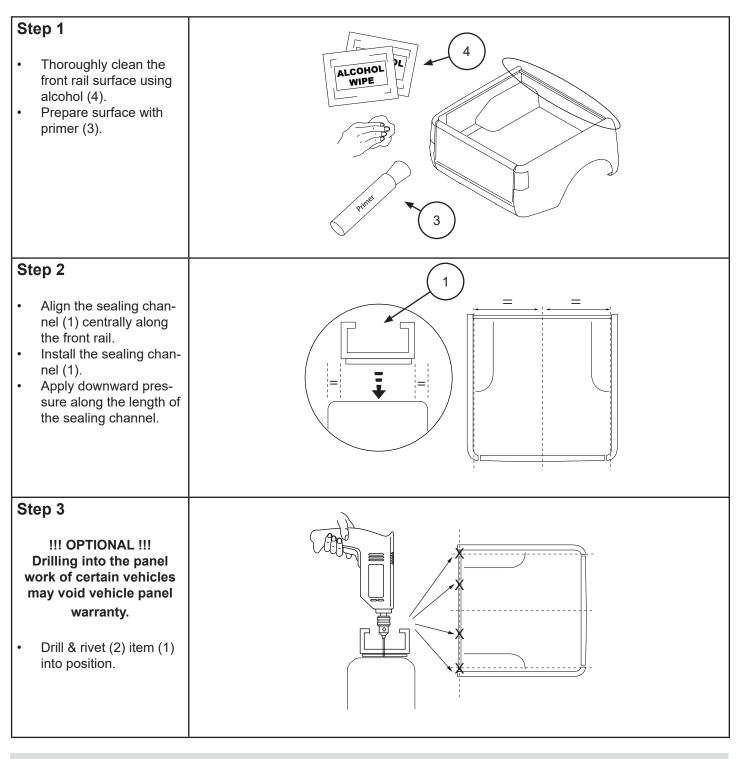


Rev 2.0 - 02/07/2020

37800006 / 10056276

Page 7 of 8

READ INSTRUCTIONS CAREFULLY BEFORE COMMENCING THIS ACTIVITY.

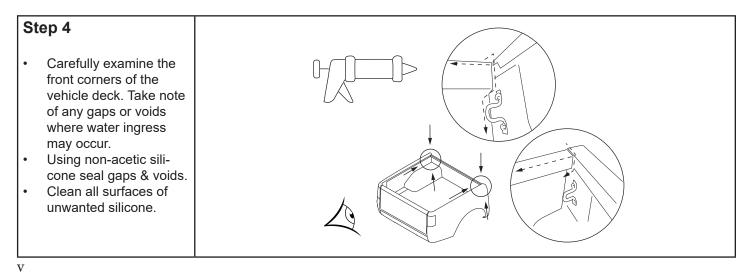

Installation complete. Please place these fitting instructions inside the owners manual wallet.

Rev 2.0 - 02/07/2020

37800006 / 10056276

Page 8 of 8