
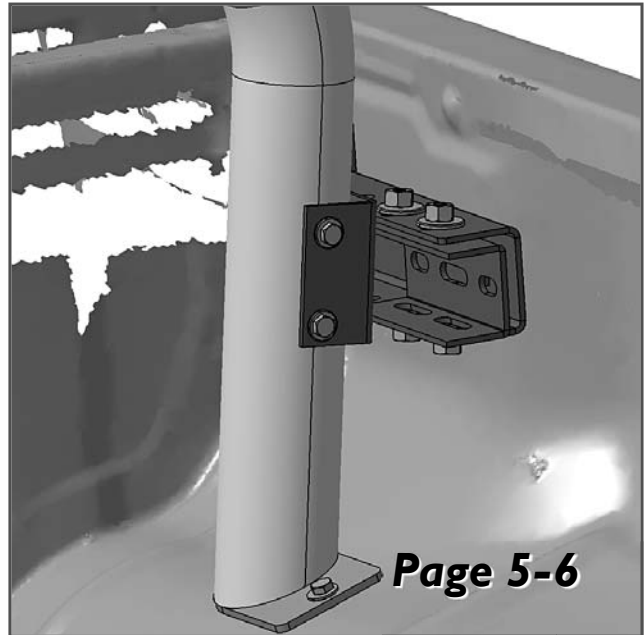



# Load Bar 60 front, Tragbügel 60 vorn

Isuzu D-Max Double Cab / Space Cab

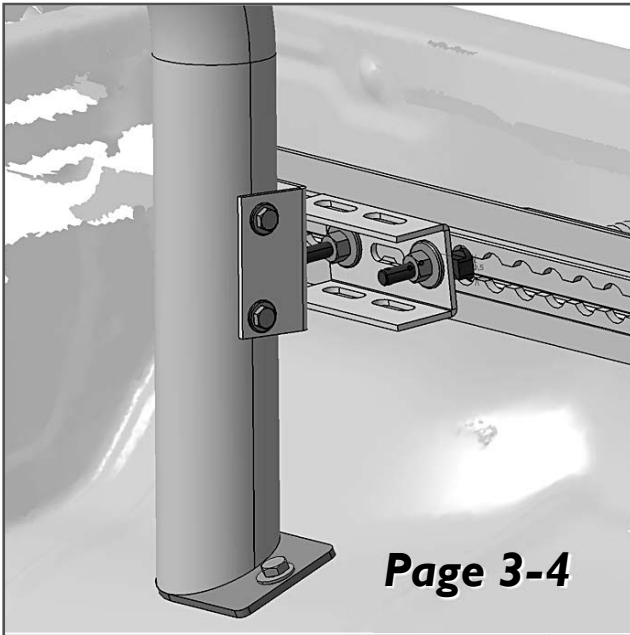

## FITTING INSTRUCTIONS

Montageanleitung • Instructions de montage  
Instrucciones de montaje • Manual

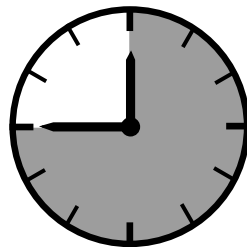

45 Minuten

### Artikel-Nr:

193 4066 Stainless Steel  
193 5066 Steel black  
193 9066 Mounting Set




Revision 4: 10.8.2010

**ROAD RANGER®**


# Load Bar 60 front, Tragbügel 60 vorn

## Isuzu D-Max Double Cab / Space Cab


### Required tools / Benötigte Werkzeuge / Outillage requis / Herramientas necesarias

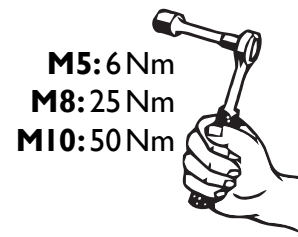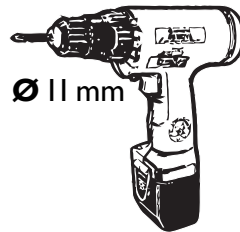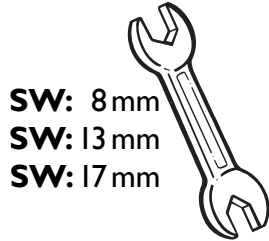


### Parts list / Teileliste / Lista de accesorios

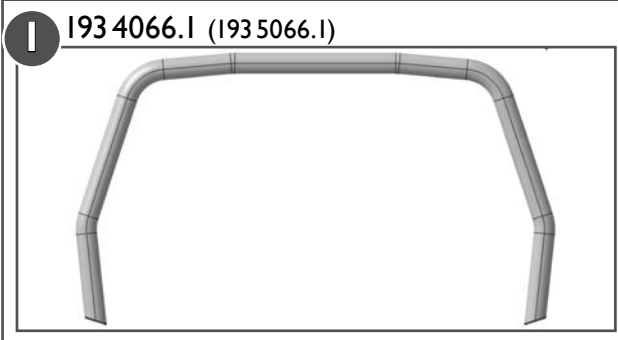

### Mounting set 193 9066 / Montagesatz 193 9066

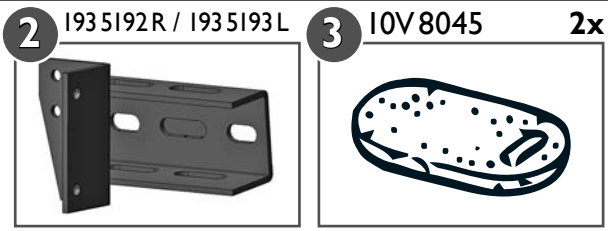

### extension loadbar 1934266 - Space Cab -

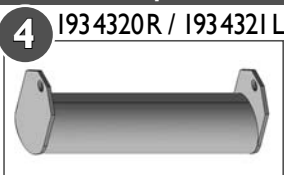

<b>o</b>		M8x25; DIN 912	2x
<b>p</b>		M10x25; DIN 933	2x
<b>q</b>		M10; DIN 934	2x
<b>r</b>		$\varnothing$ 8; DIN 127	2x
<b>s</b>		$\varnothing$ 10; DIN 127	2x
<b>t</b>		$\varnothing$ 8,4; DIN 125	2x
<b>u</b>		$\varnothing$ 10,5; DIN 9021	4x
<b>v</b>		SW 17mm	2x

### not included: - separate -










### Standard Parts list / Normteilleiste







<b>a</b>		M5x16; DIN 7500	<b>8x</b>
<b>b</b>		M8x35; DIN 933	<b>8x</b>
<b>c</b>		M10x40; DIN 933	<b>2x</b>
<b>d</b>		M8; DIN 934	<b>8x</b>
<b>e</b>		M10; DIN 985	<b>2x</b>
<b>f</b>		$\varnothing$ 8; DIN 127	<b>8x</b>
<b>g</b>		$\varnothing$ 8,4; DIN 9021	<b>16x</b>
<b>h</b>		$\varnothing$ 10,5; DIN 9021	<b>2x</b>
<b>i</b>		$\varnothing$ 10,5; DIN 125	<b>2x</b>
<b>k</b>		SW 13mm	<b>8x</b>
<b>m</b>		SW 17mm	<b>2x</b>
<b>n</b>		$\varnothing$ 4,0	<b>1x</b>

### Artikel-Nr:

193 4066 Stainless Steel  
193 5066 Steel black  
193 9066 Mounting Set

Revision 4: 10.8.2010

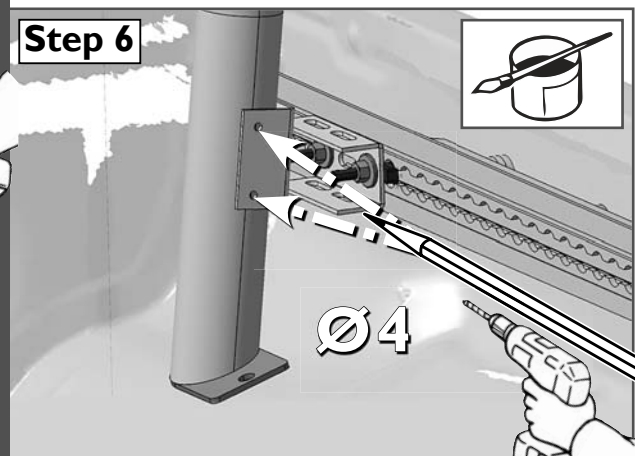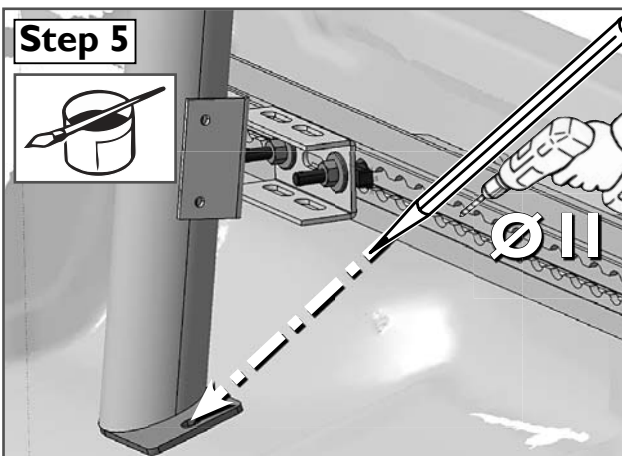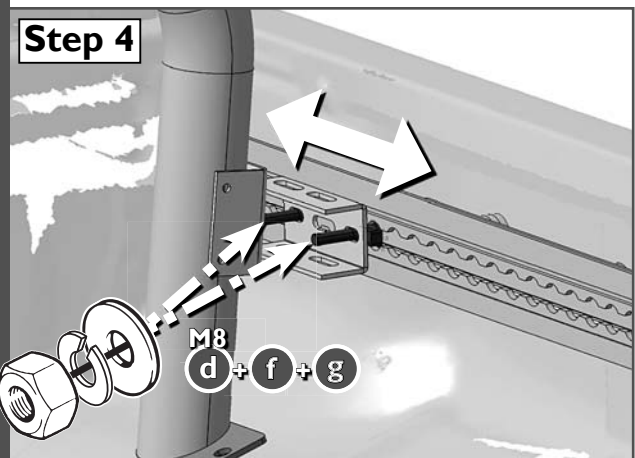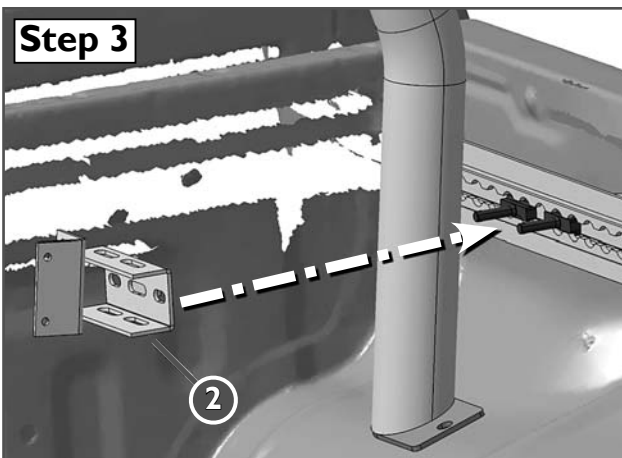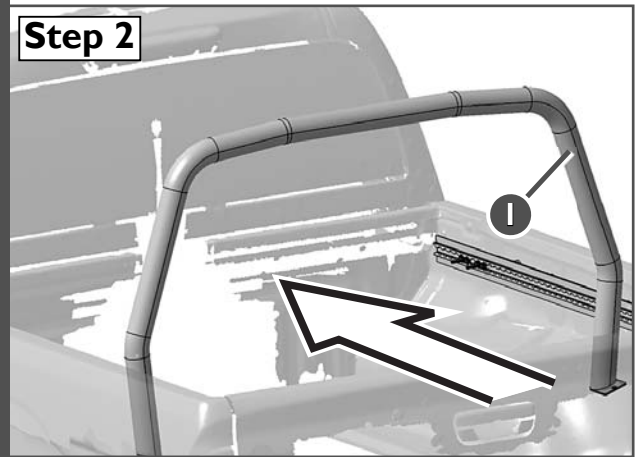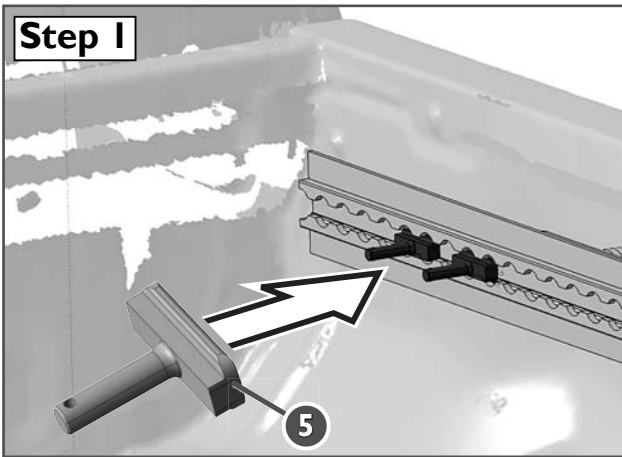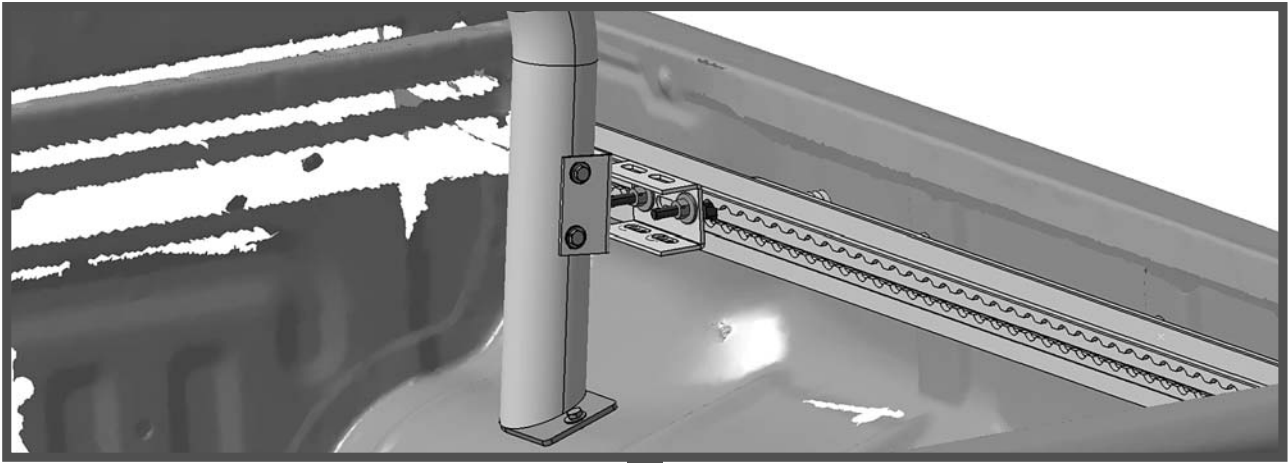

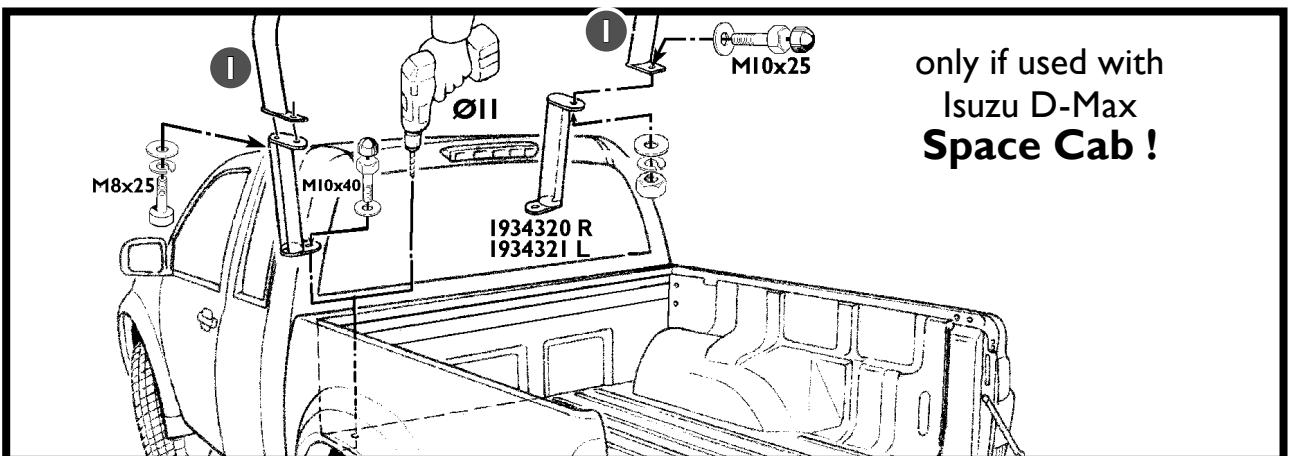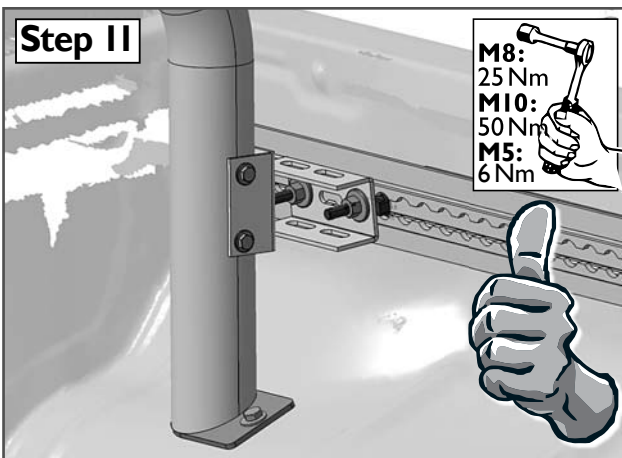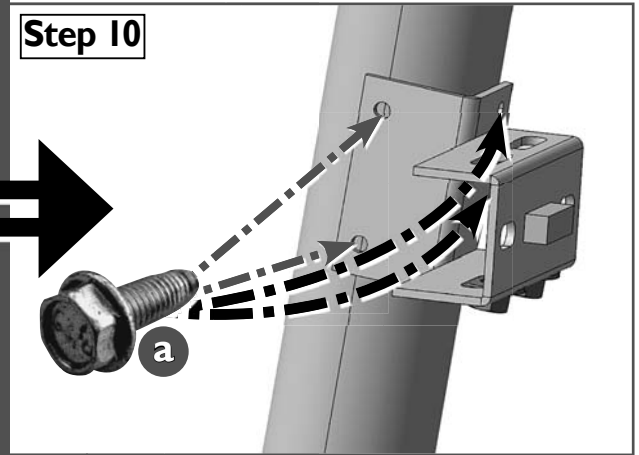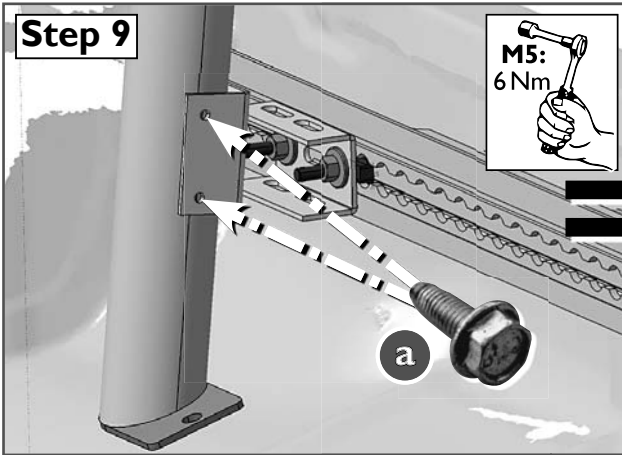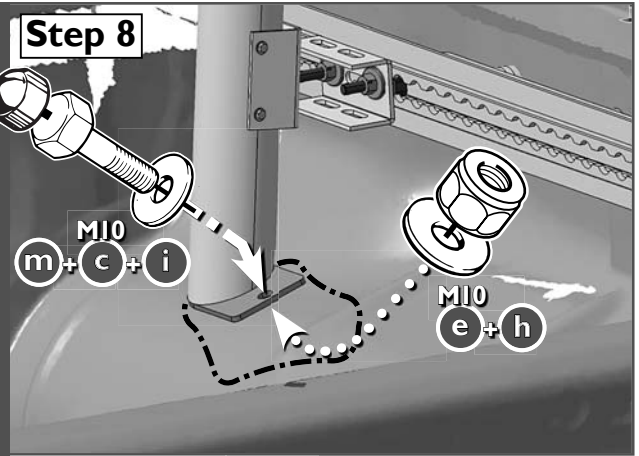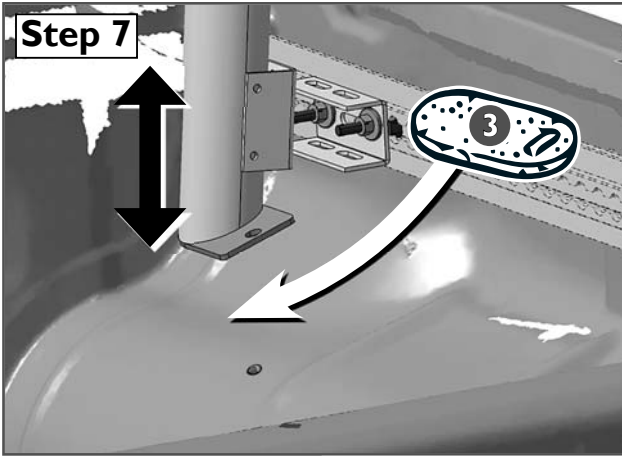

**Artikel-Nr:**  
193 4066 Stainless Steel

**Revision 4:** 10.8.2010

**ROAD RANGER®**



