




# ROAD RANGER®

PICKUP-ACCESSORIES

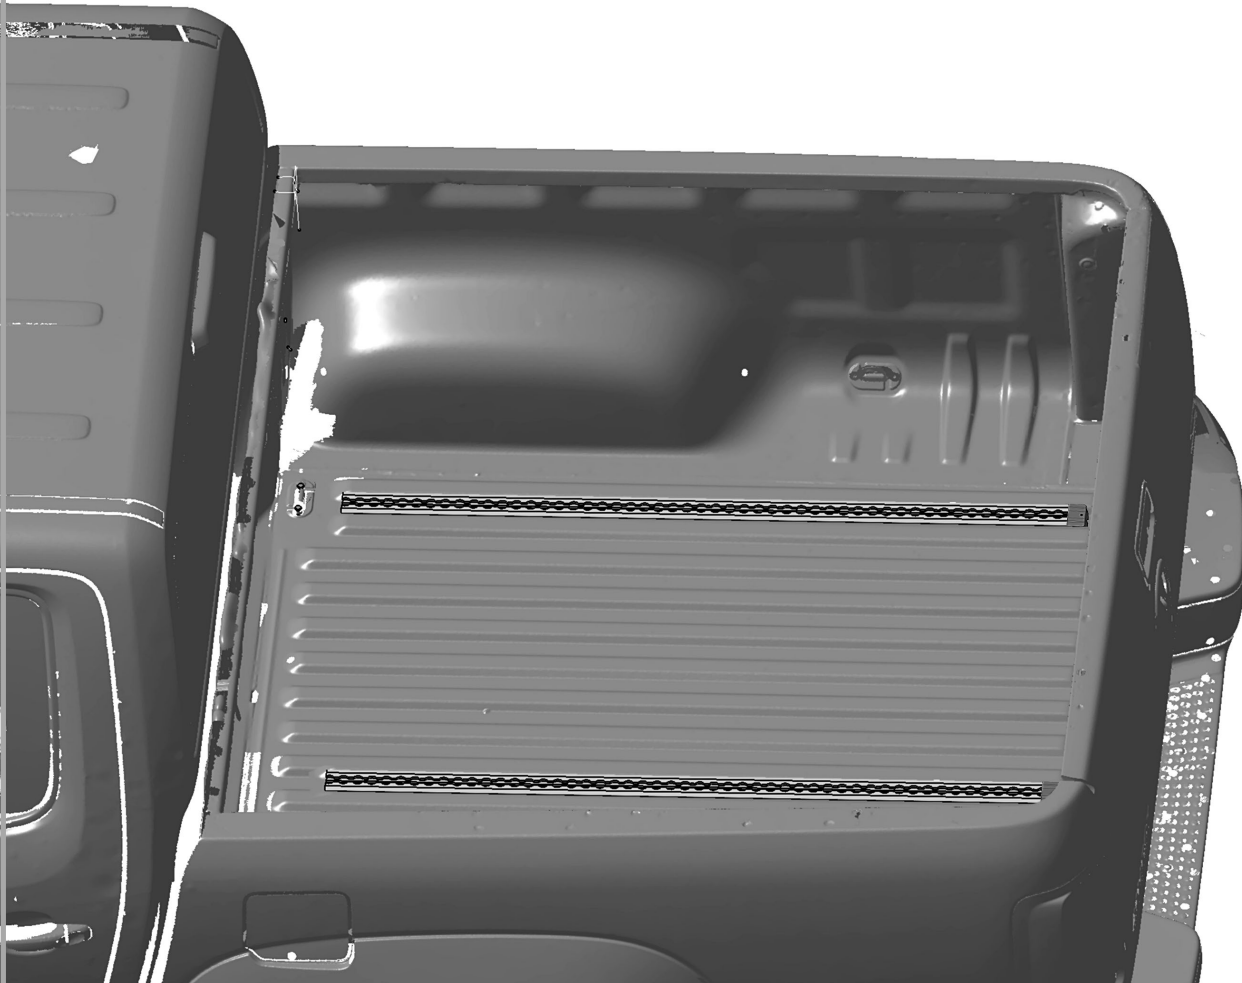


## MONTAGEANLEITUNG

ASSEMBLING INSTRUCTIONS

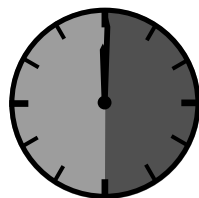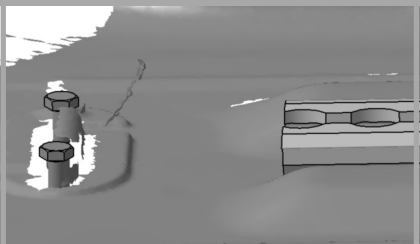

90 Minutes

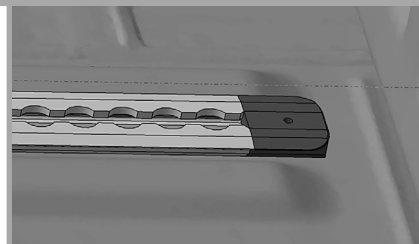

MOUNTING ROAD RANGER BOTTOMRAIL /  
MONTAGE ROAD RANGER-BODENSCHIENE


Article-Nr:  
600 03 09

WWW.ROADRANGER.DE






# ROAD RANGER®

## PICKUP-ACCESSORIES

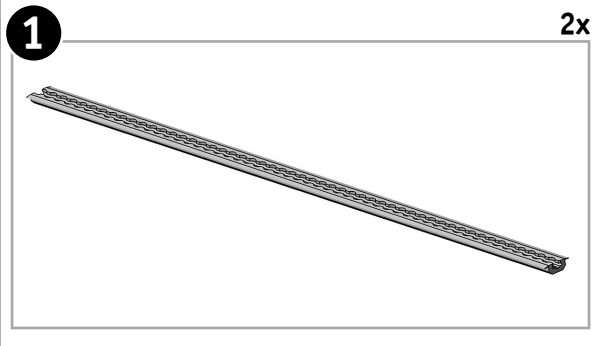
### Parts list/Teileliste/Lista de accesorios



### Standard Parts list/Normteileliste

<b>a</b>		M5x30; DIN 7991	20x
<b>b</b>		M5; ähnlich DIN 6923	20x
<b>c</b>		Ø 5,3; DIN 9021	20x
<b>d</b>		Ø 3,3	1x
<b>e</b>		Ø 3,3; DIN	2x


### Mounting set 005671 / Montagesatz 005671

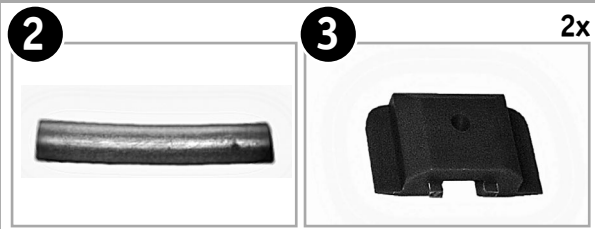

## benötigte Werkzeuge

ASSEMBLING INSTRUCTIONS: REQUIRED TOOLS

SW: 8 mm

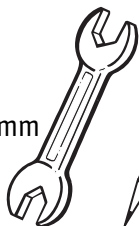


M5: 3 mm



M5: 6 Nm










Ø 3,3 mm  
Ø 6 mm

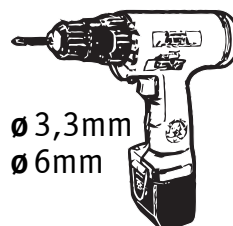









**MOUNTING ROAD RANGER BOTTOMRAIL /  
MONTAGE ROAD RANGER-BODENSCHIENE**

**Article-Nr:**  
600 03 09

WWW.ROADRANGER.DE

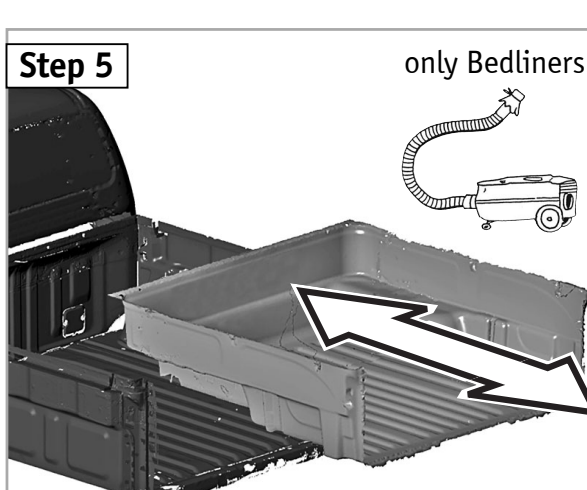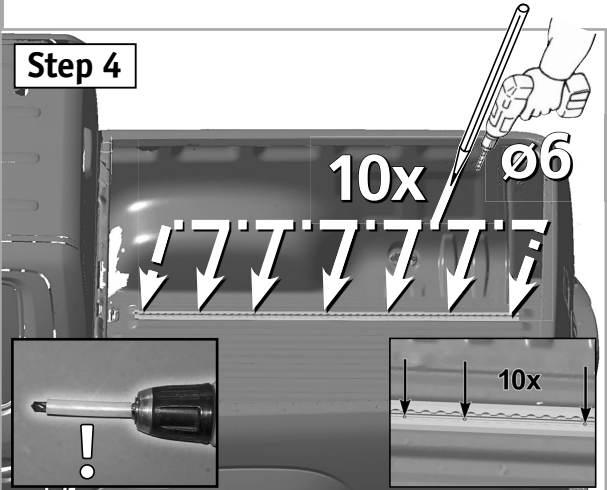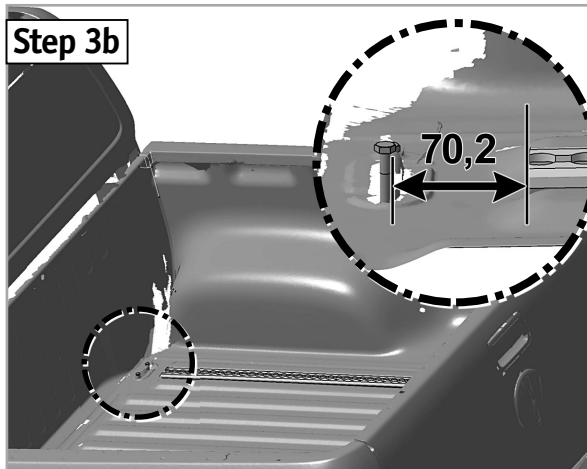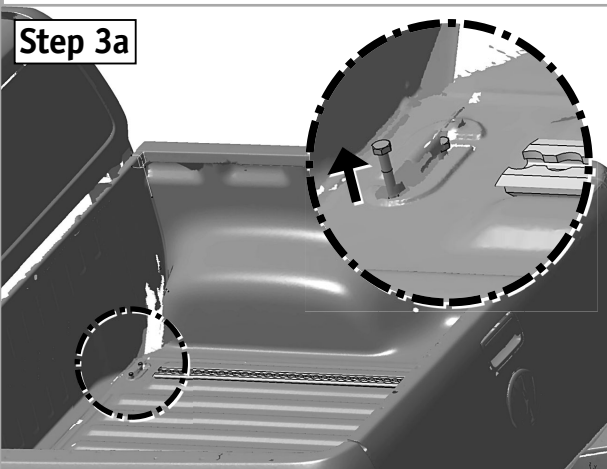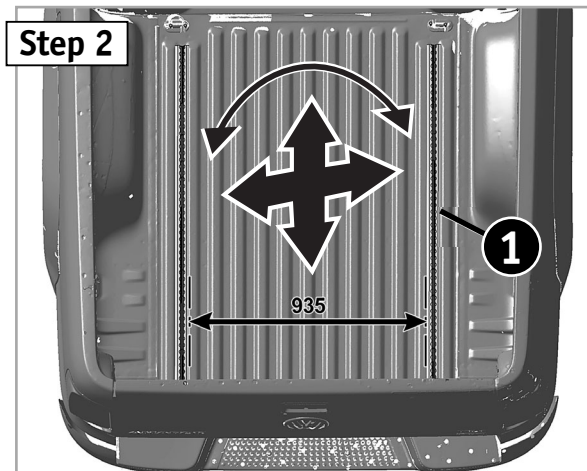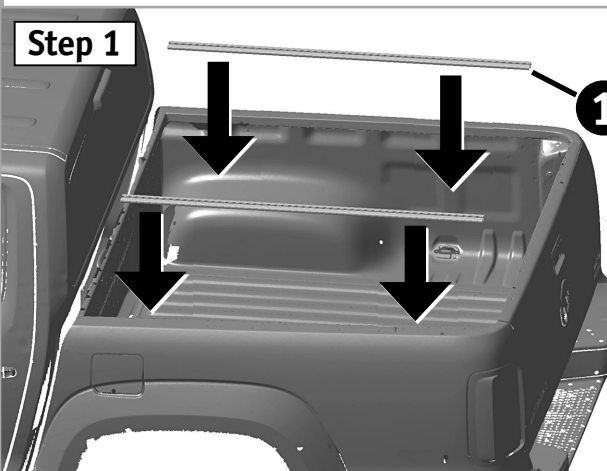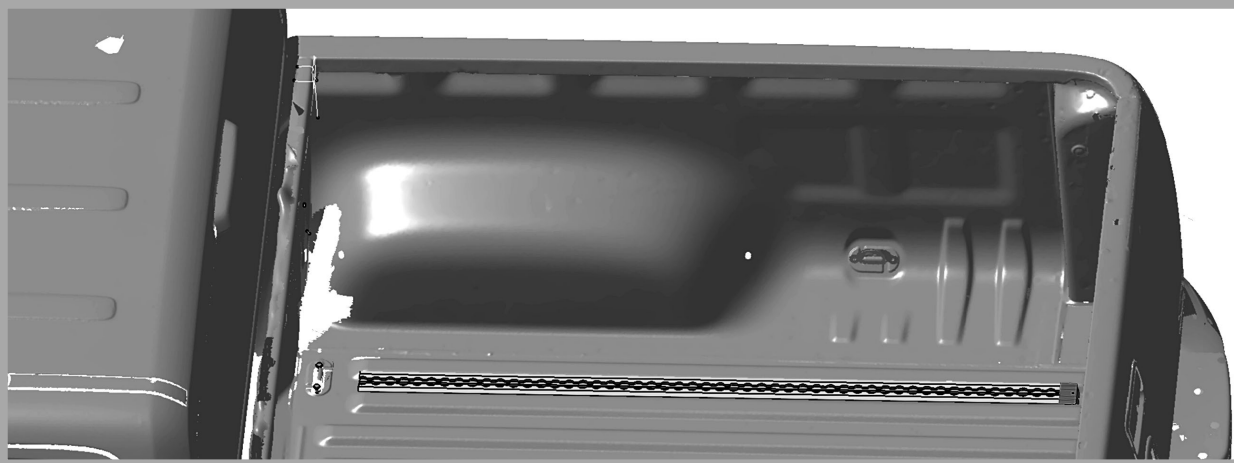

**Article-Nr:**  
600 03 09

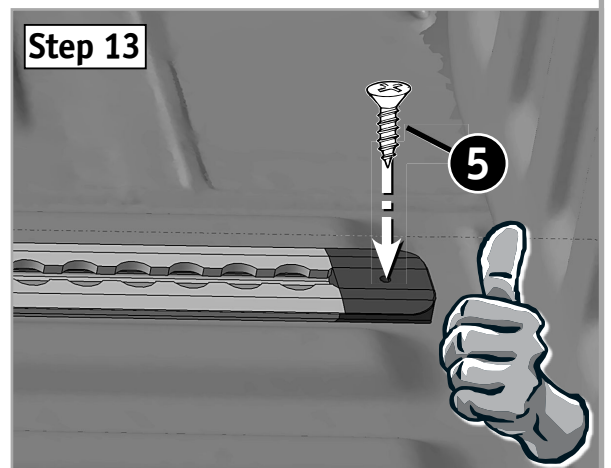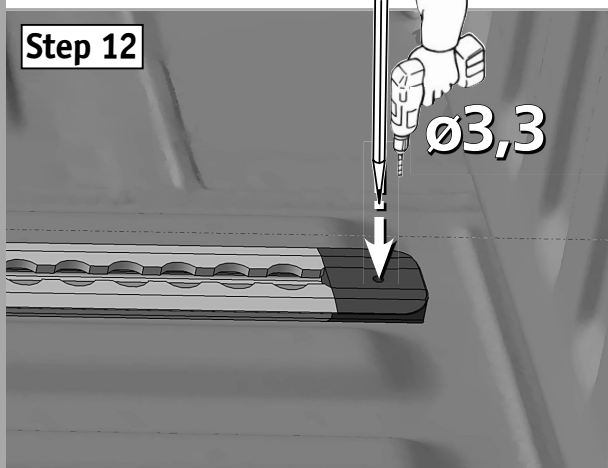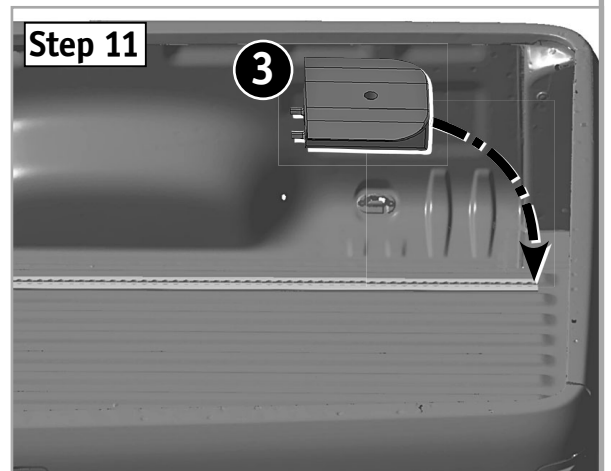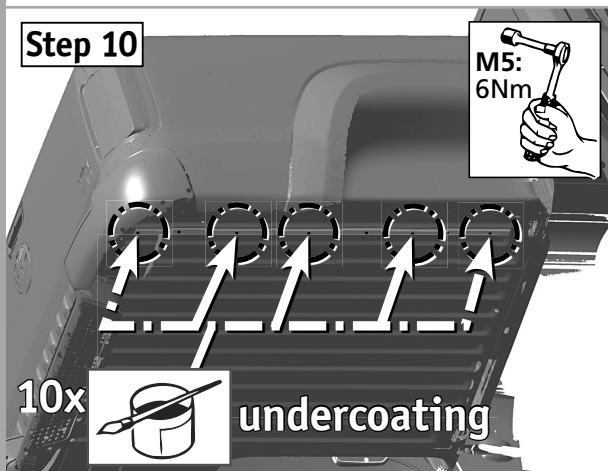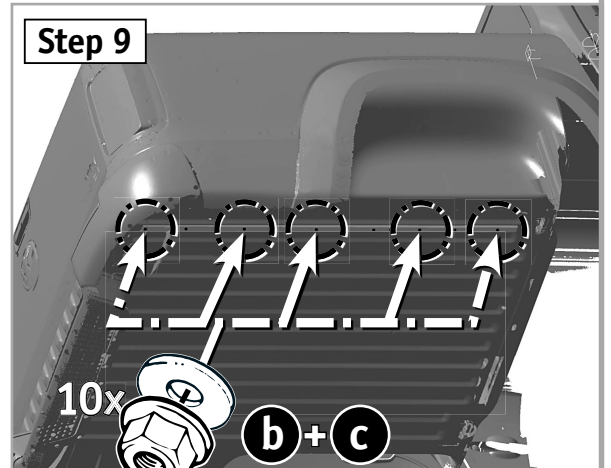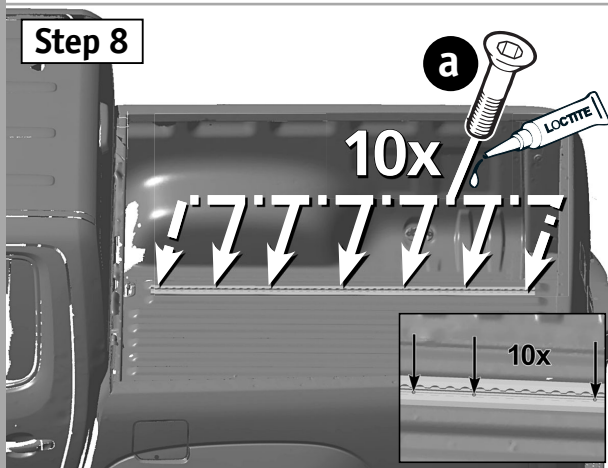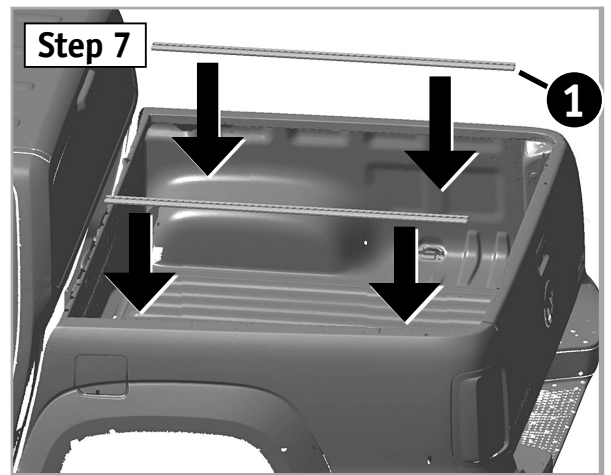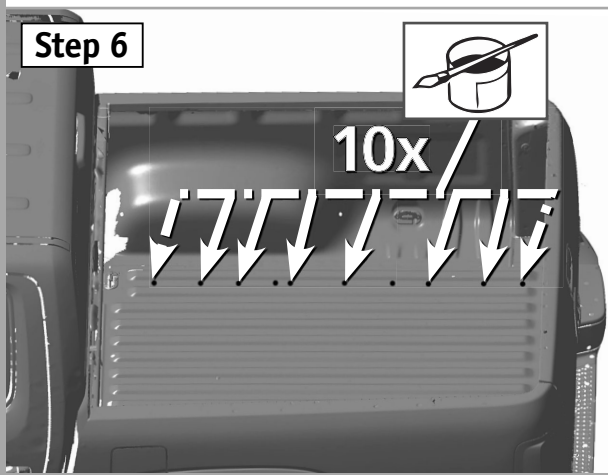

Article-Nr:  
600 03 09