








# Montageanleitung / Fitting Instruction















De instructie van de montage / Instruction convenable / Οδηγία συναρμολογήσεων / Istruzione adatta / Instrução apropriada / Fitting инструкция / 貼合指示 / Instrucción apropiada / Passande anvisning / Asennusohje

Revision 5 : 12.03.2008		Art.-Nr.	
Nissan Navara Pick - Up 4x4 Modell 2005	Tragebügel gerade hinten	Stahl schwarz	1665021




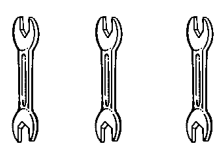




<b>Teileliste / Parts list / Lijst van onderdelen / Liste des pièces / Κατάλογος μερών / Elenco delle parti / Lista de peças / Список частей / Lista de piezas / 零件單</b>		
		
<b>a</b>	<b>b</b> Montageplatte M10 2 x	<b>c</b> Halter 2 x
		
<b>d</b> Schutzgummi I 2 x	<b>e</b> Schelle 1 x	<b>f</b> Gegenplatte Ø 11 2 x
		
<b>g</b> Z-Halter li, re je 1 x		

<b>Normteile / standard parts / standaard delen / pièces standard / Τυποποιημένα μέρη / Parti standard / Peças padrão / Стандартные части / Piezas estándares / 標準零件</b>						
--	--	--	--	--	--	--

						
<b>1</b> M6 x 20 3 x	<b>2</b> M8 x 30 2 x	<b>3</b> M10 x 30 2 x	<b>4</b> M10 x 55 2 x	<b>5</b> M 6 3 x	<b>6</b> M 10 4 x	<b>7</b> Ø 6,4 6 x
						
<b>8</b> Ø 8,4 6 x	<b>9</b> Ø 10,5 8 x	<b>10</b> Ø 6 3 x	<b>11</b> Ø 8 6 x	<b>12</b> Ø 10 2 x	<b>13</b> SW17 mm 6 x	<b>14</b> M8 x 25 4 x

<b>Benötigte Werkzeuge / Required tools / Vereiste hulpmiddelen / Outils requis / Απαραίτητα εργαλεία / Attrezzi richiesti / Ferramentas requeridas / Требуемые инструменты / Herramientas requeridas / 必需的工具</b>	
---	--

M 6: 10 Nm M 8: 25 Nm M10: 50 Nm			Ø 12 mm		10	13	17			
--	---	---	---------	---	----	----	----	--	---	---

