


















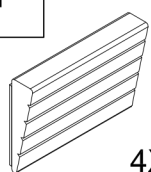


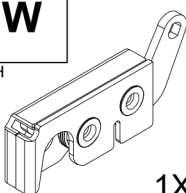
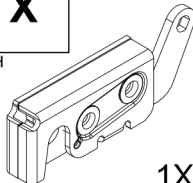


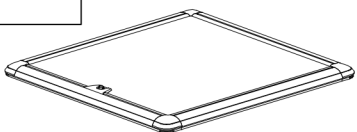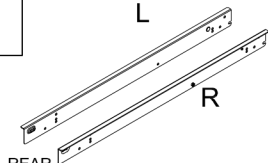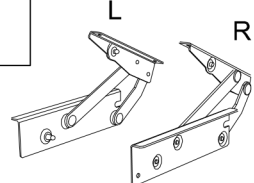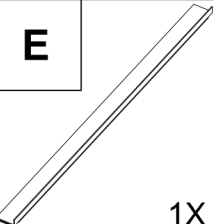


# ROAD RANGER®




## INSTALLATION INSTRUCTIONS K405

<b>A</b>  1X	<b>B</b>  1X	<b>C</b>  1X	<b>D</b>  2X		
<b>E</b>  1X	<b>F</b>  4X	<b>G</b> M8x25mm  4X	<b>H</b> M8 x16 Stainless Steel Washer  10X	<b>I</b>  2X	<b>J</b> M8 Nylock  8X
<b>K</b> M8 Stainless Steel Spring Washer  6X	<b>L</b>  2X	<b>M</b>  2X	<b>N</b>  2X	<b>O</b>  2X	<b>P</b> M6x18  12X
<b>Q</b> M6x13mm Zinc  12X	<b>R</b> M6x10mm  8X	<b>S</b>  4X	<b>T</b>  4X	<b>U</b> M10x24mm  4X	<b>V</b> M8 x16 Zinc Washer  4X
<b>W</b> RH  1X	<b>X</b> LH  1X	<b>Y</b> M5 Cable Bolt, Washer & Dome Nut  2X	<b>Z</b>  2X	<b>AA</b>  2X	

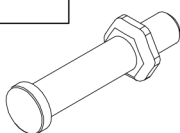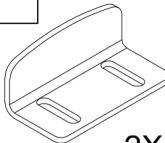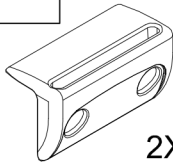**Note 1:** If at any stage of installation you find your sportlid to be an unacceptable fit please contact the manufacturer before continuing.

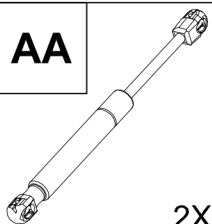**Note 2:** If required, use Under Rail Bed Liner only. **NOT FOR USE WITH OVER RAIL BED LINER!**

**Tools Required:**

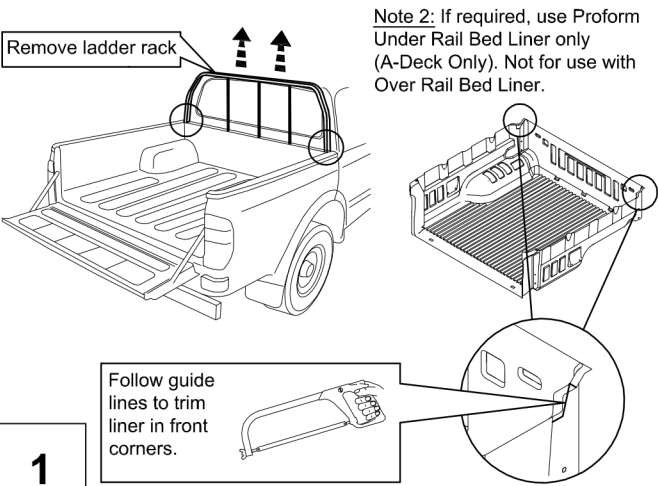
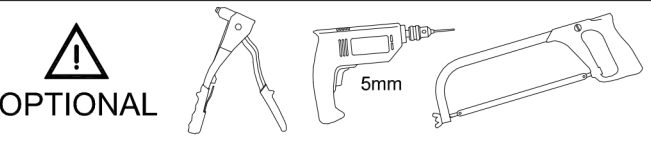
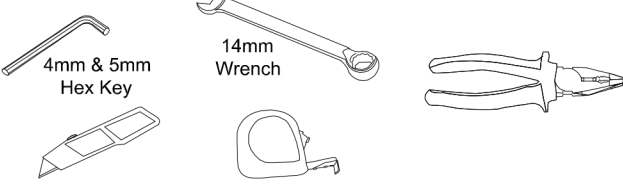




6b



A-Deck Only

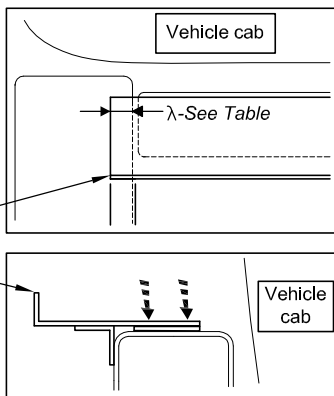
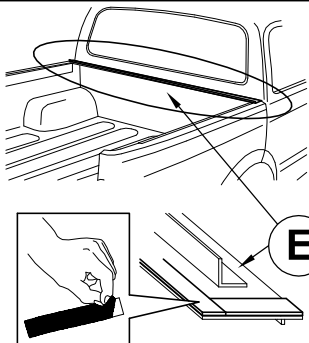
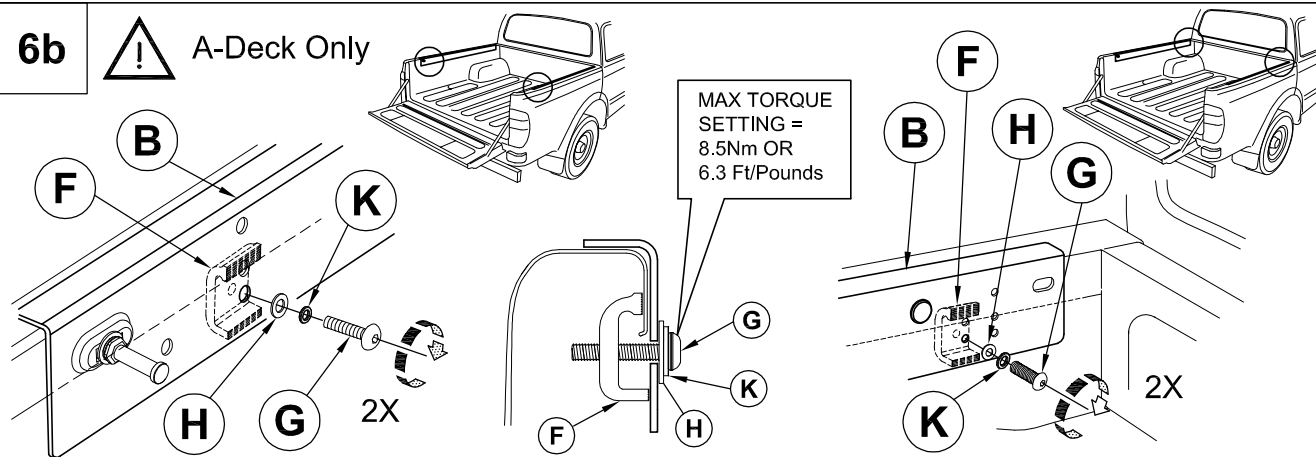


Vehicle Model	λ
Toyota Hilux Double Cab 2005 A-Deck N25S, N25T	23mm
Toyota Hilux Double Cab 2005 J-Deck	16mm

7



DO NOT apply below 15°C.  
Apply pressure to part. Adhesive is pressure activated.  
Allow 3hrs minimum to cure before installing lid

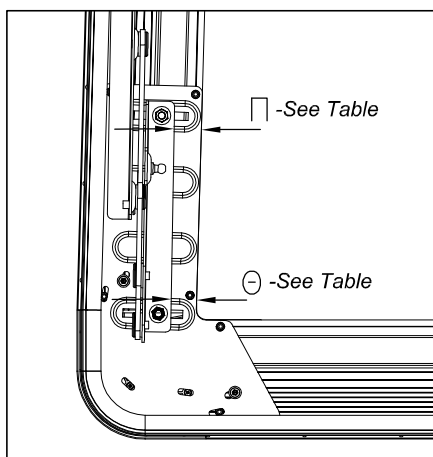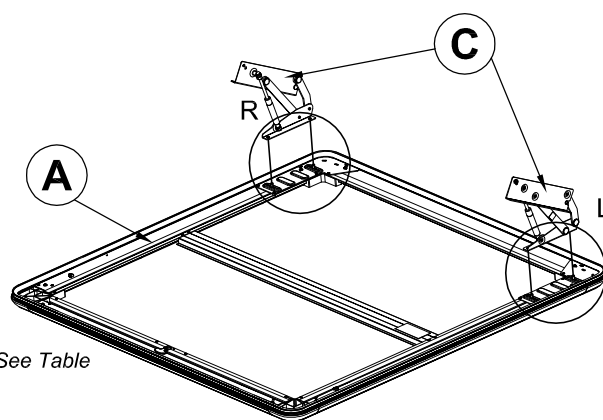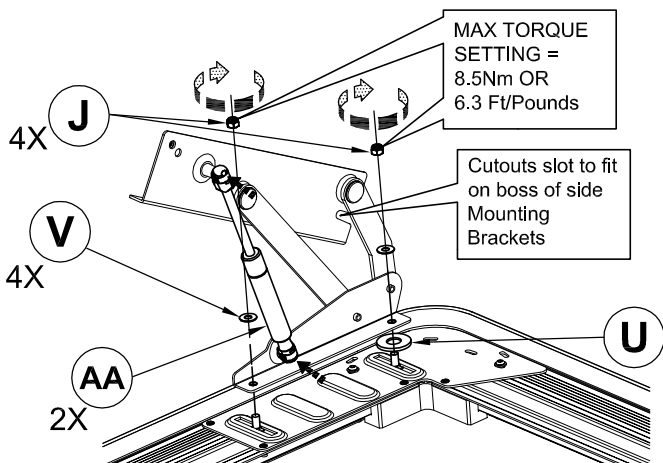

Vehicle Model	Π	Θ	Σ
Toyota Hilux Double Cab 2005 A-Deck N25S, N25T	31mm	31mm	-
Toyota Hilux Double Cab 2005 J-Deck	36mm	36mm	-

8

Fitting Kit Number

K405

Product

Revision







3

Date





23-10-2013

Page





3 of 6

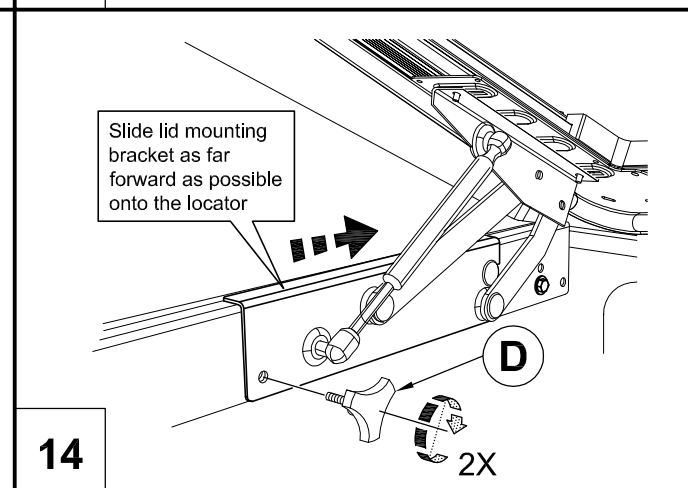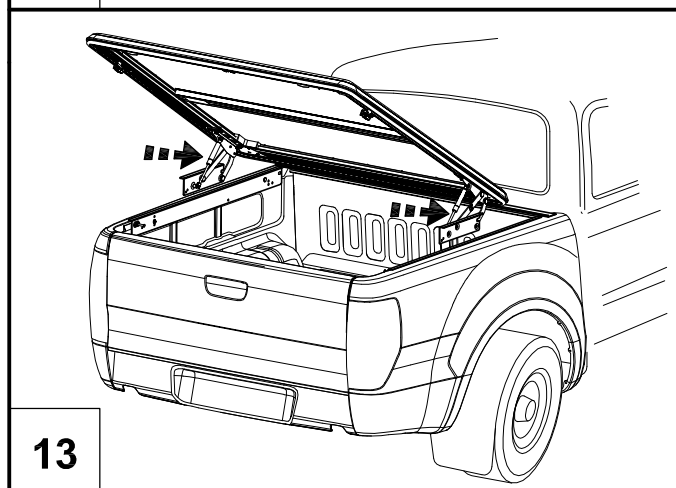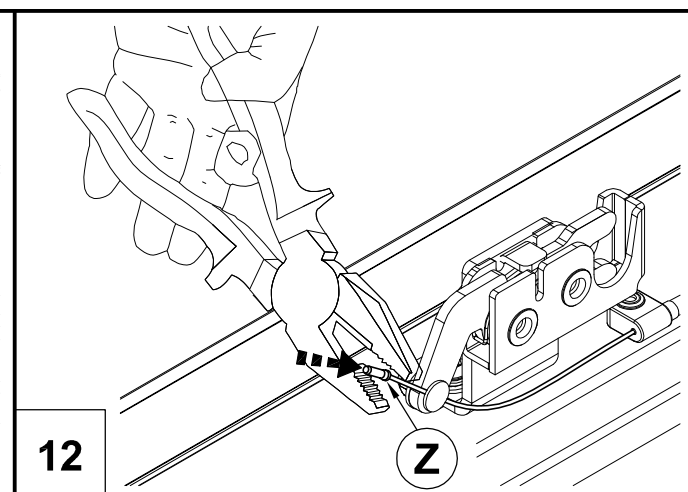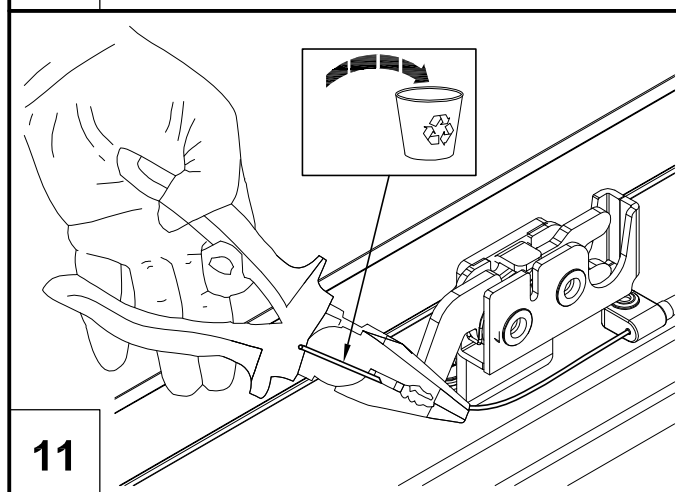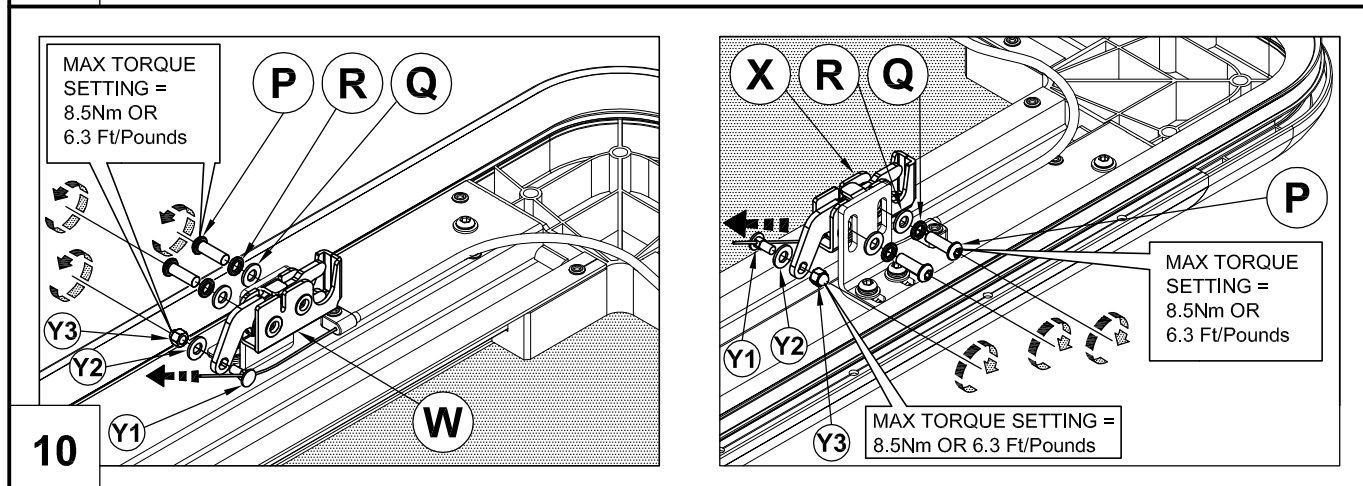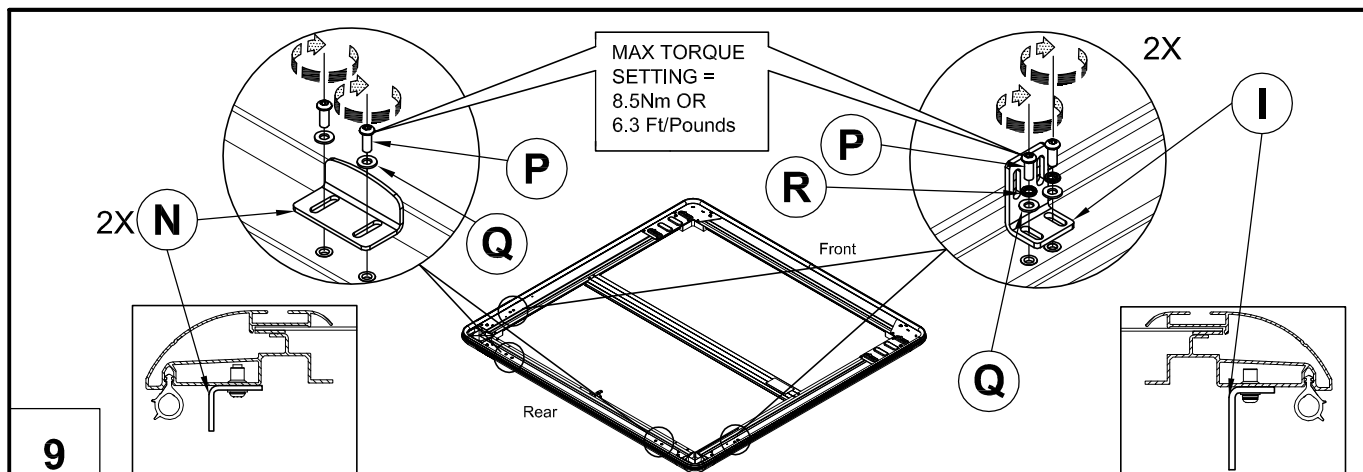





Fitting Kit Number	Product	Revision	Date	Page
K405		3	23-10-2013	4 of 6

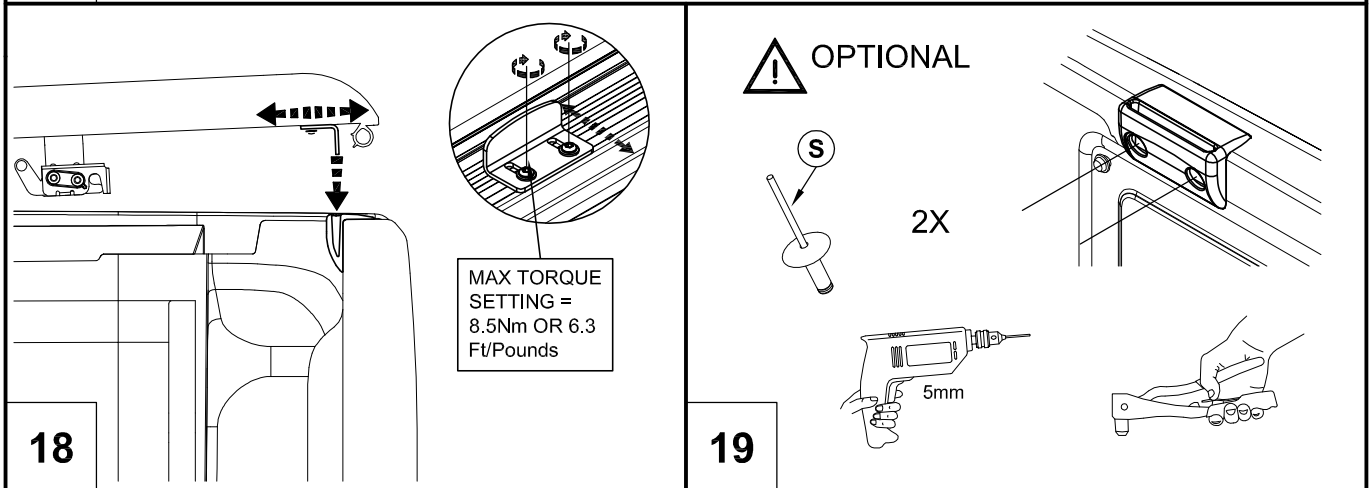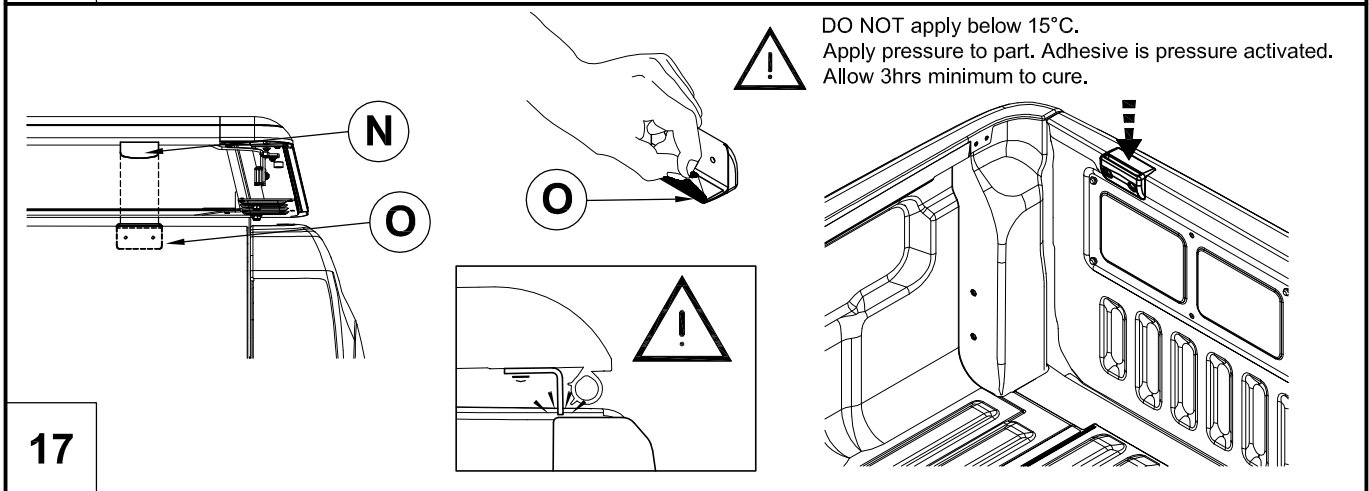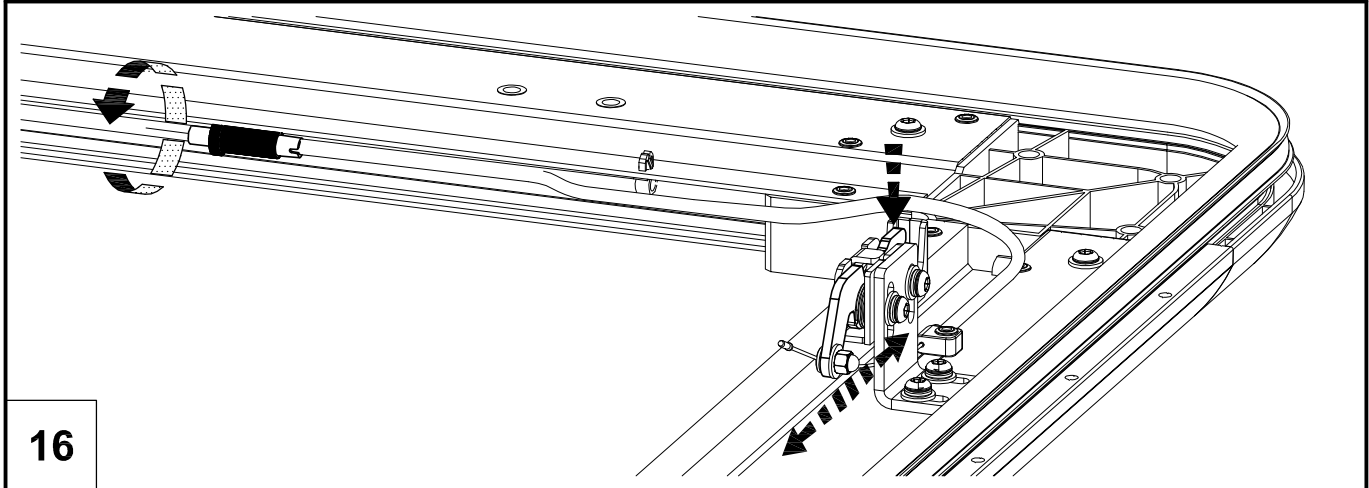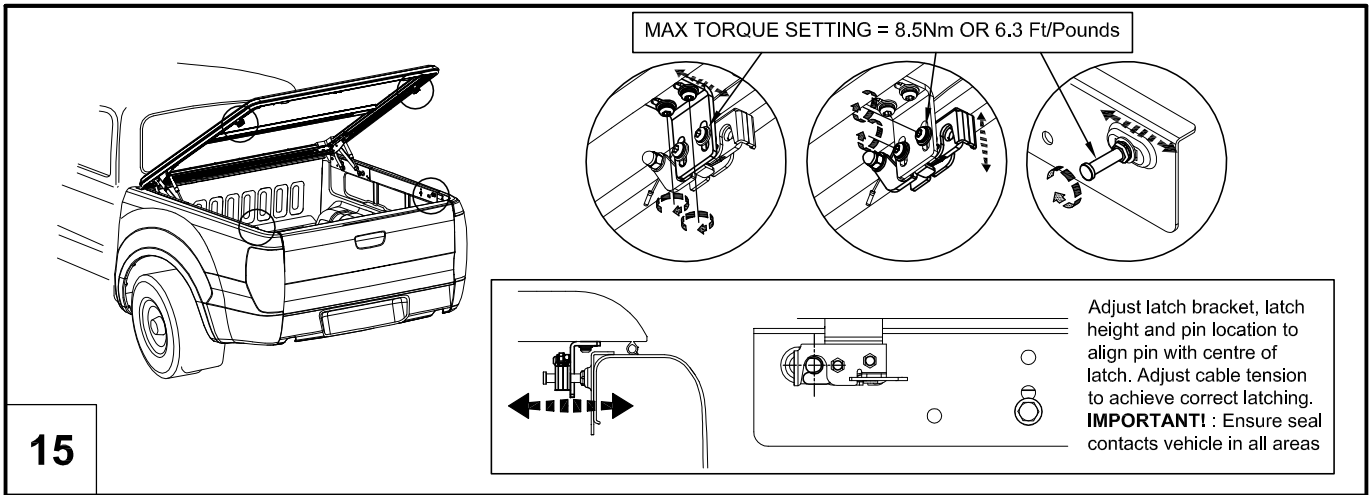


Fitting Kit Number	Product	Revision	Date	Page
K405		3	23-10-2013	5 of 6

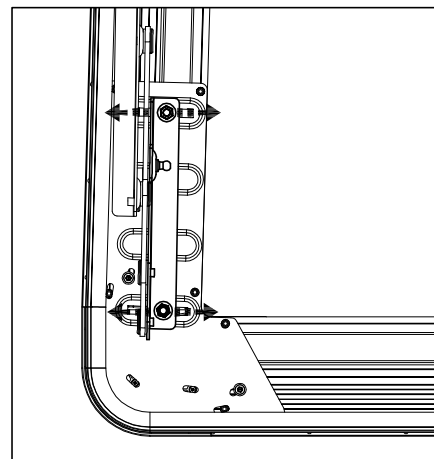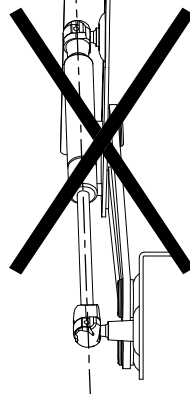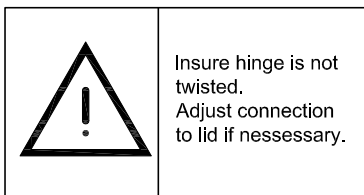




20

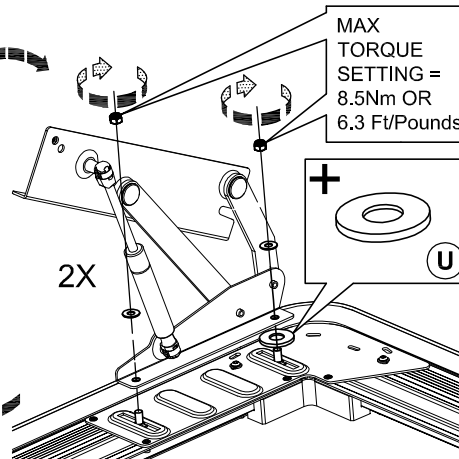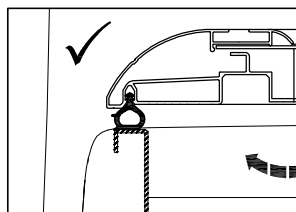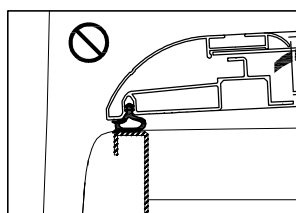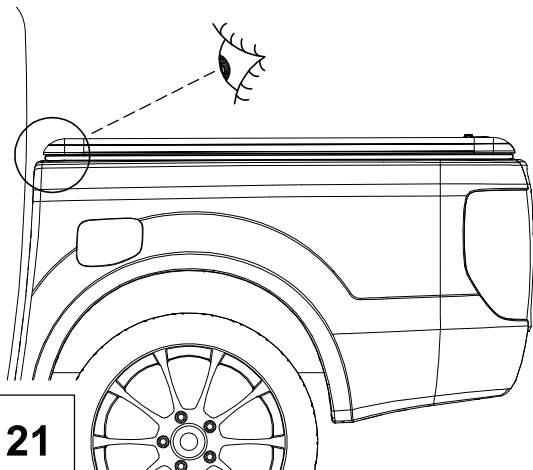

21

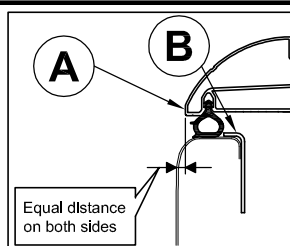

Ensure even spacing between lid & vehicle along the sides and back corners. Mounting brackets can be adjusted.

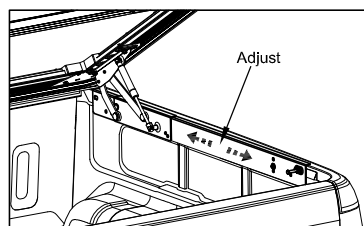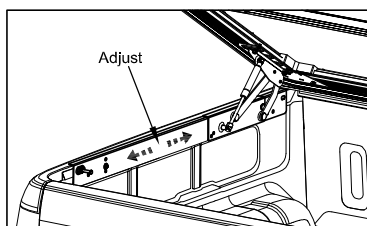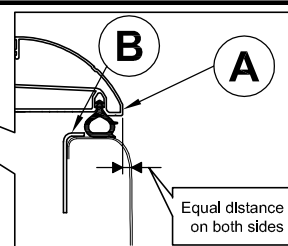

22

## ⚠ CAUTION!

- NEVER allow people or animals under the closed cover
- Do not place unsealed solvents or chemicals under the cover
- Do not stand or place heavy objects on the cover
- Do not open lid when under load.
- Close the cover before operating the vehicle
- Do not allow oil, solvents or chemicals to contact the cover
- Clean only with a mild detergent and water solution

After installation carefully and thoroughly clean all debris from the inside of the cargo box.  
**Retain these instructions for future reference**

Fitting Kit Number	Product	Revision	Date	Page
K405		3	23-10-2013	6 of 6