


**Schublade 1700 / Montagesatz mit 11E9290**  
**Drawer 1700 / Assembly-kit with 11E9290**  
**Tiroir 1700 / Assemble-kit avec 11E9290**



# **ASSEMBLY INSTRUCTION**

**Montageanleitung • Instructions de montage**

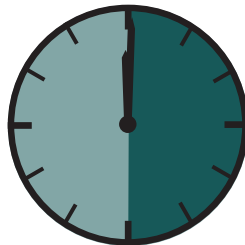

**90 Minuten**

**article-no:**  
006085 black Steel

**Revision 10: 07.10.2019**




# Schublade 1700 / Montagesatz mit 11E9290

## Drawer 1700 / Assembly-kit with 11E9290

### Tiroir 1700 / Assemble-kit avec 11E9290




#### Required tools / Benötigte Werkzeuge / Outils requis

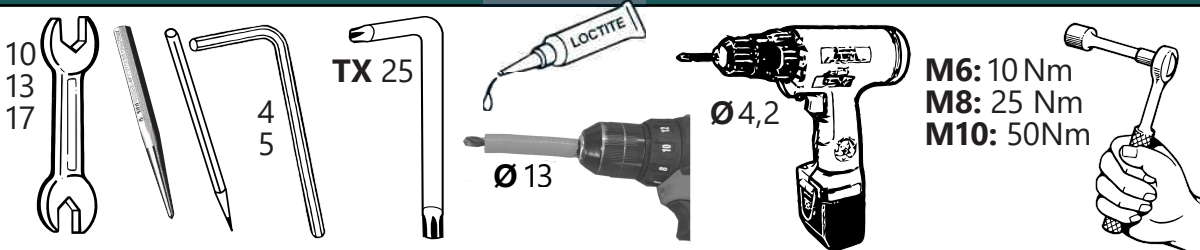

M6: 10 Nm  
M8: 25 Nm  
M10: 50Nm





#### Parts list/Teileliste/Lista de accesorios

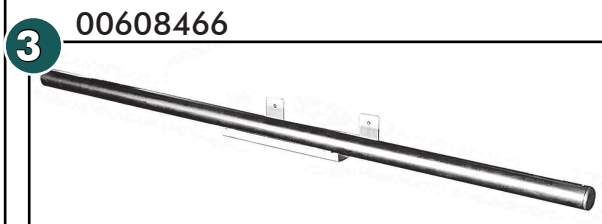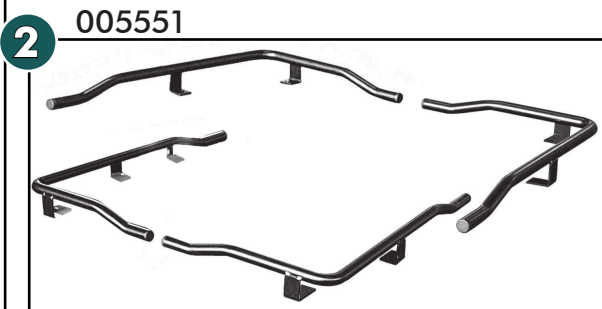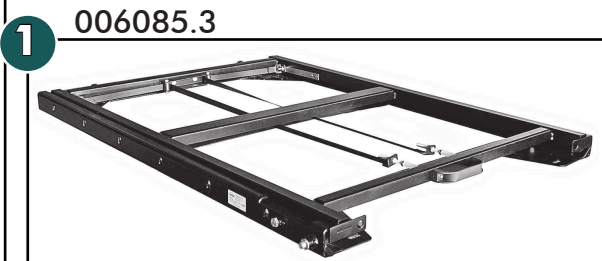



<b>a</b>		ø5,5x25; DIN 7976	<b>2x</b>
<b>b</b>		M6x30; DIN 7991	<b>14x</b>
<b>c</b>		M6x12; ~ISO7380	<b>10x</b>
<b>d</b>		M6x25; ~ISO7380	<b>8x</b>
<b>e</b>		M6x20; DIN 933	<b>2x</b>
<b>f</b>		M8x20; DIN 933	<b>2x</b>
<b>g</b>		M6 weld nut/Anschweißmutter/ soudure écrou	<b>10x</b>
<b>i</b>		ø6,4; DIN 9021	<b>6x</b>
<b>m</b>		M6; DIN 985 Zn	<b>2x</b>
<b>n</b>		M6; DIN 934 Zn	<b>14x</b>

**8** ø9; 005497 **2x**    **9** ø6,6; 005495 **14x**



#### Assembly-kit / Montagesatz / Assemble-kit

**11E9290**

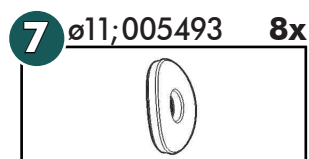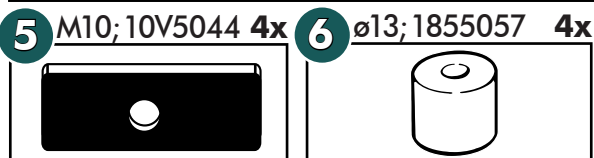


<b>o</b>		M10x60; DIN 933	<b>4x</b>
<b>p</b>		M10; DIN 934	<b>4x</b>

**article-no:**  
006085 black Steel

**Revision 10:** 07.10.2019



**Schublade 1700 / Montagesatz mit 11E9290**  
**Drawer 1700 / Assembly-kit with 11E9290**  
**Tiroir 1700 / Assemble-kit avec 11E9290**

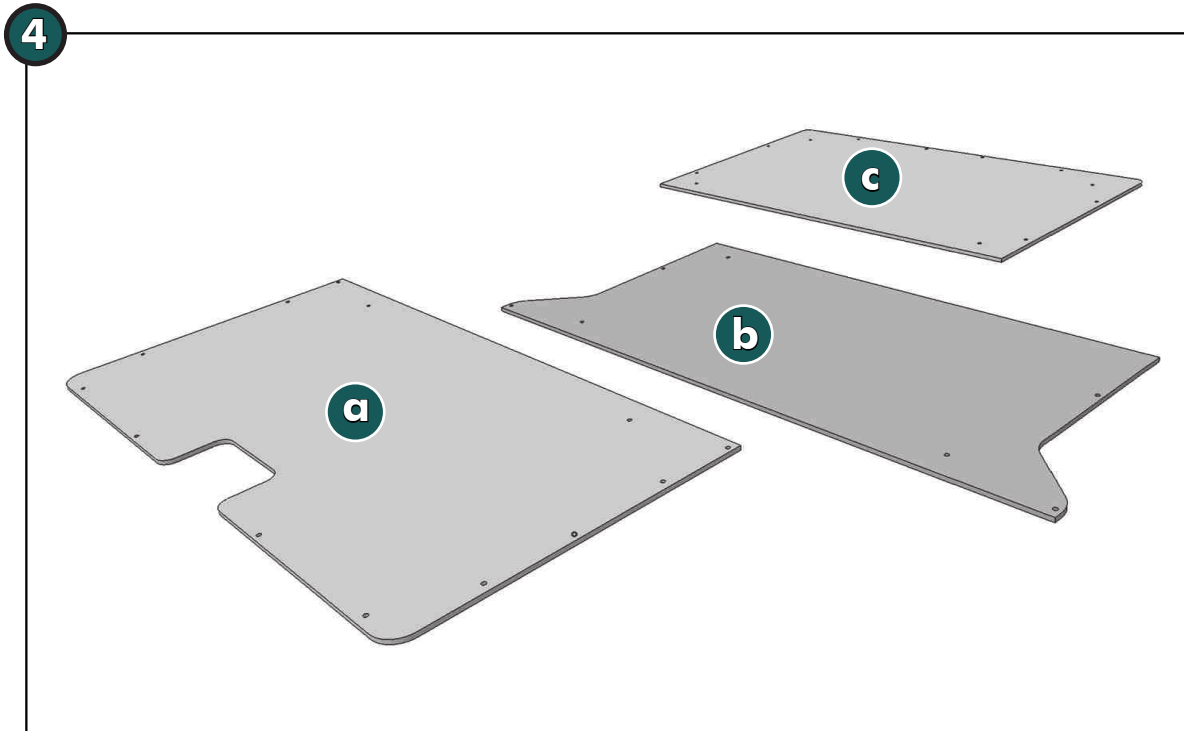









Artikel-Nr. Item-Nr. numéro d'article	KFZ Hersteller auto- motive manufacturer constructeur automo- bile	Bezeichnung designation désignation	Modell model modèle	Holzauflagen timber vehicle part exigences bois
1665690N	Nissan	Navara D40 King Cab NP300 Navara D23 King Cab <b>without bedliner*</b>	ab 2005 ab 2016	005566N
13R5690N	Nissan	NP 300 King Cab	04/2008	005566N
1935690N	Isuzu	D MAX Space Cab	2007	005566N
10V5690N	Mitsubishi	L200 Club Cab	2006	005566N
11K5690N	Madza	BT50 Freestyle Cab (L Cab) RAB Cab)	2006 / 2009	005566N
11K5690N	Ford	Ranger Superkabine (Extrakabine)	2009	005566N
15V5690N 15V5590N	Ford	Ranger Extrakabine (Extra Cab) Ranger Extra Cab (XC)	2012 2016	007770N 007788N
17W5690N	Mitsubishi	L200 Club Cab,(KJ0T)	2016+2019	007783N
17W5690N	Fiat	Fullback Extended Cab	2016	007783N
11E5490N	Toyota	Hilux Xtra Cab	2016	007790N

**\*without bedliner**  
**ohne Laderaumwanne !**  
**sans doublure de caisse ■**

**article-no:**  
006085 black Steel

**Revision 10: 07.10.2019**











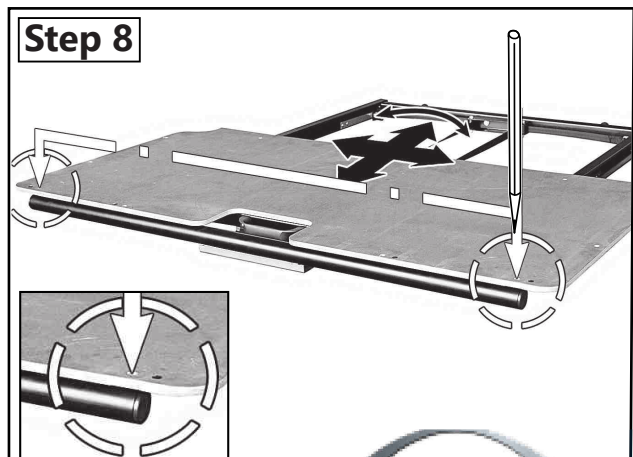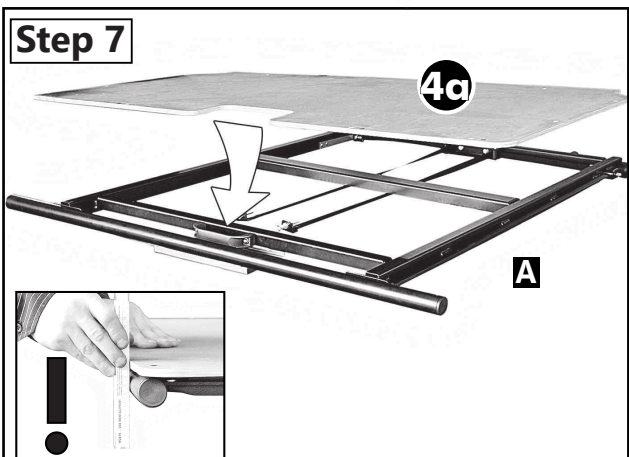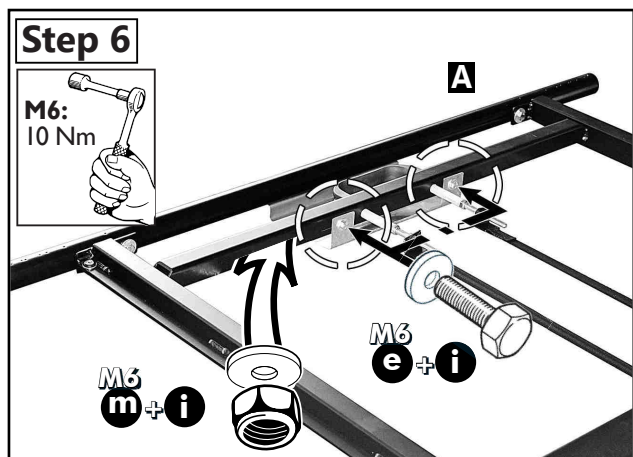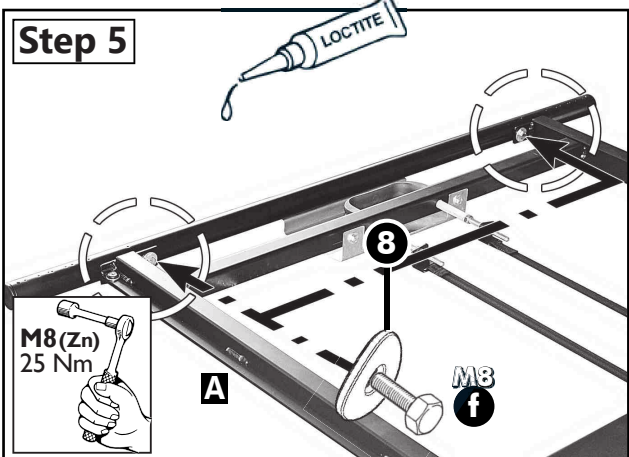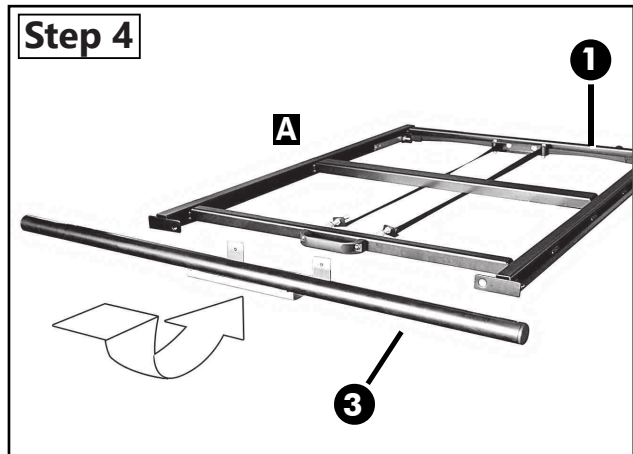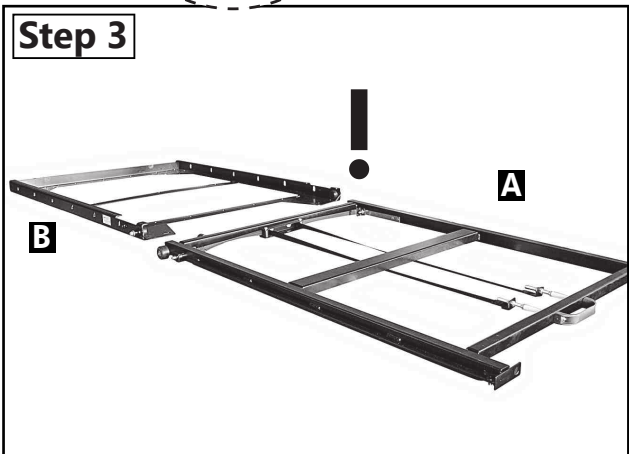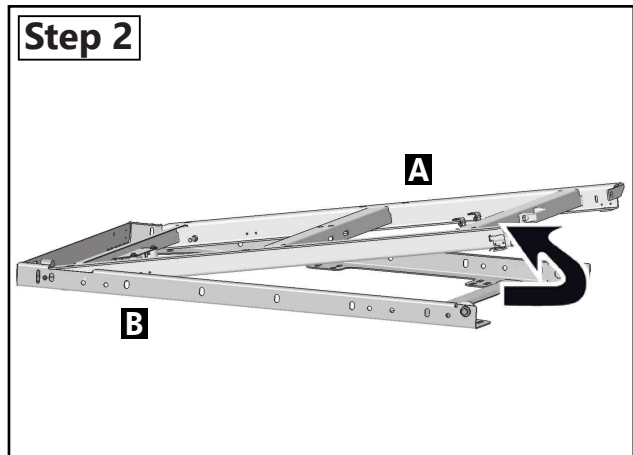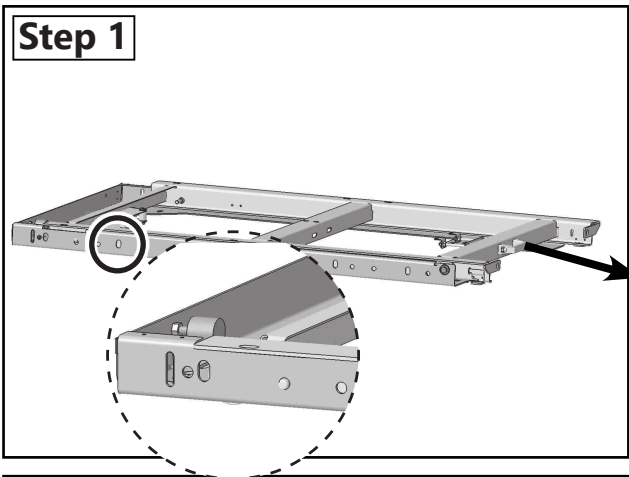

**article-no:**  
006085 black Steel

**Revision 10:** 07.10.2019



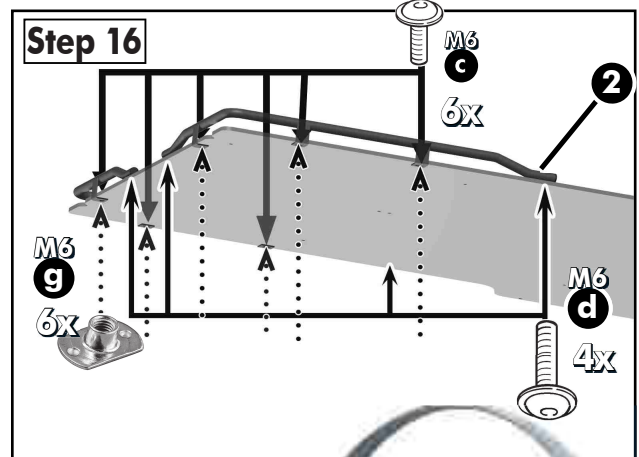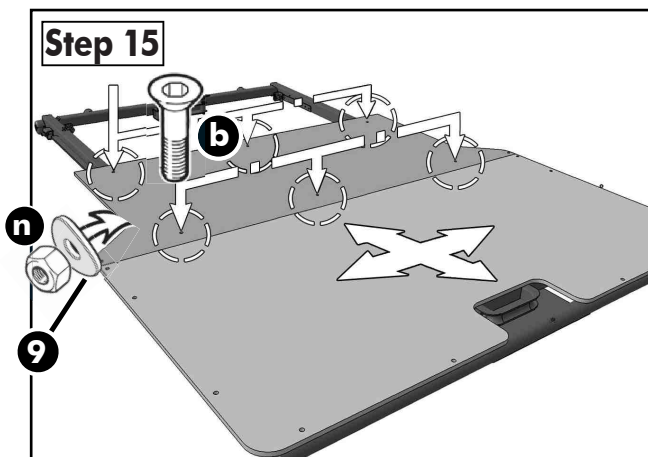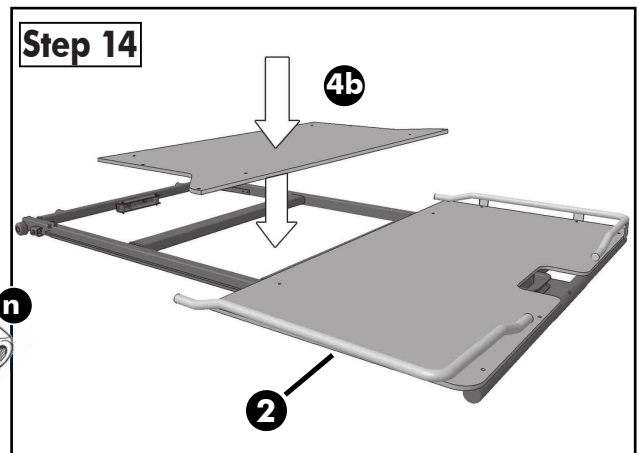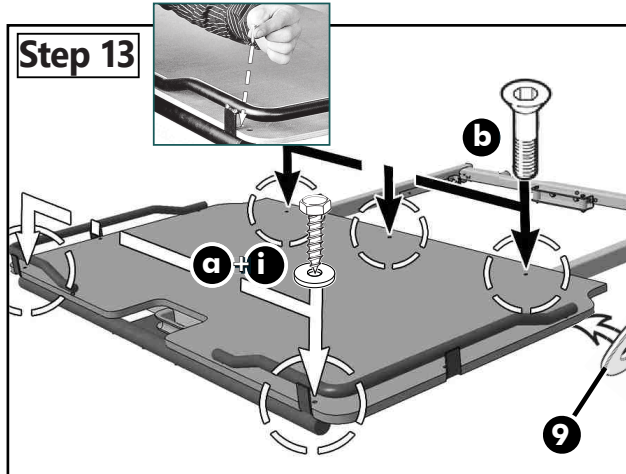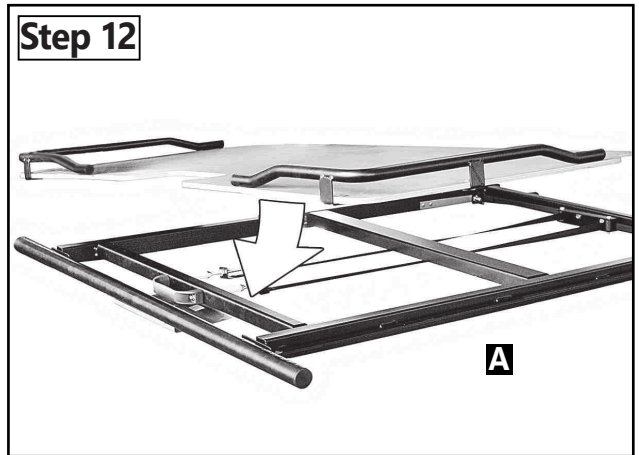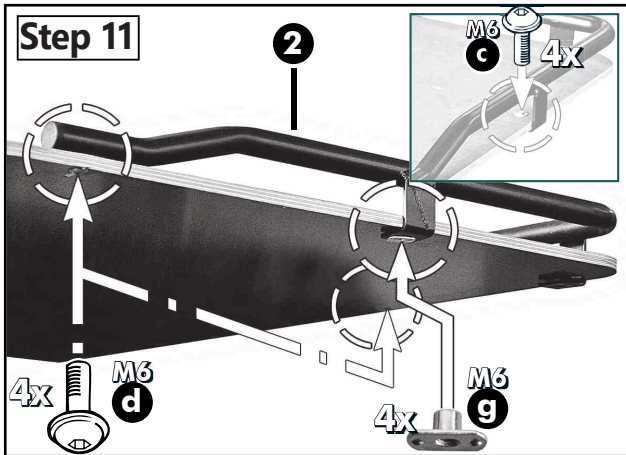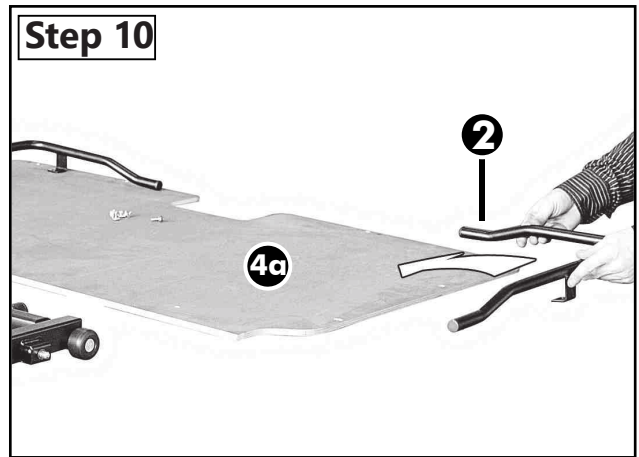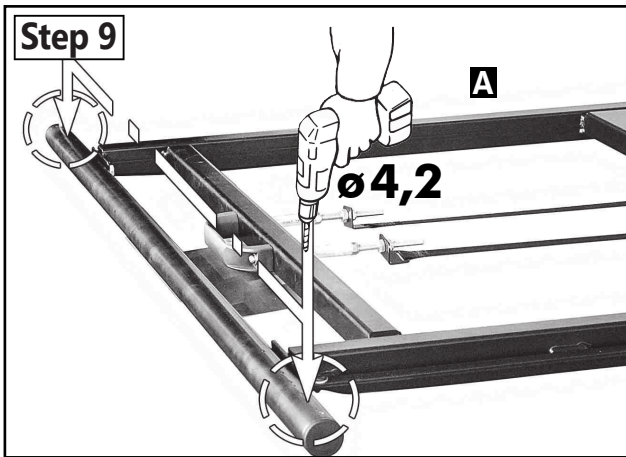

**article-no:**  
006085 black Steel

**Revision 10: 07.10.2019**

