

# FORD


# ROAD RANGER®

PICKUP-ACCESSORIES



## MONTAGEANLEITUNG

ASSEMBLING INSTRUCTION / INSTRUCTION DE MONTAGE

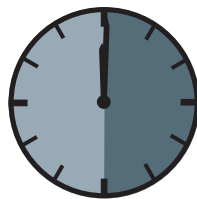

90 Minutes

Road Ranger-Bodenschiene / Road Ranger bottomrail / Road Ranger rail inférieur

FORD RANGER Extra Cab 2012 ->

Article-Nr: 77122

Road Ranger  
Dr. Höhn GmbH  
Künzelsauer Str. 13  
D-74653 Ingelfingen

Phone: +49(0) 7940 / 92020  
Fax: +49(0) 7940 / 920245




E-Mail: roadranger@hoehn.de  
www.hoehn.de

WWW.ROADRANGER.DE

# ROAD RANGER®


## PICKUP-ACCESSORIES

### Teileliste / Parts list / Lista de accesorios

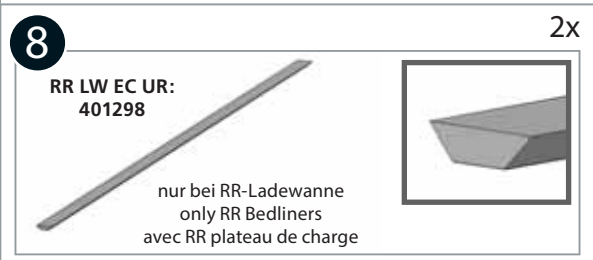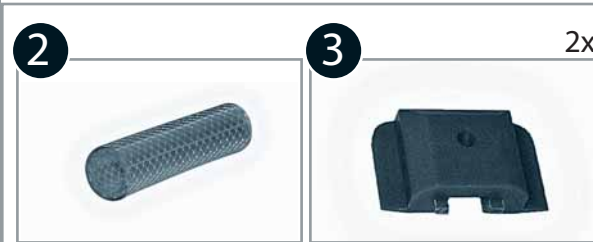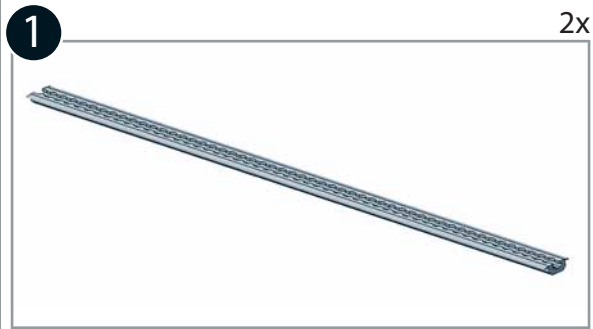


<b>a</b>		M5x30; DIN 7991	26x
<b>b</b>		M5; ähnlich DIN 6923	26x
<b>c</b>		Ø 5,3; DIN 9021	26x

### 11A5101

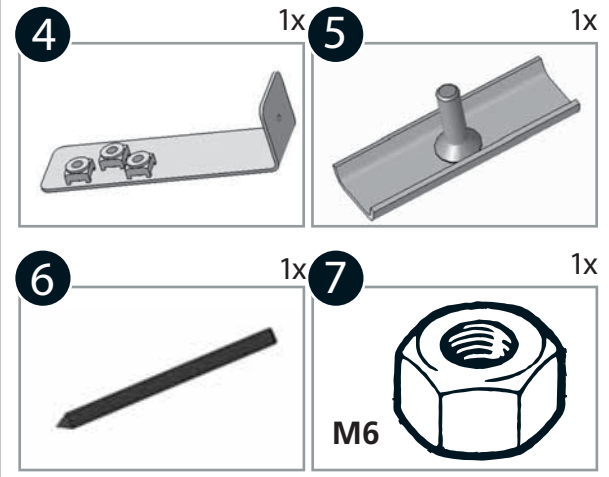

### Benötigte Werkzeuge / Required tools / Outillage requis

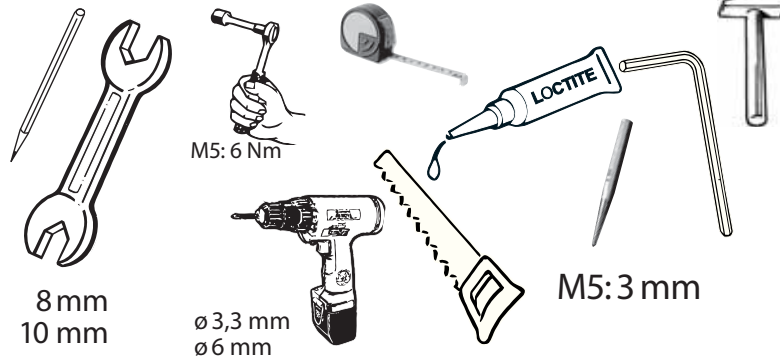

Road Ranger-Bodenschiene / Road Ranger bottomrail / Road Ranger rail inférieur

FORD RANGER Extra Cab 2012 ->


Article-Nr: 77122

WWW.ROADRANGER.DE


**Step 1** mit Ladewanne / only Bedliners /  
avec plateau de charge !



**Step 2**

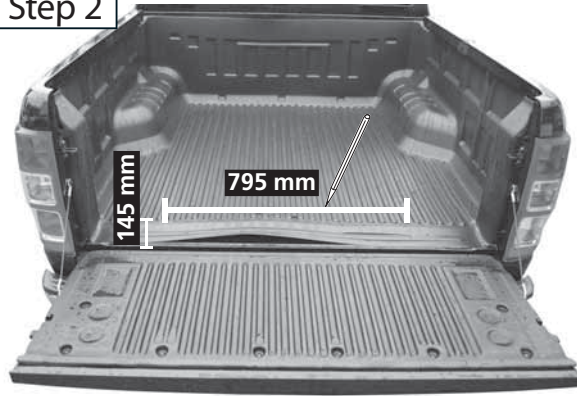










**Step 3**

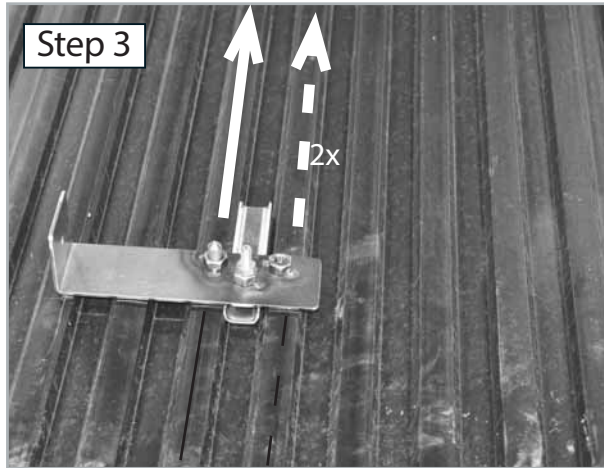

nur bei RR-Ladewanne  
only RR Bedliners  
avec RR plateau de charge

**Step 4**

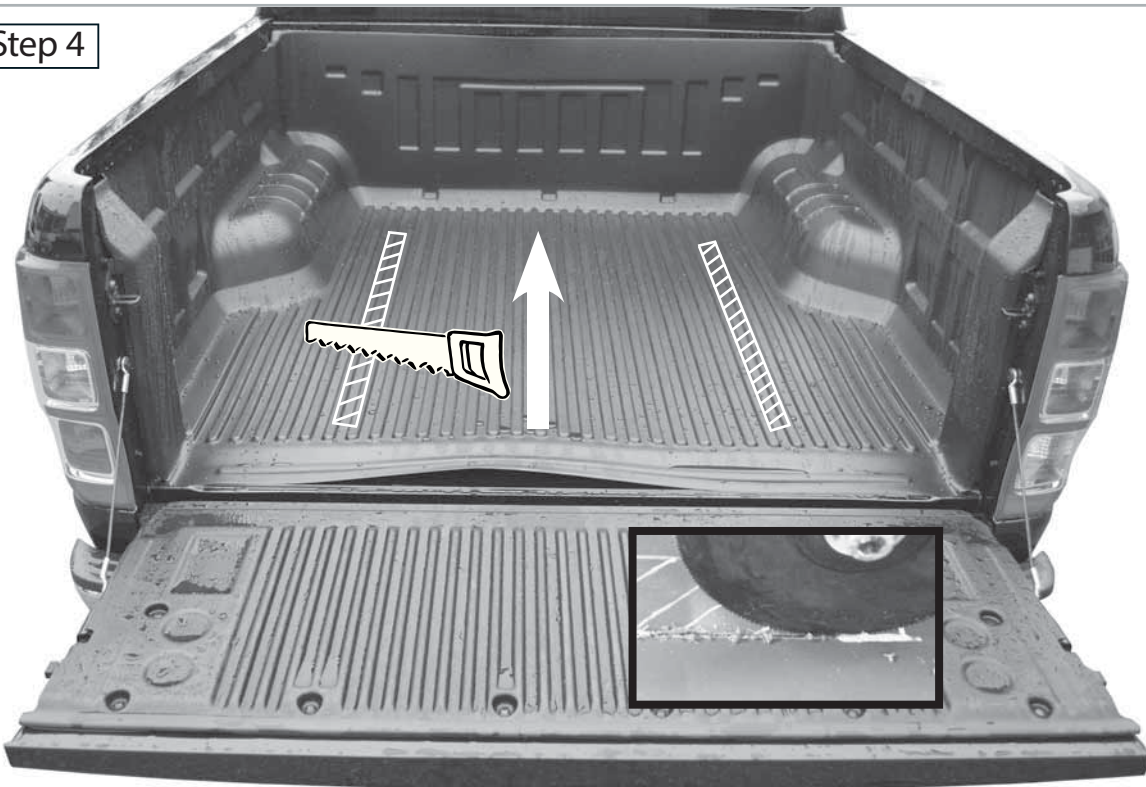

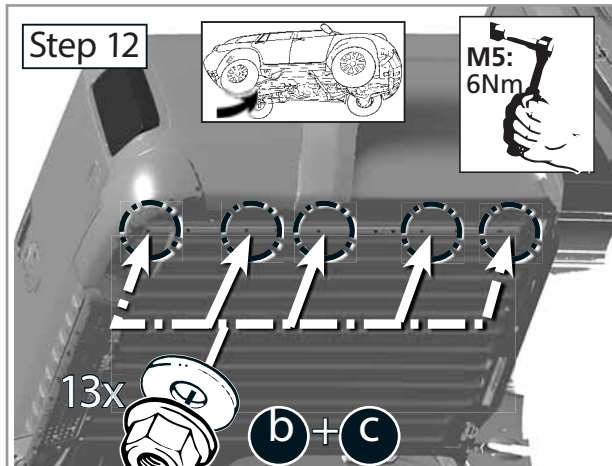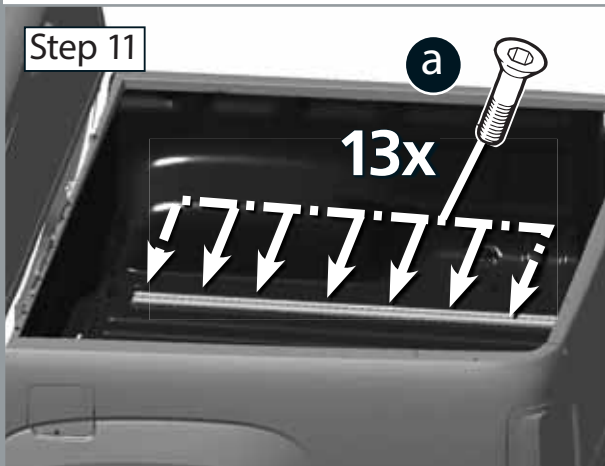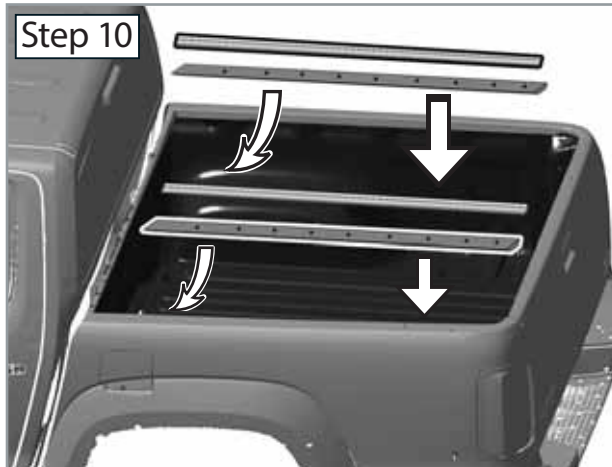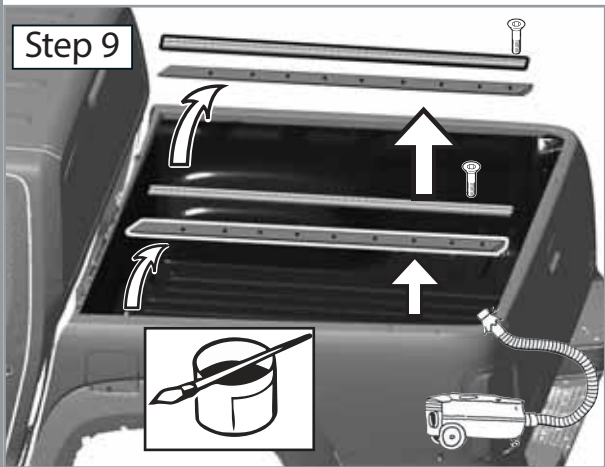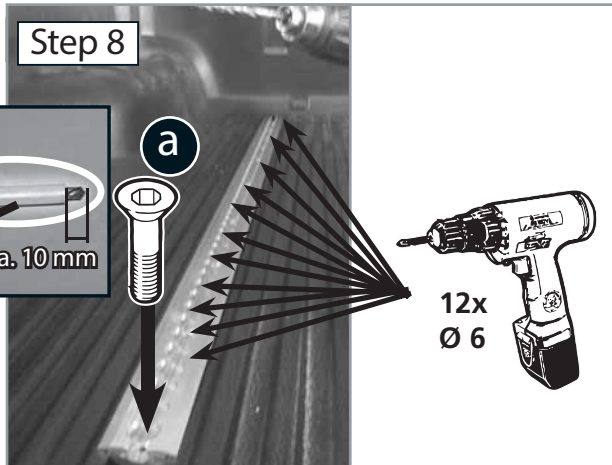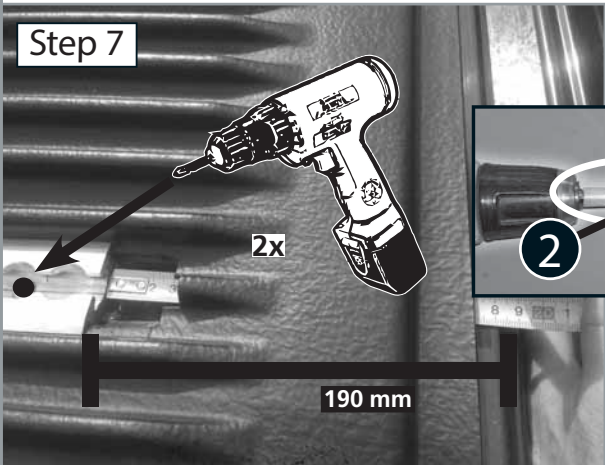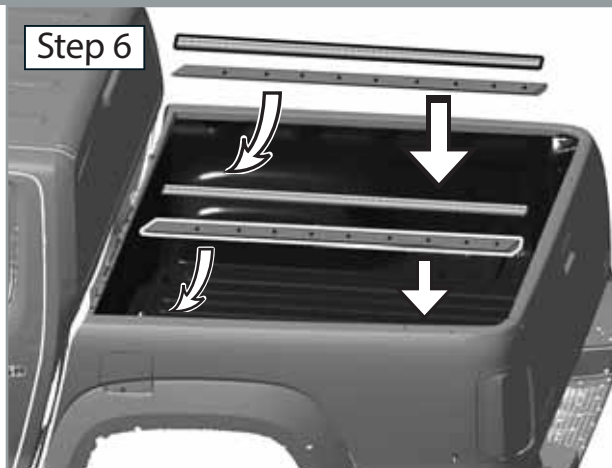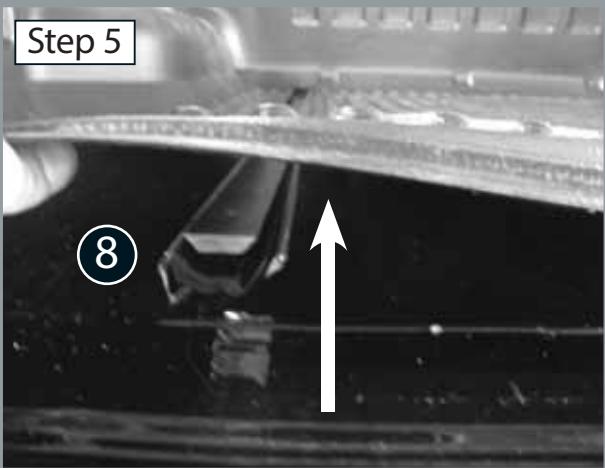


FORD RANGER Extra Cab 2012 ->  
Article-Nr: 77122

WWW.ROADRANGER.DE

Step 13

3

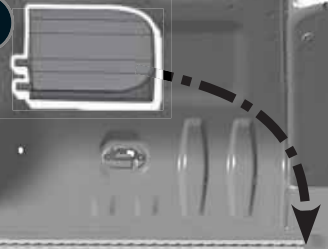

Step 14

